



Discovery RC T-REX Radio Controlled Action Dinosaur Instruction Manual

[Home](#) » [Discovery](#) » [Discovery RC T-REX Radio Controlled Action Dinosaur Instruction Manual](#) 

Contents

- [1 Discovery RC T-REX Radio Controlled Action Dinosaur](#)
- [2 RADIO CONTROLLED ACTION DINOSAUR](#)
- [3 REMOVE THE REMOTE AND RC T-REX FROM THE PACKAGING](#)
- [4 ATTACH THE TAIL](#)
- [5 CLEANING](#)
- [6 BATTERY WARNING](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



 
Discovery RC T-REX Radio Controlled Action Dinosaur



RADIO CONTROLLED ACTION DINOSAUR

Thank you for your purchase of the Discovery RC T-Rex Radio Controlled Action Dinosaur! Have fun with a T-Rex you control. Be sure to use this product in a safe, traffic-free environment. Please read all instructions and warnings on this sheet prior to use. Keep this instruction sheet as it contains important information for future reference.

FEATURES

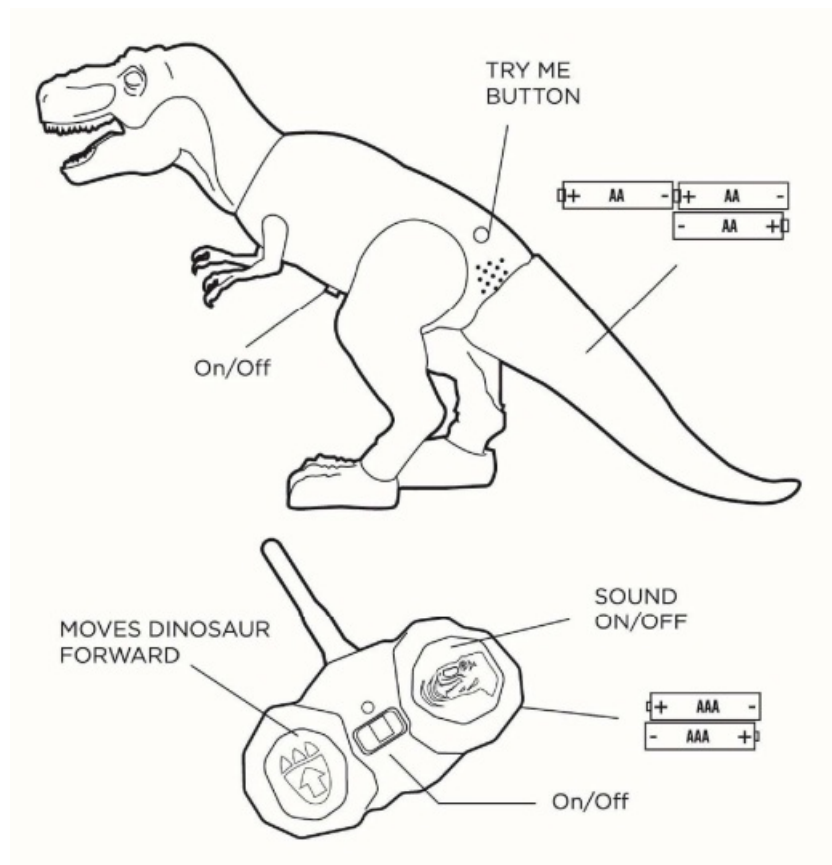


CONTENTS


- RC T-Rex
- Infrared Remote Control

REMOVE THE REMOTE AND RC T-REX FROM THE PACKAGING

 Remove the remote by turning counterclockwise the plastic key lock.

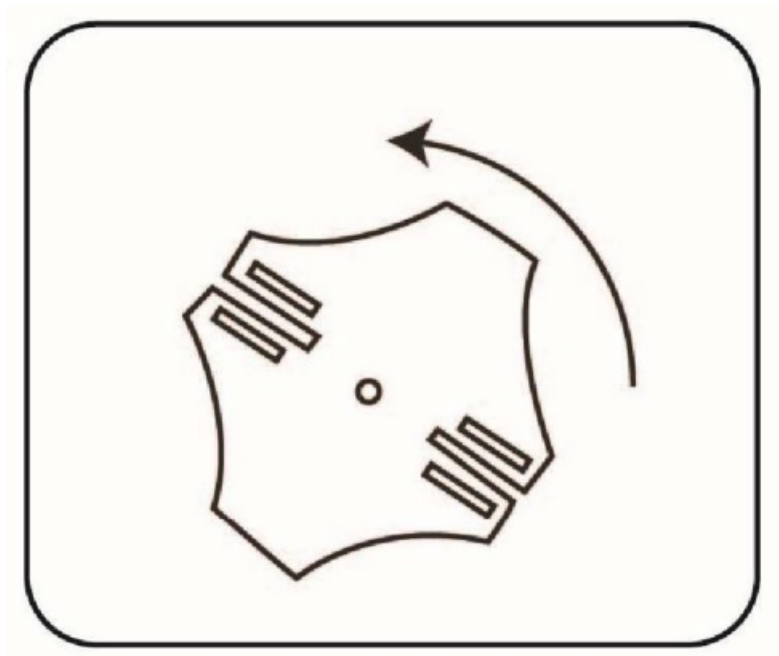


 Using a Philips head screwdriver, unscrew the T-Rex RC from the insert.

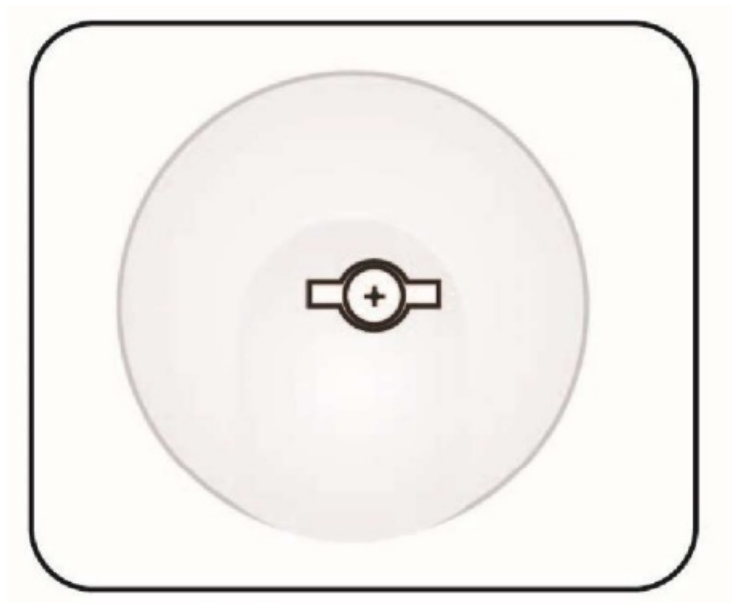

ATTACH THE TAIL

 - Locate the white cord connected to the dinosaur's body.
- Note the recessed area on the inside of the tail. Continued on back.
- Coil the white cord into the recessed area of the tail to close the gap between the tail and body of the dinosaur.
- Align the recessed area of the tail to the body and press the tail into the body until it clicks.

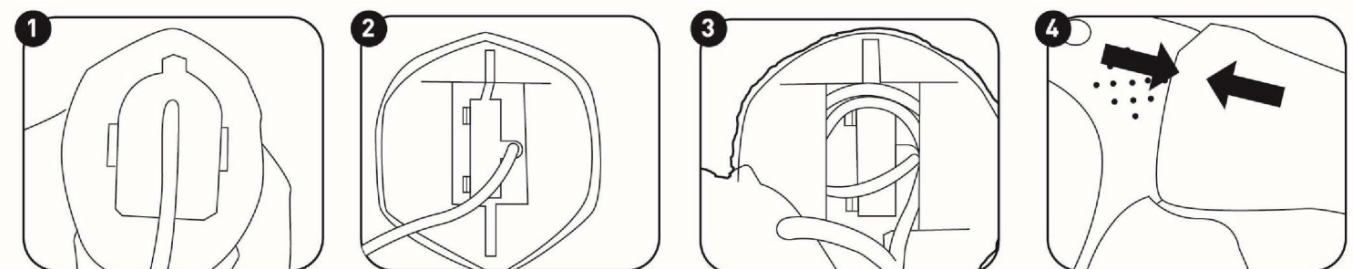

- Using a screwdriver, remove the screw from the battery compartment.

- Open the battery compartment door and insert 2 “AAA” batteries (Fig. 1).
- Using a screwdriver, attach the battery compartment door back onto the remote.

INSTALLING THE DINOSAUR’S BATTERIES

FOR BEST RESULTS, REPLACE DINOSAUR BATTERIES UPON PURCHASE.

- Locate the battery compartment located on the side of the tail.
- Using a screwdriver, remove the screw from the battery compartment.
- Open the battery compartment door and insert 3 “AA” batteries (Fig. 2).
- Using a screwdriver, attach the battery compartment door back onto the dinosaur’s tail.

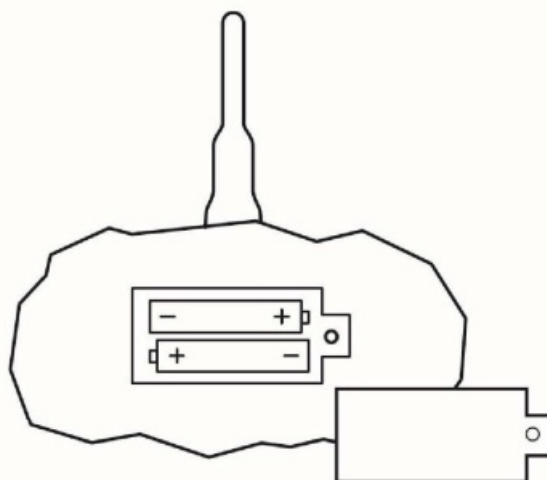 


Fig. 1
INSERT 2 “AAA” BATTERIES

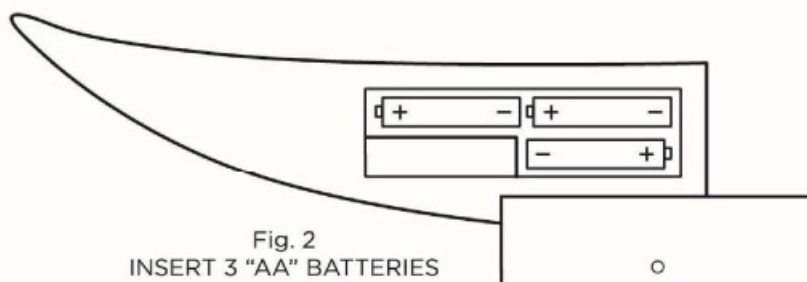 


Fig. 2
INSERT 3 “AA” BATTERIES

CLEANING

- Use a soft and damp sponge only. Never drop water or any other liquid onto the Dinosaur.
- Do not immerse the product into the water for cleaning.

STORAGE

- Remove the batteries when the product is not in use for a long period of time.
- Put the product into its package when not in use and store it neatly in a dry, cool location protected from direct sunlight.

SAFETY WARNINGS PLEASE READ BEFORE USE

- Never aim or shoot the balls at other people.
- Adult supervision is required.

 
 
BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in a fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep this package for future reference.

WARNING

- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Inspect the product before every use. If the product appears damaged in any manner, discontinue use and discard it immediately.

Documents / Resources

	Discovery RC T-REX Radio Controlled Action Dinosaur [pdf] Instruction Manual 01049A, 2AVX801049A, RC T-REX Radio Controlled Action Dinosaur
	Discovery RC T-REX Radio Controlled Action Dinosaur [pdf] Instruction Manual JL2022C49, PCJJL2022C49, RC T-REX Radio Controlled Action Dinosaur, RC T-REX, Radio Controlled Action Dinosaur