



disgo Tablet 7900 Android 2.2 10.1” Touch screen User Guide

[Home](#) » [Disgo](#) » disgo Tablet 7900 Android 2.2 10.1” Touch screen User Guide 

Contents

- [1 disgo Tablet 7900 Android 2.2 10.1” Touchscreen](#)
- [2 Accessories](#)
- [3 Getting started](#)
- [4 Using MicroSD card](#)
- [5 Using HDMI](#)
- [6 Technical features](#)
- [7 Recycling](#)
- [8 Troubleshooting](#)
- [9 Battery statement](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



disgo Tablet 7900 Android 2.2 10.1” Touchscreen



Accessories

Inside the disco Tablet 7900 packaging, you will find:

- 1 x 10.1" Tablet
- 1 x dual-power adapter
- 1 x User manual
- 1x 2GB MicroSD card (Inserted into 'SD1')

Getting started

1. Appearance

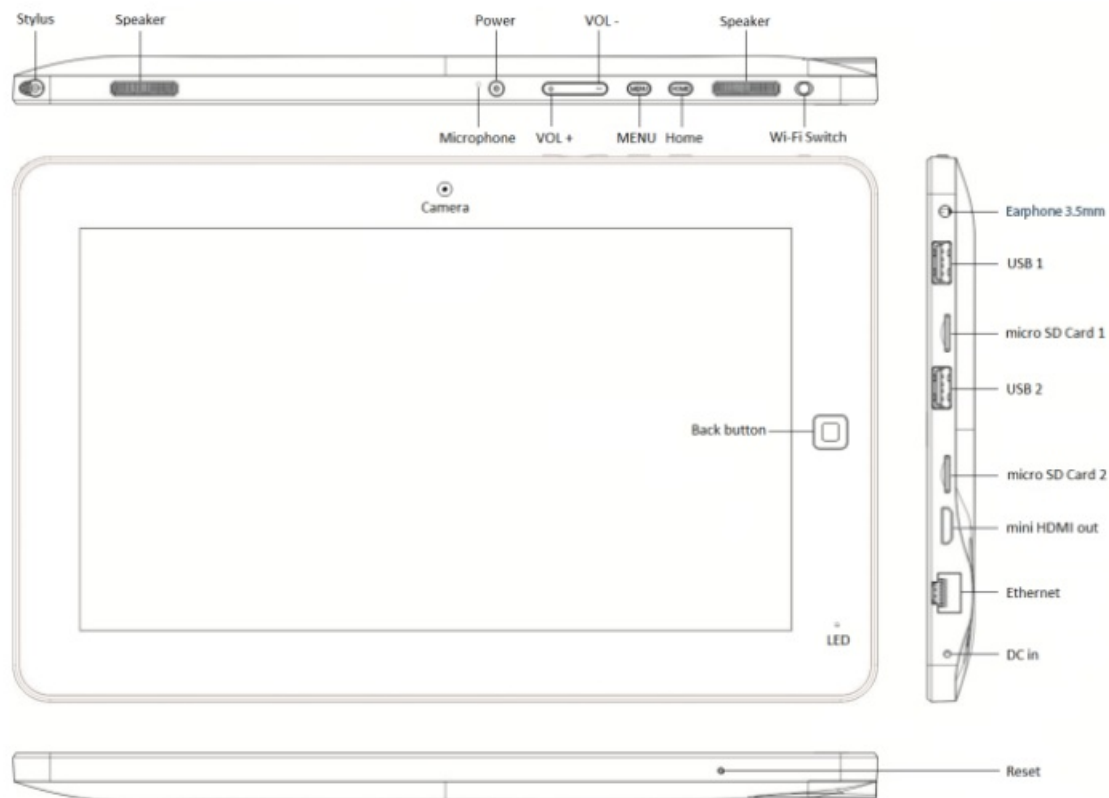 


Fig 2.1

- Button descriptions
- Power On/Off
- When the tablet is switched off, press and hold this button to turn it on. To power off the tablet, press and hold this button to activate the shut-down window.
- VOL + Increase the volume.
- VOL – Decrease the volume.
- Menu Several options are listed in this
- Menu. Press this button to display the menu bar.
- Home Returns user to desktop
- Wi-Fi Activate/deactivate Wi-Fi connection Switch
- Back Returns user to previous screen Reset Use this button to force a shutdown of the device. If the device freezes it may require a reset.

2. Using the tablet

- Press and hold the Power button for 2 seconds in order to turn on the device.
- When the tablet is turned on for the first time, you will need to calibrate the touch screen. Please follow the procedures on the screen to complete this process.
- To use the pre-installed apps, simply touch the relevant icon.
- Pressing the Power button will activate/deactivate sleep mode when the device is turned on.
- Press and hold the Power button to activate the power-off screen.
- **The widget desktop (Fig 2.2.1).**



- The applications desktop (Fig 2.2.2).



3. Charging the tablet

- Plug the adapter to the mains and the DC connector into the DC-in jack as shown in figure 2.1. A full charge takes up to 4 hours. When charging the tablet, the LED indicator will be red.

4. Toolbar.

(See Fig 2.4 for more information)

- **Home**

Touch the

Home icon to return to the desktop. This action will not close the applications that are open.

- **SD card indicator**

Displays the status of the MicroSD card upon insertion or removal. Please refer to details in section 4

- **WiFi indicator**

Displays the connection status of the

- **Wi Fi. Battery indicator**

Shows the charge status of the

- **battery Time**

Shows current time.

- **Vol**

Decreases volume.

- **Vol**

Increases volume.

Menu

Shows application options on the bottom of the screen.

Back

Returns to previously viewed screen

Fig 2.4



5. Manage your desktop

- Press the Home icon on the top left of your toolbar to return to the main desktop.
- In order to delete an icon or widget from the desktop, touch and hold the icon / widget until the dustbin icon appears on the right side of the screen. Drag the icon / widget onto the dustbin until the icon / widget turns red. Release the icon / widget to delete.
- **Note:** The items being deleted are shortcuts only and are not actual applications. These applications can be accessed again by creating a new shortcut.
- To reinsert a new or previously deleted icon / widget onto the current desktop, click Menu and choose Add Application/Widget.

6. Using basic applications

My Device is a user friendly application that provides basic file directory operations.

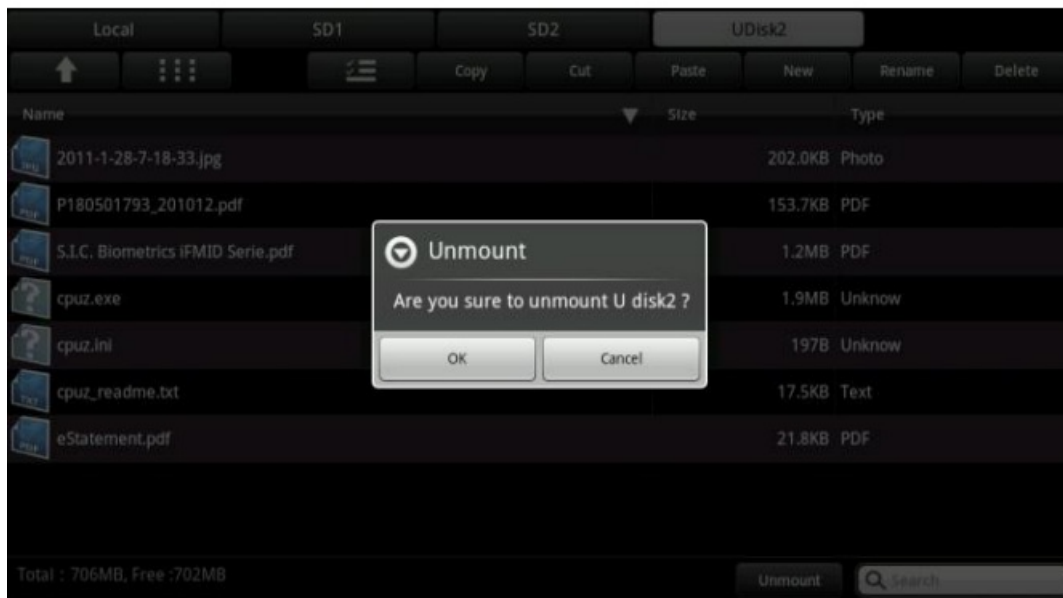 


Fig. 2.6.1

- **Local/SD1/SD2/**
- **UDisk1/UDisk2**

This tab indicates which file system directory you are using.

- **Back**

Returns to parent directory.

- **Grid/List view**

Switches between grid and list view of the current directory.

- **Select/Unselect**

To access a file, double tap the selected file . You can also use this icon to unselect a file.

- **Copy**

Copy the selected file.

- **Cut**

Remove the selected file.

- **Paste**

Paste the copied or cut file to current location.

- **New**

Create new folder.

- **Rename**

Rename a file or folder.

- **Delete**

Delete a file or folder.

- **Unmount**

Unmounts external flash devices. Please remember to unmount the flash drives before physically removing them. Improper removal of the flash drives may cause data loss . Please refer to details in section 4

- **E Mail**

The system will try to automatically set up the Google Gmail account servers for the chosen Gmail logins . It is also possible to setup a mail account manually. Please refer to your email provider for details on how to setup your account manually.

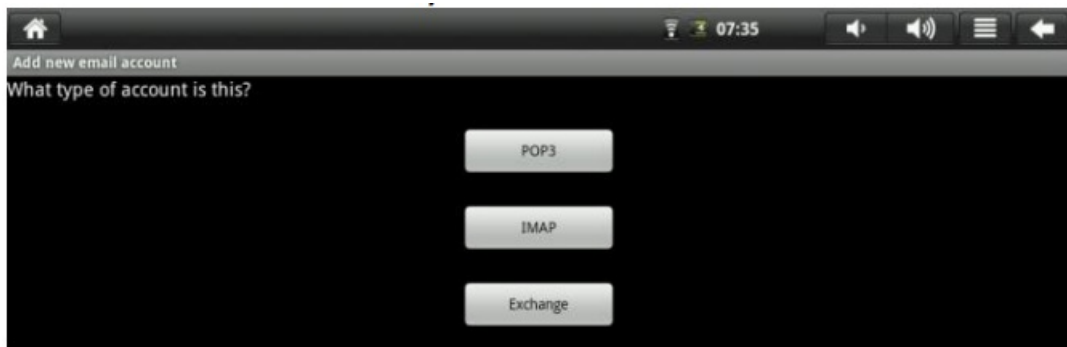 


Fig. 2.6.2

- **Gallery**

The gallery allows you to view media files stored on the device as well as external memory devices connected to the tablet.

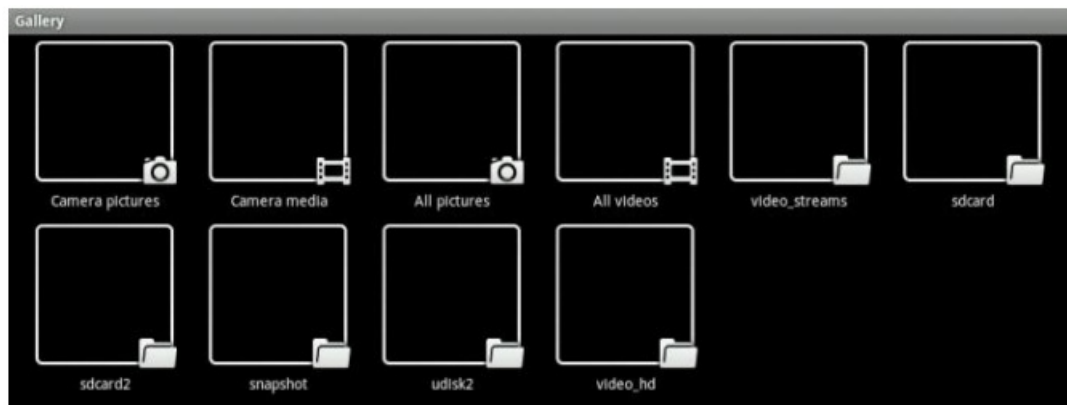 


Fig. 2.6.3

- **Music**

The Music application allows you to view and playback your music collection. Please note that music will be played in the background even if the back button is pressed. This allows the user to listen to music while reading an eBook for example.

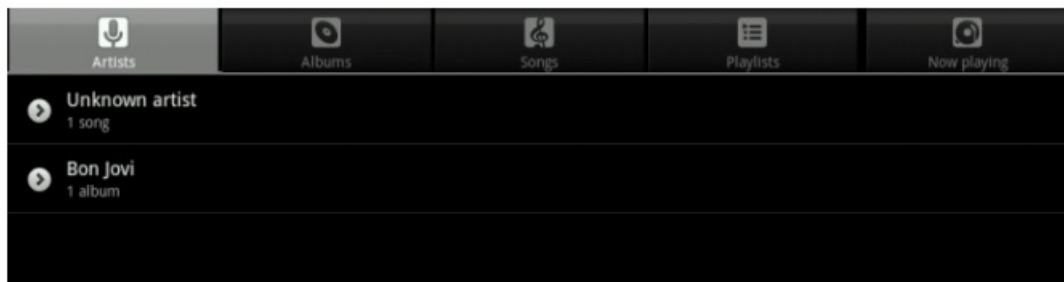 


Fig. 2.6

- **Sound Recorder**

The sound recorder can be used as a Dictaphone and recordings are saved to the MicroSD card.



- **Camera**

There are two camera modes S napshot mode giving still images and video recording mode. The images and video files are saved to the Micro SD card.

SETTING



1. Wireless & networks

- WiFi Turn WiFi function On/Off WiFi settings By enabling Network notification, a list of all available connections will be shown. Choose Menu to enter advanced options.

IMPORTANT

- Upon exiting the Advanced page, press Menu Save to save all changes.
- f a network r equires a password /wireless key, the tablet will automatically detect the encryption details and will request that you enter the key.

2. Ethernet Configuration Ethernet

Switch on Ethernet functionality

3. Sound & display

Silent mode

Turn mute option On/Off

Media volume

Adjusts the volume for music and videos

Audible selection

Play sound for screen selection.

Haptic feedback

Turn On/Off Vibrate feature. Disable this function to save battery life.

SD card

Play sound for Micro SD card notifications notifications. This function is application dependent.

Orientation

Enable/disable automatic orientation mode. If disabled, the manual orientation icon will appear on top left beside the Home icon.

Animation

Selects page change effects; fade, etc.

Brightness

Adjusts the brightness of the screen.

Screen timeout

Adjusts the delay before the screen goes into standby.

4. Location & security

Using wireless networks Please be aware of applications (such as Maps) which access the wireless network. If you wish to use these applications, please accept the onscreen agreement. Visible passwords Password characters will be shown when you are typing. Only the last character will be visible, others will be masked.

5. Applications

Unknown sources Allows installation of non SlideMe Market applications. Please read any agreement upon downloading.

Manage applications

Manage and remove installed applications. Please note that some applications may cause the system to freeze during installation or removal.

This is due to a memory handling issue of the application and the device. It is suggested to clear the cache before removing the application. The "Clear Cache" option is located in the 'Remove application' page. If the system freezes while installing or removing, please press the reset key on the side of the tablet in order to reset the device.

Running services

View and control applications which are currently running.

6. Accounts & sync

Add account You may add your G mail account and synchronize the account in the Google server. For Google server details please use m.google.com

7. Privacy

Use My Location This will enable the Google main search page to be set to your current location (country).

Factory data reset

This erases all data to factory default. Powering on the tablet will take longer after a reset. All applications installed and personal settings will be erased. Please acknowledge all warnings when resetting.

8. SD card & device storage

Available space Shows available space of Micro SD card / tablet.

Unmount SD card

This option is used for safe removal of the Micro SD card. Please see Section 4 'Using Micro SD card' for further information.

9. Search

Google search settings Shows suggestions from Google as you type.

Searchable items

Choose what to search on the device.

Clear search shortcuts

Clear history of recently chosen search results.

10. Language & keyboard

Select locale

Select language and region.

Android keyboard

Onscreen keyboard settings.

User dictionary

Add and remove words from user dictionary. You can add words by pressing the "Menu" icon.

11. Date & time Automatic

Automatically synchronize the date time with your AP.

Set date

Set date on device. Select time zone Select time zone on device

Set time

Set time on device.

Use 24

hour format Use 24 hour format or am / pm mode.

Select date format

Select date display options

12. Touch screen calibration

Performs touch panel calibration.

13. Gsensor calibration

Performs calibration on G Sensor functionality.

14. About Device

Displays device information.

Using MicroSD card

In order to safely remove the storage card from the device go to Settings SD card & device storage. Choose 'Unmount MicroSD card' for safe removal of the card. The toolbar will display MicroSD card safe to remove when this option is chosen. Please wait 3 seconds before removing the card. When the MicroSD card is removed, the toolbar will display Removed MicroSD card. Reinserting the MicroSD card will show Preparing MicroSD card on the toolbar status. Removing MicroSD card without first unmounting will give the following message MicroSD card unexpectedly removed on the toolbar. You may also remove your MicroSD card by touching the unmount button in My Device

IMPORTANT Any unexpected removal may cause the MicroSD card to fail. You will have to reboot the device in order for the MicroSD card slot to work again. Removing the MicroSD card without unmounting may damage the card. Please also refer to MicroSD card & device storage

Using HDMI

The HDMI output can be used when playing videos. A HDMI cable can be connected between the Tablet and a HD TV for full screen viewing. Press the Menu button on the back of the tablet to project the video onto the desired screen.

Technical features

- **Main Unit**
- **Model No.:** Disgo Tablet 7900
- **CPU:** iMAP 210 @ 1GHz.
- **Flash Memory:** 2 GB NAND flash.
- **System Memory:** DDRII 256MB
- **Display:** 1024 x 600
- **Touch Panel:** Resistive Multi Touch
- **Battery:** Li Polymer 3800 mAh
- **Operating**
- **Temperature:** 0-55 C.

Recycling

This crossed bin symbol on the appliance indicates that the product, at the end of its life, must be disposed of separately from domestic waste, either by taking it to a separate waste disposal site for electric and electronic appliance or by returning it to your dealer when you buy another similar appliance. The user is responsible for taking the appliance to a special waste disposal site at the end of its life. If the disused appliance is collected correctly as separate waste, it can be recycled, treated and disposed of ecologically; this avoids a negative impact on both the environment and health, and contributes towards the recycling of the product's materials. For further information regarding the waste disposal service available, contact your local waste disposal agency or the place of purchase

Troubleshooting

1. I cannot connect to the Internet using Manual Setup.

Ans: Ensure you have used Menu Save when exiting the advanced settings page.

2. I can see my access point name , but I cannot connect to the Internet.

Ans: If your access point (AP) supports multiple access points at a time, you may have to connect the device using WPA encryption and not WEP. Please refer to your AP device manual for setup details.

3. My MicroSD card is not being detected and /or shows damaged SD card

Ans : Please reinsert the MicroSD card and try again. If this does not work , please restart the device again with MicroSD card inserted. Please ensure that you have removed the MicroSD card using the correct procedure as described in section 4.

4. My system freezes when installing / removing applications.

Ans: This may be caused by a memory handling error. Use Clear Cache option (See section 3.5) and Force Close icon in application manager before removing the software. If the system continues to freeze, please press the reset button on the side of the device and power on again.

5. My device freezes while powering on.

Ans: This may be caused by a failure in reading the MicroSD card. Please press the reset button and power on again. Also, please ensure that the card is fully inserted. Alternatively, please try to start the device with the MicroSD card removed.

6. **Can I manually change the screen orientation?**

Ans Yes. Please check in “ Sound & Display ” in Settings ”. Un check the “ Orientation ” option , which will enable the manual orientation button on the tool bar.

7. **The device showed an error message and the application closed: “ android.process.acore ”**

Ans: This happens when the system has too many applications running at once. Please check your open applications as noted in section 3.

8. **What is the life of the battery?**

Ans: A complete charge will give 4 hours battery life with wireless functionality turned on.

9. **Can I update my tablet?**

Ans: The “Upgrade System” in “Settings” will allow you to update your tablet when new versions of firmware or Operating Systems become available. All new updates/versions will be announced on the “My Disgo” website; [www. my disgo.com](http://www.mydisgo.com)

10. **Can I amend the Operating System or code on the device myself**

Ans: No . Any misuse of the tablet in this way will void the warranty

11. **I have my MicroSD card inserted, but I am unable to use applications that require a MicroSD card.**

Ans: The device checks the first MicroSD card slot (as the default slot. Please insert the MicroSD card to the first slot (when using the voice recording, camera image, and application such as SlideMe.

12. **The touch screen is not very responsive**

Ans: As the touch screen is resistive , please use the stylus provided for best results.

For further technical queries, please contact the my disgo support helpdesk @ www.mydisgo.com/support


Battery statement





CMS Peripherals Limited is registered as a producer under The Waste Batteries and Accumulator Regulations 2009. The battery in this device is not intended to be removed by the individual or end user. At the end of the product life, or the expiry of the product, the relevant local council-appointed WEEE disposal and recycling facility should consult the aforementioned company using the details at the footer of this page should advice be sought for the safe disposal of the cell within this product. The cell within this product uses Lithium Ion technology. The cell has a voltage rating of 8 .4v and a capacity of 38 00 mAh, with an energy rating of 31 .9 Wh (Watt hours) CMS Peripherals Limited, 24 Scrubs Lane, London, **NW10 6RA**

Warning: To reduce the risk of fire and burns; do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.

Documents / Resources

 Tablet 7900 Android 2.2 10.1" Touch screen User Manual	disgo Tablet 7900 Android 2.2 10.1" Touch screen [pdf] User Guide Tablet 7900 Android 2.2 10.1 Touch screen, Tablet 7900, Android 2.2 10.1 Touch screen, 10.1 Touch screen, Touch screen, screen
--	---

References

-  [mydisgo.com](#)
-  [Loading...](#)

Manuals+.