Home » DisplayLink » DisplayLink USB Graphics Software User Guide 🖫


DisplayLink USB Graphics Software User Guide

Display Link USB Graphics Software User Guide



- 1. Please refer to https://www.displaylink.com/downloads to download/update the driver before using
- 2. Select "INDIVIDUAL INSTALLERS" or "CORPORATE INSTALLERS">>"Windows" or "MacOS"
- 3. Open and Download Display Link USB Graphics Software

NOTE: Before downloading, please check the operating system model of your PC in "Settings>>About" and then select the appropriate display link version to download.

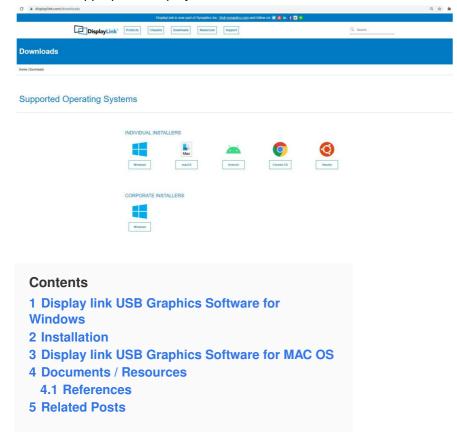


Display link USB Graphics Software for Windows

Windows Driver Downloads Here you can download drivers for DisplayLink® USB graphics chipsets incorporated in your dock, adapter or monitor. We recommend to update to the latest driver to address any potential security issue, fix bugs, improve performance and add new features. Name 1. Your Origine Equipment Manufacture (CBI) may also provide software for your specific monitor, dock or adapter that offers from the DisplayLink releases. Please direct their verballe for details. 2. Windows 10 5 products using DisplayLink technology will get their device drivers shift from CBII pre-installation or from Windows Update. Latest Official Drivers — DisplayLink USB Graphics Software for Windows Windows 10, 8.1, 7 Release: 10.1 MO | 99 Mar 2021 DisplayLink USB Graphics Software for Windows Windows 8 Release: 9.2 M. 10 65 Nov 2019

Installation

- 1. Refer to www.displaylink.com/downloads to download/update the driver before using.
- 2. Select "INDIVIDUAL INSTALLERS" or "CORPORATE INSTALLERS" >> "Windows"
- 3. Open and Download Display Link USB Graphics Software for Windows .exe

Display link USB Graphics Software for MAC OS

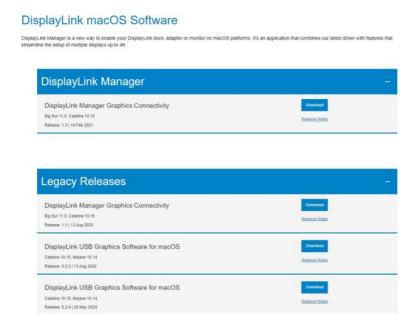

- 1. Refer to www.displaylink.com/downloads to download/update the driver before using.
- 2. Select "INDIVIDUAL INSTALLERS" >> "macOS"
- 3. Open and Download Display Link Manager Graphics

NOTE: When asked whether you agree to install and enter the password, please click "Agree" and enter your fingerprint or password to install. Otherwise, the driver will fail to install.

Enable "Screen Recording" to allow the Display Link Manager app to capture pixels and send them to your USB peripheral:

- Please select "Privacy" tab.
- 2. Navigate to "Screen Recording" in the list on the left.
- 3. Then tick the "Screen Recording" permission for Display Link Manager.

NOTE: For Apple Silicon (M1), it takes a higher level of protection of customer privacy requirements. MacBook with M1 chip, requires the user to permit "Screen Recording" in order for Display Link devices to work properly. The message is generated by the OS and the screens not actually being recorded by Display Link. Approving it enables the Display Link driver to access the pixels it needs to render a mirrored or extended screen and send the pixels over USB from your computer to the Display Link display. Display Link Manager does not store or record any screen content.

Documents / Resources



<u>DisplayLink USB Graphics Software</u> [pdf] User Guide USB Graphics Software, USB, Graphics Software, Software

References

• O <u>DisplayLink Downloads Page | Synaptics</u>

Manuals+,