



dji ACTION2 Dual Screen Combo Camera User Manual

[Home](#) » [DJI](#) » dji ACTION2 Dual Screen Combo Camera User Manual 

Contents

- 1 dji ACTION2 Dual Screen Combo Camera
- 2 Product Information
 - 2.1 Product Profile
 - 2.2 DJI Action 2 Camera Unit
- 3 Accessories
 - 3.1 DJI Action 2 Magnetic Ball-Joint Adapter Mount
- 4 Preparing
- 5 Usage
- 6 Maintenance
 - 6.1 Firmware Update
 - 6.2 Underwater Usage Notes
 - 6.3 Using Other Accessories (Excluded)
- 7 Specifications
- 8 Touchscreen
- 9 Status LED Descriptions
- 10 DJI Mimo App
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



dji ACTION2 Dual Screen Combo Camera



Product Information

Product Profile

 
The DJI Action 2 is a camera unit designed for capturing action-packed moments. It comes with various accessories to enhance usability and functionality.

Introduction

The DJI Action 2 Camera Unit is a compact and lightweight device that offers high-quality video and photo capabilities. It features a touchscreen for easy navigation and control.

DJI Action 2 is capable of shooting sharp 12MP photos and capturing smooth video at up to 4K/120 fps. With an innovative magnetic design, you can quickly swap accessories such as the front touchscreen module that enables you to see the live view and operate the camera while taking selfies. Users can also record super smooth footage thanks to DJI's latest EIS technology. HorizonSteady keeps footage level no matter the situation while RockSteady 2.0 ensures stabler footage than ever before. Get the most out of DJI Action 2 by wirelessly connecting it to DJI Mimo using a mobile device and display high-quality video in real time. The camera unit is also waterproof at depths of up to 10 m and can be connected to the waterproof case to reach as deep as 60 m. Users can enjoy the full range of DJI Action 2 features with other accessories such as the front touchscreen module, power module, magnetic adapter mount, magnetic ball-joint adapter mount, magnetic clip, remote control extension rod, waterproof case, and macro lens.

DJI Action 2 Camera Unit


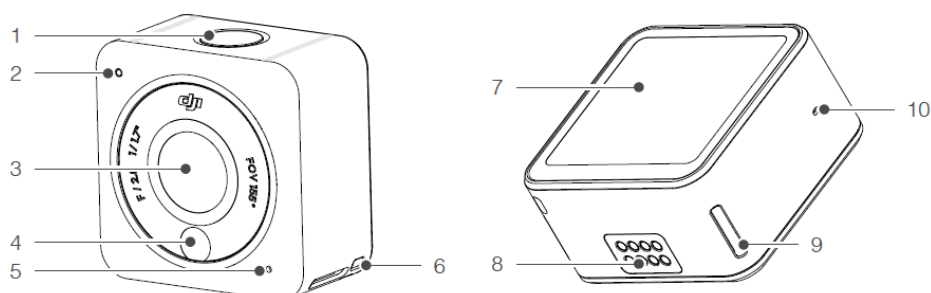


1. Power/Record Button
2. Status LED
3. Lens
4. Color Temperature Photo Sensor
5. Microphone
6. Lanyard Hole
7. Touchscreen
8. Expansion Port
9. Lock Hole
10. Air Pressure Balance Hole

Accessories


The DJI Action 2 comes with the following accessories:

  - **DJI Action 2 Front Touchscreen Module**

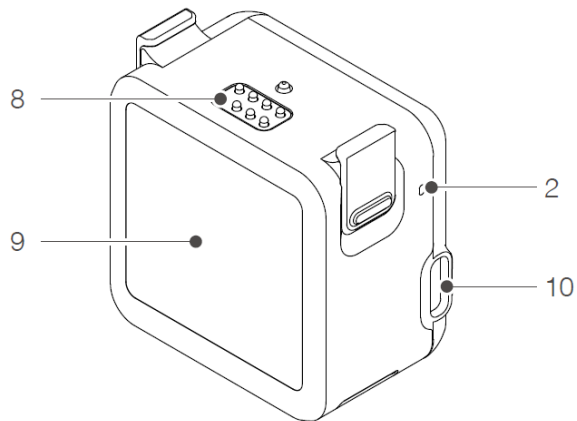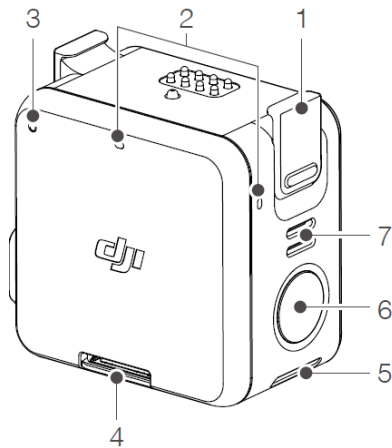


1. Lock Clip
2. Microphone
3. Status LED
4. microSD Card Slot
5. Lock Hole
6. Power/Record Button
7. Speaker
8. Expansion Port
9. Front Screen
10. USB-C Charging Port

 The front touchscreen module can be magnetically attached to the camera unit. Make sure the expansion ports are properly aligned before attaching the magnetic lock clips to the magnetic lock holes on the camera unit and press both clips before removing.

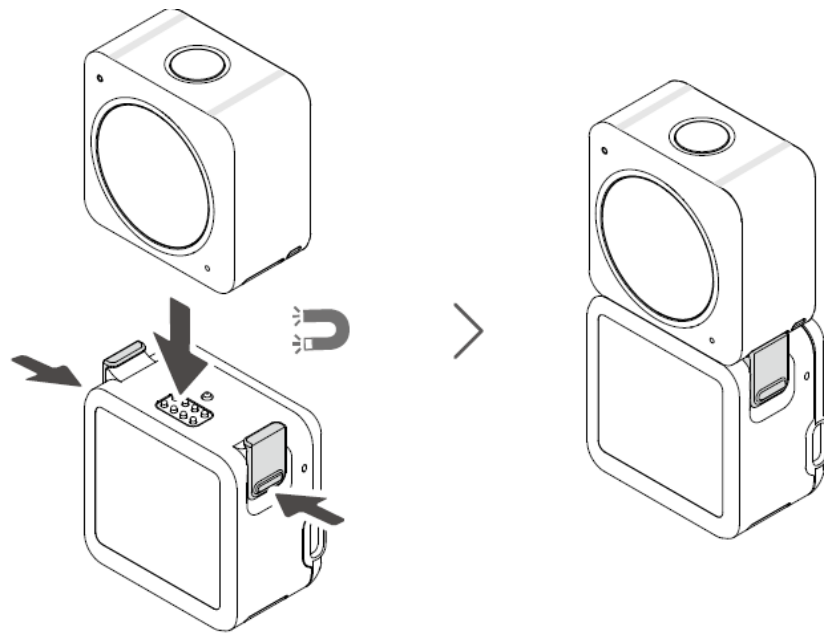


• DJI Action 2 Power Module

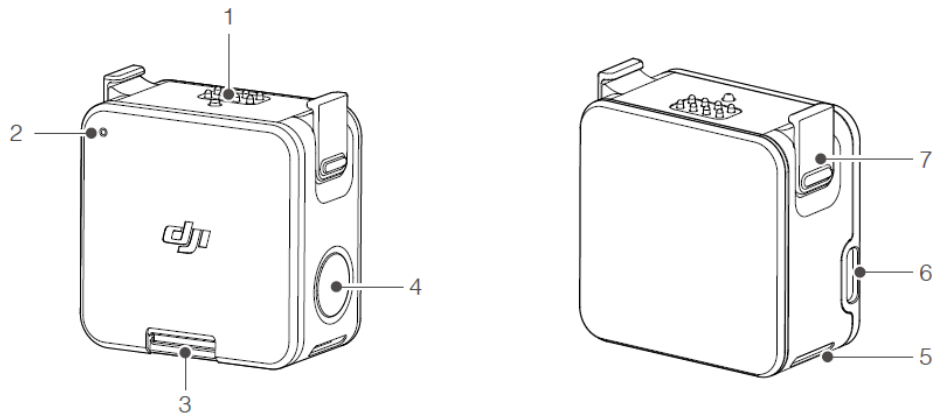 


1. Expansion Port
2. Status LED
3. microSD Card Slot
4. Power/Record Button
5. Lock Hole
6. USB-C Charging Port
7. Lock Clip

 The DJI Action 2 Power Module can be magnetically attached to the camera unit to supply power and extend the operating time. Users can also insert a microSD card to increase the external storage of the camera. Make sure the expansion ports are properly aligned before attaching the magnetic lock clips to the magnetic lock holes on the camera unit and press both clips before removing.

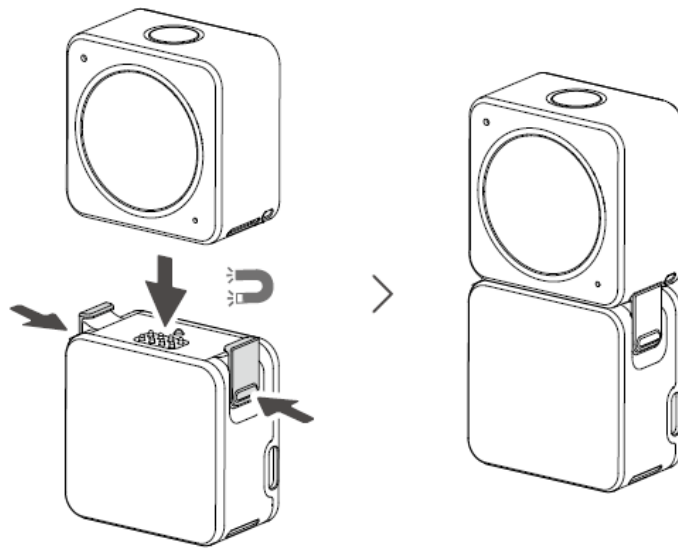

DJI Action 2 Magnetic Lanyard

 
The magnetic lanyard can be used to carry the camera unit conveniently. The length can be adjusted and it is recommended to attach the camera unit so it hangs below the collarbone.

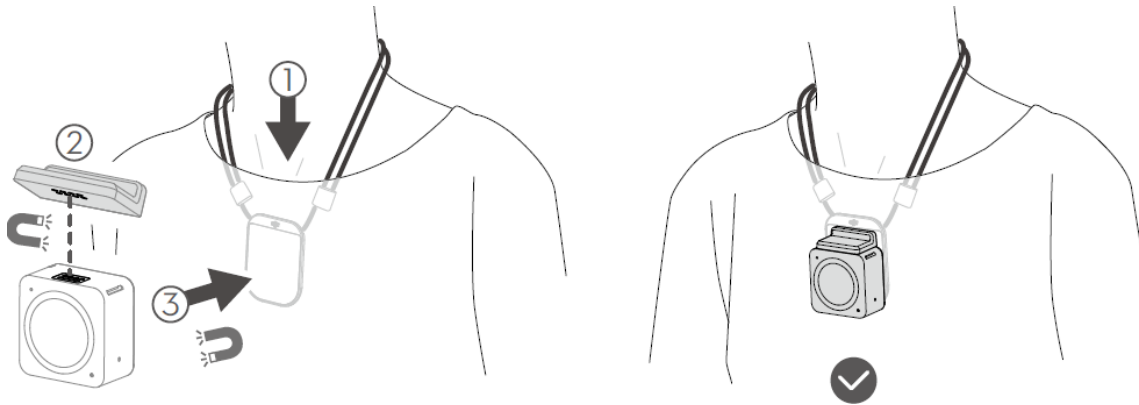

- DO NOT use when wearing thick clothes such as sweaters or jackets. Otherwise, the magnetic connection may be too weak and the camera unit will fall off.
- DO NOT use when performing strenuous exercise such as jumping and running.
- Make sure to keep the magnetic sheet of the magnetic lanyard inside the clothing. Otherwise, the magnetic connection may be too weak and the camera unit will fall off.
- Only attach the camera unit to the magnetic lanyard. DO NOT connect any other accessories.

DJI Action 2 Magnetic Ball-Joint Adapter Mount

 
The DJI Action 2 Magnetic Ball-Joint Adapter Mount can be magnetically attached to the camera unit, the front touchscreen module, or the power module. Make sure the magnetic lock clips are properly attached to the magnetic lock holes on the camera unit or module on both sides and press both clips before removing. Wipe the surface of the object and attach and hold the adhesive base for at least 10 seconds. It is recommended to wait 30 minutes before attaching the camera. Otherwise, the adapter mount may not attach firmly. The adhesive base on the bottom of the adapter mount can be used repeatedly after washing and air drying.

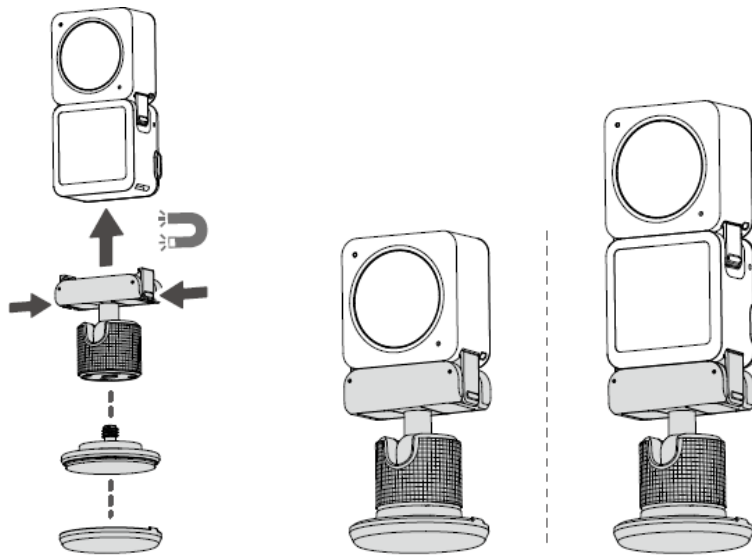

- DO NOT attach the adhesive base to surfaces that are arched, curved, rough, powdered, peeling, covered in dust or sand, or have oil or water stains. Otherwise, the adapter mount may not be attached firmly.
- The operating temperature of the adhesive base is 0 to 40° C (32 to 104° F). DO NOT attach the adhesive base to a surface with a higher or lower temperature.
- It is recommended to only mount the camera unit when applying to a vertical or inclined surface.
- It is recommended to use the magnetic adapter with the OSMO Action Mounting Kit when recording during strenuous exercise.

DJI Action 2 Magnetic Adapter Mount

 The magnetic adapter mount can be magnetically attached to the camera unit, the front touchscreen module, or the power module. Make sure the magnetic lock clips are properly attached to the magnetic lock holes on the camera unit or module on both sides and press both clips before removing.

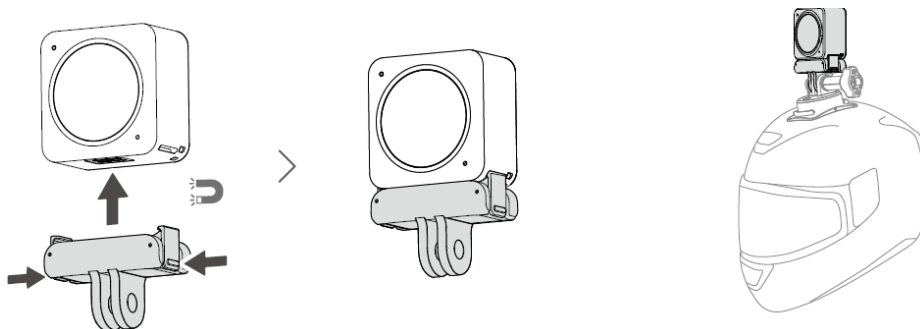

Warnings

1. DJI Action 2 contains magnets. Keep the camera away from magcards, IC cards, hard disks, RAM chips, implantable medical devices such as pacemakers, and other devices to avoid interference.
2. The expansion port and the edge of the lens may become hot during use. To avoid scalding, DO NOT touch.
3. DO NOT attach the camera unit to the front touchscreen module when there is any dust or liquid on the expansion ports. Otherwise, the camera may corrode or short-circuit.
4. The front touchscreen module and the power module are not waterproof. The waterproof case is required when using the front touchscreen module or the power module with the camera unit under water.
5. Charge DJI Action 2 when the battery level is low. Storing the DJI Action 2 for more than four months with low battery will reduce the battery life. Charge or discharge the DJI Action 2 battery to 40-60% if it will not be used

for 10 days or more.

6. When attaching DJI Action 2 to the roof or window of a car, the DJI Action 2 may fall off if the car travels too fast, the surface is not clean, or there is bad weather such as high winds or a thunderstorm.
7. For better audio quality, DO NOT block the microphone when recording video.
8. Connect the camera unit to the front touchscreen module to enable audio during playback. DO NOT block the speaker. Otherwise, the audio performance may be affected.
9. DJI Mimo is required for activation when using DJI Action 2 for the first time.
10. When using with the front touchscreen module and the power module, pay attention the differences between them listed below:

	Front Touchscreen Module	Power Module
Microphone	3	none
Front Screen	1	none
Speaker	1	none
Dimensions	39×41.6×24.6 mm	39×41.6×21.4 mm
Weight	64 g	56.6 g
Operating Time	160 min*	180 min**

- Measured using 1080p (Power Reserve), 30fps, with sleep mode set to one minute, and electronic image stabilization disabled. Use as a reference only.
- Measured using 1080p (Power Reserve), and electronic image stabilization disabled. Use as a reference only.

 
Preparing

1. Activation: Before using the DJI Action 2, you need to activate it. Follow the instructions in the user manual for activation.
2. Charging DJI Action 2: Connect the DJI Action 2 to a power source using the USB-C charging port. The status LED will indicate the charging progress.

Activation


When using the camera unit, activation is required through DJI Mimo. Follow the steps below to activate.

1. Press and hold the power/record button to power on.
2. Enable Wi-Fi and Bluetooth on the mobile device.
3. Launch DJI Mimo, tap , and follow the instructions to activate the camera unit.

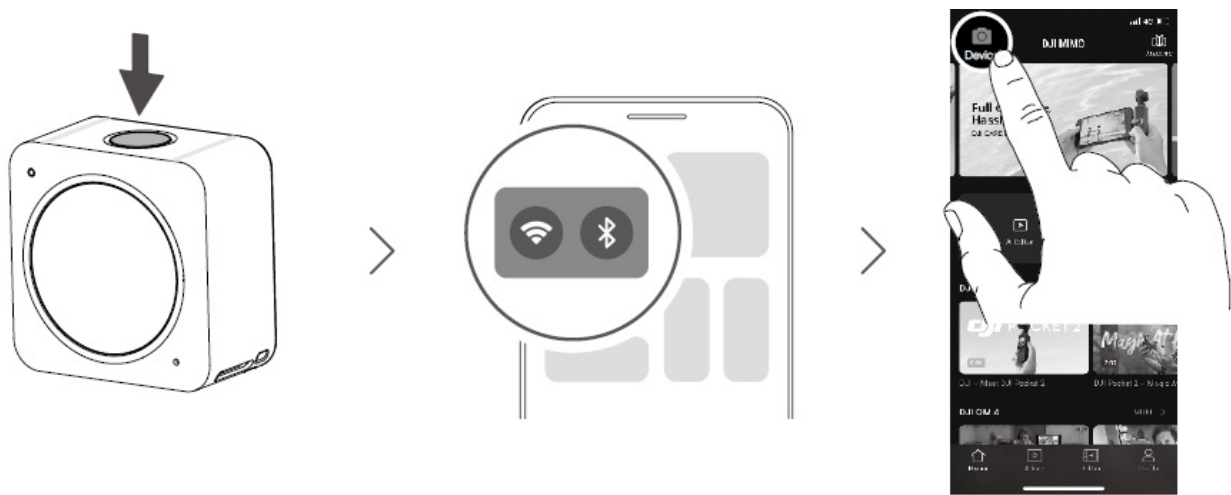

Charging DJI Action 2

 1. Connect a USB adapter (not included) to the USB-C port using the power cable (included).
2. The status LED on the front touchscreen module or the power module turns on during charging when powered off. The battery is fully charged when the status LED displays solid green for six seconds and turns off. It takes approximately 90 minutes to fully charge both the camera unit and the front touchscreen module or the power module when they are connected.*

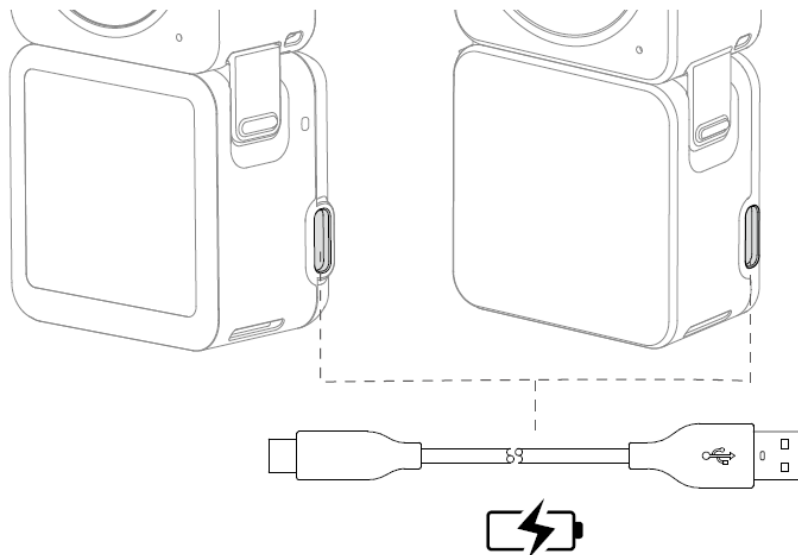

- Measured using a 5V/2A USB adapter in a laboratory environment. Use as a reference only.
- Charge DJI Action 2 when the battery level is low. Storing the DJI Action 2 for more than four months with low battery will reduce the battery life.
- The camera unit will be charged first if the front touchscreen module or the power module is connected to the camera unit during charging.

Usage

 
Here are some key features and functions of the DJI Action 2:

- **Power/Record Button:** Press this button to power on/off the camera and start/stop recording.
- **Touchscreen:** Use the touchscreen to navigate through settings, adjust camera modes, and access various options.
- **Storing Photos and Videos:** The DJI Action 2 supports storage of photos and videos on a microSD card. Insert

the card into the microSD card slot.

- **Status LED Descriptions:** The status LED provides visual indications for different camera states. Refer to the user manual for detailed descriptions.
- **DJI Mimo App:** Download and install the DJI Mimo app on your smartphone or tablet to access additional features and settings.

Power/Record Button

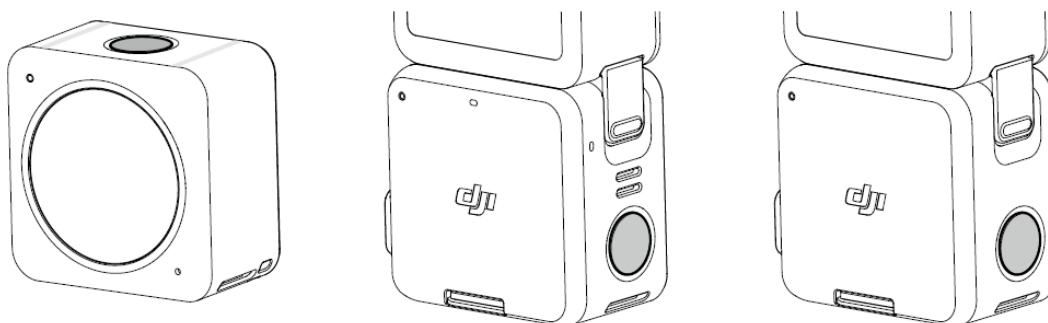

1. When powered off:
 - Press to power on.
 - Press and hold to quickly power on and begin shooting. The shooting mode will depend on the SnapShot settings.
2. When powered on:
 - Press to take photos or to start or stop recording. In settings or playback, press to return to camera view.
 - Press and hold to enter sleep mode and press again to exit sleep mode. The camera will automatically power off after 60 minutes in sleep mode. In QuickClip mode, press and hold to extend recording time while recording.
 - Press twice to switch shooting mode.
 - If the camera unit is not working properly, press and hold the power/record button for 20 seconds to restart the camera unit.
 - When the front touchscreen module is disconnected from the camera unit, the front touchscreen displays the battery level and connection tips when the power/record button is pressed.
 - When the power module is disconnected from the camera unit, the status LED indicates the battery level when the power/record button is pressed.
 - When the front touchscreen module or the power module is connected to the camera unit, the power/record button of the front touchscreen module or the power module functions the same as the button on the camera unit.

Maintenance

Proper maintenance of the DJI Action 2 will ensure optimal performance and longevity. Here are some important maintenance tasks:

- **Firmware Update:** Regularly check for firmware updates and follow the instructions to update the camera's firmware.
- **Underwater Usage Notes:** If using the DJI Action 2 underwater, make sure to follow the provided guidelines to

ensure proper sealing and waterproofing.

- Using Other Accessories (Excluded): Only use accessories recommended by DJI for optimal compatibility and safety.
- Cleaning Notes: Follow the cleaning instructions provided in the user manual to keep the camera unit and accessories clean and free from dirt or debris.
- Connecting to a Computer: Connect the DJI Action 2 to a computer using the USB-C charging port for data transfer and file management.

Firmware Update

DJI Action 2 Camera Unit

The firmware of the camera unit must be updated through DJI Mimo. A prompt will appear when new firmware is available. Follow the steps below if the update fails.

1. Disconnect and reconnect the Bluetooth and Wi-Fi connection on the mobile device, and restart the camera unit.
2. Restart DJI Mimo. The firmware update will begin after Mimo and the camera unit are connected.

Accessories

The firmware of the front touchscreen module and power module are included in the camera unit firmware. Follow the steps below to update the firmware:

1. Attach the front touchscreen module or power module and power on the camera unit.
2. Any updates will start automatically if new firmware is available.
 - Make sure that the battery level of the camera unit is at least 15% before updating firmware
 - Contact DJI Support if the firmware is still unable to update.

Underwater Usage Notes

1. The camera unit and waterproof case meet the IP68 waterproof standards of GB/T 4208-2017 and IEC 60529:2013. The camera unit can be used underwater at depths of up to 10 m. The maximum depth underwater is 60 m when using the waterproof case.
2. DO NOT use DJI Action 2 in hot springs. DO NOT allow DJI Action 2 to come into contact with corrosive or unknown liquids.
3. Attach the waterproof case when diving, surfing, using underwater for extended periods, or other situations involving high-impact with water.
4. The front touchscreen module and the power module are not waterproof. Attach the waterproof case to use them under water.
5. When using the waterproof case, make sure the inside of the waterproof case is dry and clean, properly locked, and that the waterproof rubber ring is secure. Insert anti-fog inserts to prevent fogging. It is recommended to place the waterproof case under water for approximately 5 minutes to ensure it is working properly before using.
6. Avoid jumping into water at high speed with the camera unit. Otherwise, the impact may result in water leakage. Make sure the camera unit is waterproof before jumping into water.
7. Rinse the camera unit or waterproof case with clean water after using underwater. Allow it to dry naturally

before using again.

 
8. When using the magnetic headband, only attach the camera unit. DO NOT use in scenes that will impact the camera unit such as surfing or diving.

Cleaning Notes


- 1. Keep the lens glass clean. Sand and dust may damage the lens glass. Clean DJI Action 2 with a clean, dry cloth.
- 2. Keep DJI Action 2 away from sand and dust. Wash the camera unit if the holes on DJI Action 2 are blocked by sand, dust, or any other substance.
- 3. All the holes on the camera unit have built-in waterproof material. DO NOT remove the waterproof material or poke the holes. Otherwise, the camera unit will no longer be waterproof.
- 4. DO NOT poke the holes and speaker on the front screen module.





Connecting to a Computer

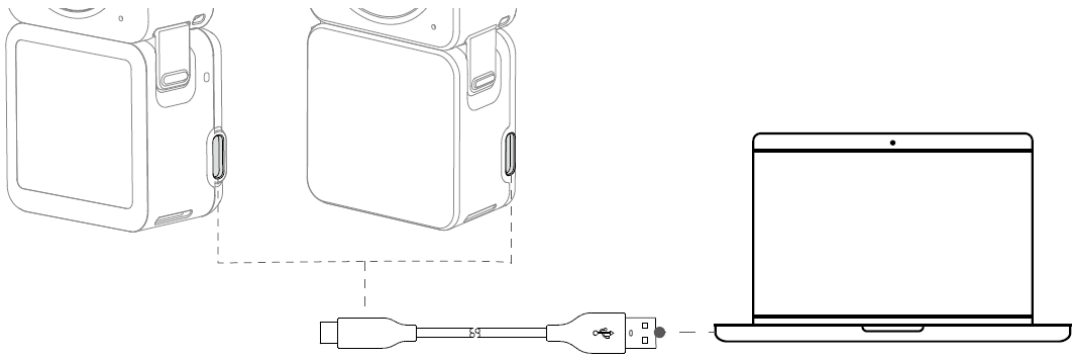After connecting to DJI Action 2 to a PC, File Transfer, Webcam, and Cancel will appear on the touchscreen of the camera unit. Select Cancel to charge DJI Action 2. Reconnect DJI Action 2 to the computer if the file transfer is interrupted.



 Using Other Accessories (Excluded)

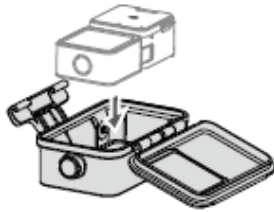Accessory List	Diagram
DJI Action 2 Remote Control Extension Rod	

DJI Action 2 Waterproof Case	
DJI Action 2 Macro Lens	
DJI Action 2 Magnetic Clip	
Scan the QR code or read the corresponding product information or user guide on the official DJI website (www.dji.com/action-2).	

Specifications

Here are some key specifications of the DJI Action 2:

- Expansion Port: Supports connection to various accessories for extended functionality.
- Status LED: Provides visual indications for different camera states.
- microSD Card Slot: Allows storage of photos and videos on a microSD card.
- Power/Record Button: Controls power on/off and recording functions.
- USB-C Charging Port: Used for charging the camera and connecting to a computer.

DJI Action 2 Camera Unit	
General Settings	
Model	MC211
Dimensions	39×39×22.3 mm
Waterproof	10 m (60 m when using waterproof case)
Weight	56 g
Camera	
Screen	1.76 inches 350 ppi 500±50 cd/m² 446×424
Sensor	1/1.7" CMOS
FOV	155°
Aperture Range	f/2.8
ISO Range	Photo: 100-6400 Video: 100-6400
Electronic Shutter Speed	Photo: 1/8000 to 30 s Video: 1/8000 s to the frames per second limit
Max Photo Resolution	4000×3000
Still Photography Modes	Single photo: 12 MP Countdown photo: Off/0.5/1/2/3/5/10 s
Standard Recording	4K (4:3): 4096×3072 @ 24/25/30/48/50/60 fps 4K (16:9): 3840×2160 @ 100/120 fps 4K (16:9): 3840×2160 @ 24/25/30/48/50/60 fps 2.7K (4:3): 2688×2016 @ 24/25/30/48/50/60 fps 2.7K (16:9): 2688×1512 @ 100/120 fps 2.7K (16:9): 2688×1512 @ 24/25/30/48/50/60 fps 1080p: 1920×1080 @ 100/120/200/240 fps 1080p: 1920×1080 @ 24/25/30/48/50/60 fps
Slow Motion Recording	4K: 4x (120 fps) 2.7K: 4x (120 fps) 1080p: 8x (240 fps), 4x (120 fps)
Timelapse	4K/2.7K/1080: Shooting interval: 0.5s/1s/2s/3s/4s/5s/6s/7s/8s/10s/13s/15s/20s/25s/30s/40s Shooting duration: ∞, 5/10/20/30 min, 1/2/3/5 h
Stabilization ^①	Electronic Image Stabilization: RockSteady 2.0, HorizonSteady
Max Video Bitrate	130 Mbps
Supported File Formats	exFAT
Photo Format	JPEG/RAW
Video Format	MP4 (H.264/HEVC)
Built-in Storage Capacity	32 G B (22.4 GB of available storage)
Supported SD Cards	microSD (Max. capacity 256 GB)
Recommended microSD Cards	Recommended microSD cards: Samsung EVO 128GB UHS-I Speed Grade 3 microSDHC Samsung EVO Plus 128GB UHS-I Speed Grade 3 microSDXC SanDisk Extreme 256GB V30 A2 UHS-I Speed Grade 3 microSDXC SanDisk Extreme 128GB V30 A2 UHS-I Speed Grade 3 microSDXC SanDisk Extreme 64GB V30 A2 UHS-I Speed Grade 3 microSDXC SanDisk Extreme Pro 128GB UHS-I Speed Grade 3 microSDXC SanDisk Extreme Pro 64GB UHS-I Speed Grade 3 microSDXC SanDisk Extreme Pro 32GB UHS-I Speed Grade 3 microSDXC SanDisk Extreme 16GB UHS-I Speed Grade 3 microSDXC Lexar 1066x 64GB UHS-I Speed Grade 3 microSDHC
Audio Output	48 kHz, AAC
Built-In Battery	
Battery Type	LiPo 1S
Capacity	580 mAh
Energy	2.23 Wh
Voltage	3.85 V
Operating Temperature	0 to 40° C (32° to 104° F)
Charging Temperature	5 to 60° C (41° to 140° F)
Operating Time ^②	Approx. 70 min

Wi-Fi

Operating Frequency	2.400-2.4835 GHz, 5.150-5.250 GHz, 5.725-5.850 GHz
---------------------	--

Transmitter Power (EIRP)	2.4 GHz: <16 dBm (FCC/CE/SRRC/MIC) 5.1 GHz: <14 dBm (FCC/CE/SRRC/MIC) 5.8 GHz: <14 dBm (FCC/CE/SRRC)
--------------------------	--

Protocol	802.11a/b/g/n/ac
----------	------------------

Bluetooth

Operating Frequency	2.400-2.4835 GHz
---------------------	------------------

Transmitter Power (EIRP)	<4 dBm
--------------------------	--------

Protocol	BLE 5.0
----------	---------

DJI Action 2 Front Touchscreen Module[®]

Dimensions	39×41.6×24.6 mm
------------	-----------------

Weight	64 g
--------	------

Screen	1.76 inch 350 ppi 500±50 cd/m ² 446×424
--------	---

Built-In Battery

Battery Type	LiPo 2S
--------------	---------

Capacity	1300 mAh
----------	----------

Energy	5 Wh
--------	------

Voltage	7.7 V
---------	-------

Operating Temperature	0 to 40° C (32° to 104° F)
-----------------------	----------------------------

Charging Temperature	5 to 60° C (41° to 140° F)
----------------------	----------------------------

Operating Time ^②	Camera Unit + Front Screen Module: 160 min
-----------------------------	--

Charging Time ^④	Camera Unit + Front Screen Module: 90 min
----------------------------	---

DJI Action 2 Power Module

Dimensions	39×41.6×21.4 mm
------------	-----------------

Weight	56.6 g
--------	--------

Built-In Battery

Battery Type	LiPo 2S
--------------	---------

Capacity	1300 mAh
----------	----------

Energy	5 Wh
--------	------

Voltage	7.7 V
---------	-------

Operating Temperature	0 to 40° C (32° to 104° F)
-----------------------	----------------------------

Charging Temperature	5 to 60° C (41° to 140° F)
----------------------	----------------------------

Operating Time ^③	Camera Unit + Power Module: 180 min
-----------------------------	-------------------------------------

Charging Time ^④	Camera Unit + Power Module: 90 min
----------------------------	------------------------------------

1. EIS is not supported in Slow Motion and Timelapse mode. HorizonSteady is only available when the video resolution is 1080p (16:9) or 2.7K (16:9) with a frame rate of 60 fps or below.
2. Measured using 1080p (Power Reserve), 30fps, with sleep mode set to one minute, and electronic image stabilization disabled. Use as a reference only.
3. When the front touchscreen module is connected to the camera unit, be aware of the following when recording in 4K/100fps, 4K/120fps, 1080p/120fps, 4K 4x slow motion, or 1080p 8x slow motion: The front touchscreen module only shows the video recording format, voice control is not supported, and audio recording is only supported via the built-in microphone of the camera unit.
4. Measured using a 5V/2A USB adapter in a laboratory environment. Use as a reference only.
5. Measured using 1080p (Power Reserve), 30fps, and electronic image stabilization disabled. Use as a reference only.

After-Sales Information

If you encounter any issues or have questions about the DJI Action 2, please refer to the after-sales information provided in the user manual for assistance.

Visit <https://www.dji.com/support> to learn more about after-sales service policies, repair services, and support.

Searching for Keywords

Search for keywords such as “battery” and “install” to find a topic. If you are using Adobe Acrobat Reader to read this document, press Ctrl+F on Windows or Command+F on Mac to begin a search.

Navigating to a Topic

View a complete list of topics in the table of contents. Click on a topic to navigate to that section.

Printing this Document

This document supports high resolution printing.

Revision Log

Version	Date	Revisions
v1.2	2021.11	Updated content after v01.01.04.10 firmware update and added some notes.
v1.4	2022.01	Updated microSD card specification.
v1.6	2022.06	Updated home screen of DJI Mimo.

Using this Manual

- Legend
- Important
- Hints and Tips

Read Before First Use

Read the following documents before using DJI ActionTM 2:

1. User Manual
2. Safety Guidelines
3. Quick Start Guide

It is recommended to watch all tutorial videos on the official DJI website (www.dji.com/action-2) or in the DJI Mimo app and read the safety guidelines before using for the first time. Make sure to review the quick start guide before using for the first time and refer to this user manual for more information.

Downloading the DJI Mimo App

Scan the QR code or search for “DJI Mimo” on the App Store.

<https://m.dji.net/mimo>



- The iOS version of DJI Mimo is compatible with iOS v12.0 and later. The Android version of DJI Mimo is compatible with Android v8.0 and later.

 
Watching the Tutorial Videos

Watch tutorial videos and other videos on the official DJI website (<https://www.dji.com/action-2/video>) or scan the QR code before using for the first time.



Touchscreen

The touchscreen displays the live view after the camera is powered on as well as the shooting mode, battery level, and microSD card information.

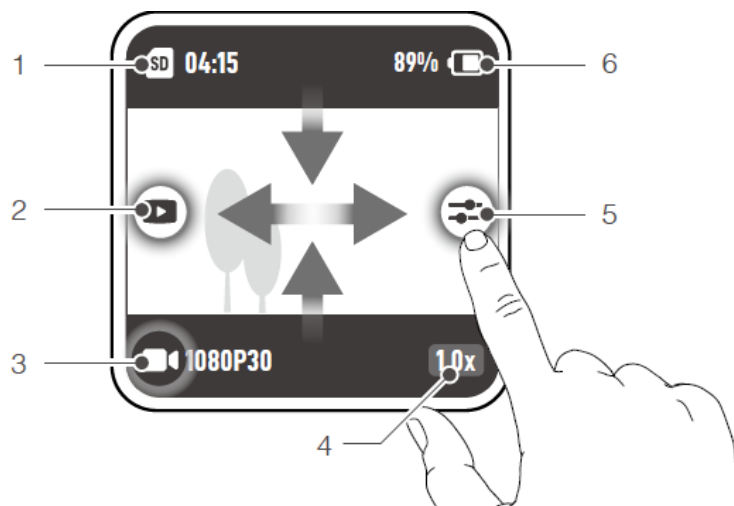

- After connecting to the camera unit, the front touchscreen module displays and functions the same as the touchscreen on the camera unit.

Camera View

1. Storage Capacity Information

04:15 : displays either the remaining number of photos that can be taken or the duration of video that can be recorded according to the current shooting mode. **04:15** will be displayed if a microSD card is inserted.

2. Playback

: tap or swipe to the right from the left edge of the screen to preview photos and videos as soon as they are captured.

3. Shooting Mode

1080P30 : displays the current shooting mode and parameters. Swipe up or tap to set the shooting mode

and parameters.

4. Zoom

1.0x: tap to set the zoom ratio. Zoom is unavailable in slow motion and timelapse.

5. Parameters



 
: tap or swipe to the left from the right edge of the screen to adjust image and audio parameters.

6. Battery Level

89% : displays current battery level of DJI Action 2. Tap the icon to view more detailed information about the battery level.

Swipe Down

Swipe down on the touchscreen to enter settings.

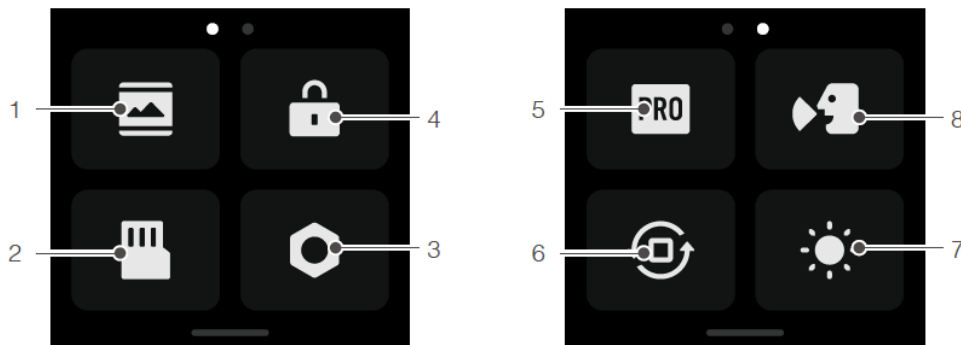

1. Screen Settings

Tap the icon to switch between full-screen and letterbox display.

2. Storage

Tap to switch the storage media, format the microSD card, format the built-in storage, or export the photos and videos from the built-in storage to the microSD card.

3. System Settings

Tap to enter system settings.

Voice Control: enable voice control to use the camera with voice commands. Simplified Chinese and English are supported. Voice commands include Start Recording, Stop Recording, Take Photo, and Shut Down.

Vibration Notification: tap to enable or disable. Vibration notification is enabled by default. SnapShot: use SnapShot to quickly power on and begin shooting when the camera is powered off or in sleep mode.

Supported shooting modes include Video, QuickClip, and Timelapse.

Wireless Connection: tap to check the camera name and password, set the Wi-Fi frequency, and reset connections.

Video Compression: tap to switch video encoding format between Compatibility and Efficiency mode. When Compatibility is selected, video will be encoded in H.264 with higher compatibility. When Efficiency is selected, video will be encoded in HEVC with a smaller file size. Only Efficiency videos are available in the following situations:

- **Video:** 4K (4:3) and supported fps
- **Video:** 4K (16:9) 120/100fps or 1080p 240fps
- **Slow-Mo:** 4K 4x or 1080p 8x.

Sounds: tap to enable or disable sounds. Grid: tap to enable or disable grid.

Anti-Flicker: tap to enable or disable anti-flickering. Anti-flickering detects flickering and times shooting

so it will have less of an impact.

Auto-Stop Rec Temp: tap to set auto-stop recording temperature to standard or high. Standard is set by default. Auto-stop recording temperature can not be set to high due to local regulations and policies in some countries and regions.

Scrn Off When Locked: tap to enable so that the screen turns off when the screen is locked.

Scrn Off When Rec: tap to set the timer for when the screen will turn off after recording has started and there has been no operation.

Auto Power Off: tap to set the time that the camera will automatically power off.

LED: tap to enable or disable the LED of the camera unit and the front touchscreen module or the power module when connected.

Macro Lens Detection: tap to enable Macro Lens.

Continue Last Livestream: tap to enable so the camera unit can continue from last livestream after livestream has stopped.

Language: tap to set the language to English, Simplified Chinese, Traditional Chinese, Japanese, Korean, Thai, German, Spanish, French, Italian, Russian, Brazilian Portuguese, Turkish, Indonesian, or Polish.

Factory Reset: tap to reset default settings.

Device Info: tap to view name, serial number, firmware version, and quick start guide.

Compliance Info: tap to view compliance information.

4. Screen Lock

Tap to lock screen. Swipe up on the touchscreen to unlock the screen.

5. Pro Switch

Tap to switch to Pro mode and be able to adjust Format, Exposure, and WB settings.

6. Orientation Lock

Tap to switch between automatic orientation and locked orientation.

7. Brightness

Tap and slide to adjust the brightness.

8. Voice Control Switch

Tap to enable voice control so the user can control the camera with set voice commands.

Swipe Up

Swipe up and then swipe left or right to set parameters such as aspect ratio, countdown timer, and resolution.

1. In Photo mode:

Set the aspect ratio and countdown timer.

2. In Video mode:

Set the resolution and frame rate. Tap the upper left corner to set the duration of the loop recording. Tap on the upper right corner to turn off electronic image stabilization, enable RockSteady, or enable HorizonSteady. Electronic image stabilization is unavailable when using certain resolutions and frame rates.

3. In QuickClip mode:

Set the resolution and frame rate. Tap the upper left corner to set the duration of the QuickClip. Tap on the upper right corner to turn off electronic image stabilization, enable RockSteady, or enable HorizonSteady. Electronic image stabilization is unavailable when using certain resolutions and frame rates.

4. In Slow Motion mode:

Set the resolution and speed ratio.

5. In Timelapse mode:

 
Select Hyperlapse or Timelapse mode. The speed ratio can be set in Hyperlapse mode. The scene, interval time, and shooting time can be set in Timelapse mode. Tap the upper right corner to set the resolution of Timelapse mode.

Swipe Left or Right

Swipe left or right on the center of the touchscreen to switch between Photo, Video, QuickClip, Slow Motion, and Timelapse shooting modes.

Storing Photos and Videos

The camera unit has a built-in storage capacity of 32 GB*, which can be used to directly store photos and videos. Footage shot on DJI Action 2 can be stored on a microSD card (not included) when connected to the front touchscreen module or power module. A UHS-I Speed Grade 3 rating microSD card is required due to the fast read and write speeds necessary for high-resolution video data. Insert the microSD card into the microSD card slot as shown.

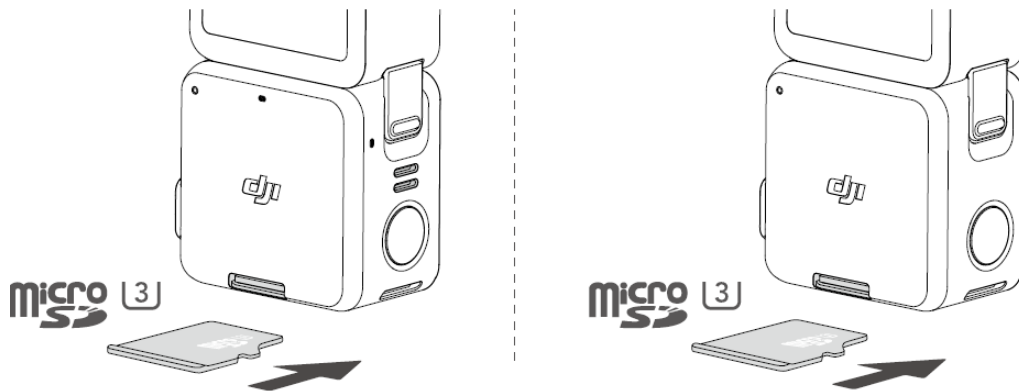

- 22.4 GB of available storage.

Status LED Descriptions

If the front touchscreen module or the power module is connected to the camera unit, the status LED blinking pattern descriptions will be the same as the camera unit after powered on.

Blinking Pattern	Description
Solid green	Ready to use
Off	No microSD card detected or insufficient microSD card storage
Temporarily off	While taking photo
Blinks red once every second	While taking video, loop recording, slow motion, timelapse, hyperlapse, or QuickClip
During countdown:	
10 to 4 s: blinks red once every second	Countdown to take photo
3 to 2 s: blinks red twice every second	
1 to 0 s: solid red	
After countdown: temporarily off	
Blinks red three times	Camera powering off
Blinks red and green alternately	Updating firmware

- If the front touchscreen module or the power module is connected to the camera unit, the status LED will pulse

green when powered off to indicate they are charging the camera unit.





The table below describes the status LED blinking pattern after pressing the power/record button without the front touchscreen module or the power module connected to the camera unit.




 

Blinking Pattern	Battery Level
Solid green for 3 seconds and turns off	90%-100%
Blinks green four times	76%-89%
Blinks green three times	51-75%
Blinks green twice	26%-50%
Blinks yellow once	6-25%
Blinks red three times and turn off	0-5%

DJI Mimo App

Home Screen



-  Camera View: tap to enter the camera view.
-  Academy: tap to watch tutorial videos and view manual documents.
-  **TEMPLATE** AI Editor: tap to select videos to edit. AI Editor will automatically edit videos with music and transitions that can be shared directly.
-  Home: tap to return to the home screen.

5.  Album: tap to view photos and videos.
6.  Edit: tap to edit footage from DJI Action 2 or import and edit footage from a mobile device.
7.  Profile: register or log in to a DJI account. View works and settings, check likes and followers, send messages to other users, and connect with the DJI Store.
8.  Forum: tap to enter the official DJI forum page.
9.  DJI Support: tap to enter the official DJI product support page.

Camera View



The camera view display may differ depending on the shooting mode. This display is for reference only.

1. Home:



: tap to return to the home screen.

2. Wi-Fi



: displays Wi-Fi connection.

3. Battery Level



 
: displays current battery level of DJI Action 2.

4. EIS



: displays the current electronic image stabilization.

5. microSD Card Information



: displays either the remaining number of photos that can be taken or the duration of video that can be recorded according to the current shooting mode.

6. Shutter/Record Button



: tap to take a photo or to start or stop recording video.

7. Shooting Mode

Scroll to select the shooting mode. Choose between Timelapse, Slow Motion, Video, QuickClip, and Photo.

8. Playback



: tap to preview photos and videos as soon as they are captured.

9. Setting



: choose Basic or Pro mode for the selected shooting mode. Various parameters can be set when using different shooting modes. Video mode is used as an example below:

- Video Settings

 
Basic: Loop Recording, FOV, EIS, and Grid are available.

Pro: More settings are available once Pro is enabled including Format, Exposure, and White Balance.

- General Settings

View storage management, video compression, anti-flicker, auto-stop recording temperature, and about settings such as device name, serial number and version info. Users can also select connected devices and set Wi-Fi name and password and switch Wi-Fi frequency.

10. Recording parameters



: tap to set the resolution and frame rate.

11. Zoom



: tap and drag to set the zoom ratio.


This content is subject to change.

Download the latest version from www.dji.com/action-2

OSMO is a trademark of DJI OSMO.

Copyright © 2022 DJI OSMO All Rights Reserved.

Documents / Resources

	<p>dji ACTION2 Dual Screen Combo Camera [pdf] User Manual ACTION2, ACTION2 Dual Screen Combo Camera, Dual Screen Combo Camera, Combo Camera, Camera</p>
---	---

References

- [DJI Action 2 - More Than Action - DJI](#)
- [DJI Mimo - Download Center - DJI](#)
- [DJI - Official Website](#)

Manuals+.