



DJI MINI SE Camera Drone Remote Controller User Manual

[Home](#) » [DJI](#) » DJI MINI SE Camera Drone Remote Controller User Manual 

Contents

- 1 DJI MINI SE Camera Drone Remote Controller
- 2 Product Information
- 3 Product Usage Instructions
- 4 Using this Manual
- 5 Product Profile
 - 5.1 Feature Highlights
 - 5.2 Preparing the Aircraft
 - 5.3 Preparing the Remote Controller
 - 5.4 Aircraft Diagram
 - 5.5 Remote Controller Diagram
- 6 Aircraft
 - 6.1 Flight Modes
 - 6.2 Aircraft Status Indicator
 - 6.3 Vision System and Infrared Sensing System
 - 6.4 Intelligent Flight Mode
 - 6.5 Gimbal and Camera
- 7 Remote Controller
 - 7.1 Using the Remote Controller
 - 7.2 Optimal Transmission Zone
 - 7.3 Linking the Remote Controller
- 8 DJI Fly App
 - 8.1 Camera View
- 9 Flight
 - 9.1 Flight Environment Requirements
 - 9.2 Flight Limits and GEO Zones
 - 9.3 Auto Takeoff/Landing
 - 9.4 Starting/Stopping the Motors
 - 9.5 Flight Test
- 10 Specifications
- 11 After-Sales Information
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts



DJI MINI SE Camera Drone Remote Controller



Product Information

Specifications

- **Model:** DJI Mini SE
- **User Manual Version:** v1.0 2021.06
- **Camera:** 1/2.3" sensor, shoots 2.7K video and 12 MP photos
- **Gimbal:** Fully stabilized 3-axis gimbal
- **Flight Restrictions:** Height limited to 98.4 ft (30 m) and range limited to 164 ft (50 m) without app connection
- **Compatibility:** The DJI Fly app is compatible with Android v6.0 and later, iOS v10.0.2 and later

Product Usage Instructions

Read Before the First Flight

Before using the DJI Mini SE for the first time, it is important to read and understand the following documents:

1. In the Box
2. User Manual
3. Quick Start Guide
4. Disclaimer and Safety Guidelines

We recommend watching all tutorial videos on the official DJI website and reading the disclaimer and safety guidelines before using the product for the first time. Review the quick start guide for initial setup and refer to the user manual for more detailed information.

Download the DJI Fly App

To operate the DJI Mini SE, you need to download and use the DJI Fly app. Follow these steps:

1. Scan the QR code on the right to download the latest version of DJI Fly.

2. If you have an Android device, ensure it is running Android v6.0 or later. If you have an iOS device, ensure it is running iOS v10.0.2 or later.

Video Tutorials

Visit the following link or access the Academy section in the DJI Fly app to watch tutorial videos on how to safely use the DJI Mini SE: <https://www.dji.com/mini-se/video>

Product Profile

The DJI Mini SE is equipped with a Downward Vision System and Infrared Sensing System, allowing it to hover and fly both indoors and outdoors. It also features a fully stabilized 3-axis gimbal and a 1/2.3" sensor camera capable of shooting 2.7K video and capturing 12 MP photos.

Components:

- Aircraft
- Remote Controller
- **Aircraft Activation**

Before using the DJI Mini SE, you need to activate it. Follow the instructions provided in the user manual for the activation process.

- **Flight Modes**

The DJI Mini SE offers various flight modes for different purposes. Refer to the user manual for detailed explanations of each flight mode and how to switch between them.

- **Aircraft Status Indicator**

The aircraft is equipped with a status indicator that provides important information about its current state. Familiarize yourself with the different status indicators by referring to the user manual.

- **Return to Home**

The DJI Mini SE has a Return to Home feature that allows it to automatically return to its takeoff location. Learn how to activate and use this feature in the user manual.

- **Vision System and Infrared Sensing System**

The Downward Vision System and Infrared Sensing System enable the DJI Mini SE to navigate and avoid obstacles. Understand how these systems work and their limitations by referring to the user manual.

- **Intelligent Flight Mode**

The DJI Mini SE offers Intelligent Flight Modes that enhance your flying experience. Explore the different modes available and learn how to use them effectively in the user manual.

- **Flight Recorder**

The Flight Recorder feature allows you to record flight data for analysis and review. Learn how to access and use this feature in the user manual.

- **Propellers**

The DJI Mini SE is equipped with propellers that need to be properly installed and maintained. Refer to the user manual for instructions on propeller installation, removal, and maintenance.

- **Intelligent Flight Battery**

The Intelligent Flight Battery powers the DJI Mini SE. Understand how to handle, charge, and maintain the battery for optimal performance and safety. Detailed instructions can be found in the user manual.

- **Gimbal and Camera**

The fully stabilized 3-axis gimbal and 1/2.3" sensor camera are essential components of the DJI Mini SE. Learn

how to operate and adjust the gimbal, as well as capture videos and photos, by following the instructions in the user manual.

- **Remote Controller**

The remote controller allows you to control the DJI Mini SE during flight. Familiarize yourself with the remote controller's layout, buttons, and functions by referring to the user manual.

- **Using the Remote Controller**

Learn how to properly use the remote controller to control the DJI Mini SE. The user manual provides step-by-step instructions on connecting, calibrating, and operating the remote controller.

- **Optimal Transmission Zone**

To ensure a stable and reliable connection between the remote controller and the DJI Mini SE, operate within the optimal transmission zone. The user manual provides guidance on maintaining a good connection during flight.

- **Linking the Remote Controller**

If you encounter connection issues between the remote controller and the DJI Mini SE, follow the instructions in the user manual to link them properly.

- **DJI Fly App**

The DJI Fly app is essential for controlling and accessing additional features of the DJI Mini SE. Understand how to navigate the app and utilize its various functions by referring to the user manual.

- **Home**

The home screen of the DJI Fly app provides access to important information and features. Familiarize yourself with the layout and functions of the home screen by following the instructions in the user manual.

- **Camera View**

The camera view in the DJI Fly app allows you to see what the DJI Mini SE's camera is capturing. Learn how to access, adjust settings, and capture photos and videos using the camera view by referring to the user manual.

- **Flight**

The flight section of the DJI Fly app provides controls and information related to flying the DJI Mini SE. Understand how to use the flight controls, access flight data, and adjust flight settings by following the instructions in the user manual.

- **Flight Environment Requirements**

Ensure that you meet the necessary flight environment requirements before operating the DJI Mini SE. The user manual provides guidelines on suitable weather conditions, flight areas, and other factors to consider for a safe and successful flight.

- **Flight Limits and GEO Zones**

Be aware of the flight limits and GEO (Geospatial Environment Online) zones when flying the DJI Mini SE. Understand the restrictions and regulations associated with different areas by referring to the user manual.

- **Pre-Flight Checklist**

Prior to each flight, it is crucial to perform a pre-flight checklist to ensure the DJI Mini SE is in optimal condition for safe operation. The user manual provides a detailed pre-flight checklist that should be followed every time before flying.

- **Auto Takeoff/Landing**

The DJI Mini SE supports automatic takeoff and landing features. Learn how to use these features safely and effectively by following the instructions in the user manual.

- **Starting/Stopping the Motors**

Understanding how to start and stop the motors of the DJI Mini SE is essential for safe operation. Refer to the user manual for step-by-step instructions on starting and stopping the motors.

- **Flight Test**

Performing a flight test is recommended after initial setup or firmware updates. Follow the flight test procedures outlined in the user manual to ensure the proper functionality of the DJI Mini SE.

- **Appendix**

The appendix section of the user manual provides additional information and resources for using the DJI Mini SE. Topics covered may include specifications, compass calibration, firmware updates, after-sales information, and more.

FAQ

- **Q: What are the system requirements for the DJI Fly app?**

A: The DJI Fly app is compatible with Android v6.0 and later and iOS v10.0.2 and later.

- **Q: Where can I find tutorial videos on how to use the DJI Mini SE?**

A: You can watch tutorial videos on the official DJI website or access them through the Academy section in the DJI Fly app.

- **Q: What is the maximum flight range of the DJI Mini SE without an app connection?**

A: The flight range is limited to 164 ft (50 m) when not connected or logged into the app.

Searching for Keywords

Search for keywords such as “battery” and “install” to find a topic. If you are using Adobe Acrobat Reader to read this document, press Ctrl+F on Windows or Command+F on Mac to begin a search.

Navigating to a Topic

 
View a complete list of topics in the table of contents. Click on a topic to navigate to that section.

Printing this Document

This document supports high-resolution printing.

Using this Manual

Legend



Warning



Important



Hints and Tips



Reference

Read Before the First Flight

Read the following documents before using the DJITM Mini SE:

1. In the Box
2. User Manual
3. Quick Start Guide
4. Disclaimer and Safety Guidelines

It is recommended to watch all tutorial videos on the official DJI website and read the disclaimer and safety

guidelines before using for the first time. Prepare for your first flight by reviewing the quick start guide and refer to this user manual for more information.

Download the DJI Fly App

- Make sure to use DJI Fly during flight. Scan the QR code on the right to download the latest version.
- The Android version of DJI Fly is compatible with Android v6.0 and later. The iOS version of DJI Fly is compatible with iOS v10.0.2 and later.



Video Tutorials

Go to the address below or go to Academy in DJI Fly to watch the DJI Mini SE tutorial videos, which demonstrate how to use the DJI Mini SE safely: <https://www.dji.com/mini-se/video>.



For increased safety, the flight is restricted to a height of 98.4 ft (30 m) and a range of 164 ft (50 m) when not connected or logged into the app during flight. This applies to DJI Fly and all apps compatible with DJI aircraft.

The operating temperature of this product is 0° to 40° C. It does not meet the standard operating temperature for military-grade applications (-55° to 125° C), which is required to endure greater environmental variability. Operate the product appropriately and only for applications that it meet the operating temperature range requirements of that grade.

Product Profile

This section introduces DJI Mini SE and lists the components of the aircraft and remote controller.

Introduction

Featuring a Downward Vision System and Infrared Sensing System, DJI Mini SE can hover and fly indoors as well as outdoors and Return to Home automatically. With a fully stabilized 3-axis gimbal and 1/2.3" sensor camera, DJI Mini SE shoots 2.7K video and 12 MP photos.

Feature Highlights

- DJI Mini SE boasts a foldable design and an ultralight weight of less than 249 g. The Intelligent Flight Mode QuickShots provide four sub modes, which can automatically shoot and generate different styles of video.
- Using the advanced DJI flight controller, DJI Mini SE is able to provide a safe and reliable flight experience.


The aircraft is able to automatically return to its Home Point when the remote controller signal is lost or the battery level is low, as well as being able to hover indoors at low altitudes.

- DJI's enhanced Wi-Fi technology is built into the remote controller, supporting both 2.4 GHz and 5.8 GHz frequencies and a transmission range of up to 2.49 mi (4 km), making it possible to stream 720p video to your mobile device.
- DJI Mini SE has a maximum flight speed of 29 mph (46.8 kph) and a maximum flight time of 30 minutes, while the maximum runtime of the remote controller is 4.5 hours.
 - Maximum flight time was tested in an environment with no wind while flying at a consistent 10.5 mph (17 kph) and the maximum flight speed was tested at sea level altitude with no wind. These values are for reference only.
 - The remote controller reaches its maximum transmission distance (FCC) in a wide-open area with no electromagnetic interference at an altitude of approx. 400 ft (120 m). The maximum transmission distance refers to the maximum distance that the aircraft can still send and receive transmissions. It does not refer to the maximum distance the aircraft can fly in a single flight. The maximum runtime was tested in a laboratory environment and without charging the mobile device. This value is for reference only.
 - 5.8 GHz is not supported in some regions. This frequency band will automatically be disabled in these regions. Observe local laws and regulations.


Preparing the Aircraft



All aircraft arms are folded before the aircraft is packaged. Follow the steps below to unfold the aircraft arms.

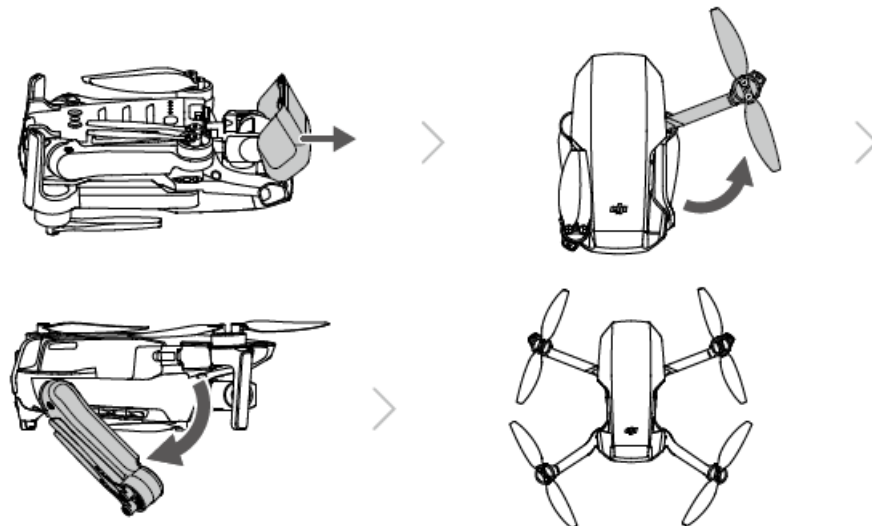1. Remove the gimbal cover from the camera.
2. Unfold the front arms.
3. Unfold the rear arms and then unfold all the propellers.

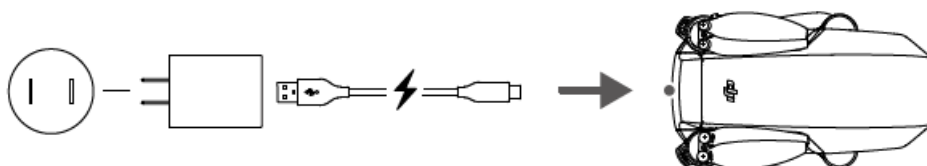


4. All Intelligent Flight Batteries are in hibernation mode before shipment to ensure safety. Use the USB charger to charge and activate Intelligent Flight Batteries for the first time. It is recommended to use a USB charger with a power of 18W or higher for fast-charging.



-  It is recommended to install a gimbal protector to protect the gimbal when the aircraft is not in use.
-  Unfold the front arms before unfolding the rear arms.
- Make sure the gimbal cover is removed and all arms are unfolded before powering on the aircraft. Otherwise, it may affect the aircraft's self-diagnostics.


Preparing the Remote Controller

1. Unfold the mobile device clamps and the antennas.
2. Remove the control sticks from their storage slots on the remote controller and screw them into place.
3. Choose an appropriate remote controller cable based on the type of mobile device. A Lightning connector cable, Micro USB cable, and USB-C cable are included in the packaging. Connect the end of the cable with the DJI logo to the remote controller and the other end of the cable to your mobile device. Secure your mobile device by pushing both clamps inward.

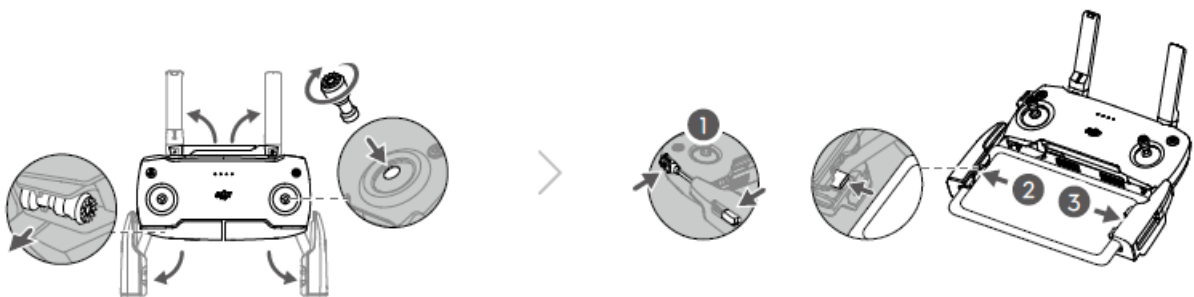

- If a USB connection prompt appears when using an Android mobile device, select the option to charge only. Otherwise, it may result in connection failure.


Aircraft Diagram

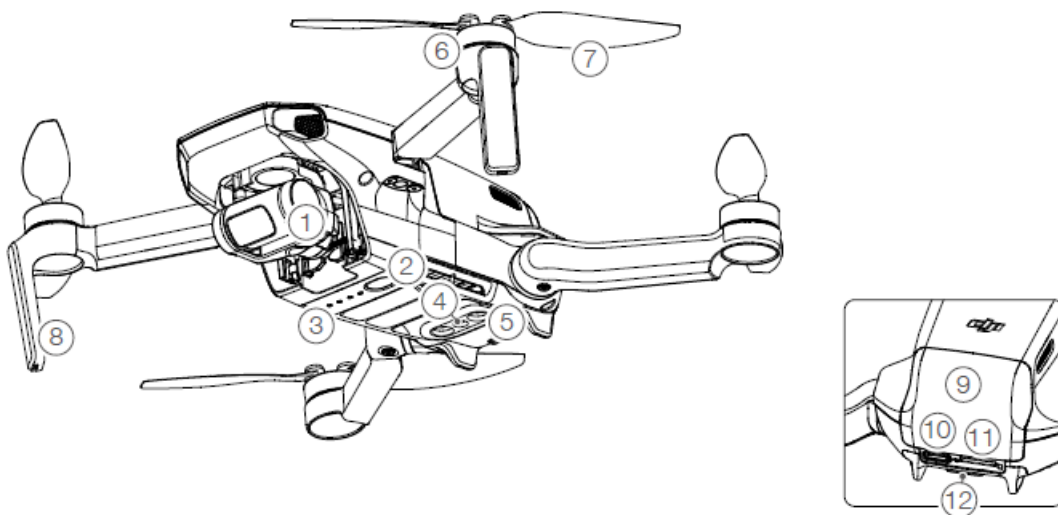

1. Gimbal and Camera
2. Power Button
3. Battery Level LEDs
4. Downward Vision System
5. Infrared Sensing System
6. Motors

7. Propellers
8. Antennas
9. Battery Compartment Cover
10. Charging Port (USB-C)
11. microSD Card Slot
12. Aircraft Status Indicator

Remote Controller Diagram

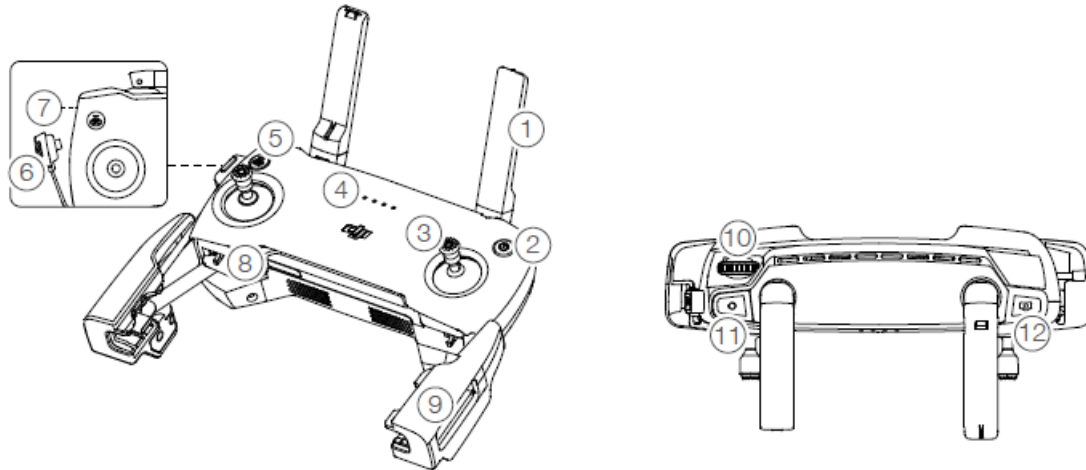

1. Antennas

Relay aircraft control and video wireless signals.

2. Power Button

Press once to check the current battery level. Press once, then again, and hold to turn the remote controller on or off.

3. Control Sticks

Use the control sticks to control the aircraft movements. Set the flight control mode in DJI Fly. The control sticks are removable and easy to store.

4. Battery Level LEDs

Displays the current battery level of the remote controller.

5. Flight Pause and Return to Home (RTH) Button

Press once to make the aircraft brake. If the aircraft is performing a QuickShot, Intelligent RTH, or auto landing, press once to make the aircraft exit the procedure and hover in place. Press and hold the button to initiate RTH. The aircraft returns to the last recorded Home Point. Press again to cancel RTH.

6. Remote Controller Cable

Connect to a mobile device for video linking via the remote controller cable. Select the cable according to the mobile device.

7. Video-Downlink/Power Port (Micro USB)

Connect to a mobile device for video linking via the remote controller cable. Connect to the USB charger to charge the remote controller battery.

8. Control Sticks Storage Slots

For storing the control sticks.

9. Mobile Device Clamps

Used to securely mount your mobile device to the remote controller.

10. **Gimbal Dial**

Controls the camera's tilt.

11. **Record Button**

In video mode, press once to start recording. Press again to stop recording. In photo mode, press once to switch to video mode.

12. **Shutter Button**

In photo mode, press once to take a photo according to the mode selected in DJI Fly. In video mode, press once to switch to photo mode.

Activation

DJI Mini SE requires activation before using for the first time. After powering on the aircraft and remote controller, follow the on-screen instructions to activate DJI Mini SE using DJI Fly. An internet connection is required for activation.

Aircraft

DJI Mini SE contains a flight controller, video downlink system, vision system, propulsion system, and an Intelligent Flight Battery.


Flight Modes

- **DJI Mini SE has three flight modes:** Position, Sport, and CineSmooth. Users can switch between modes in DJI Fly.
- **Position Mode:** Position mode works best when the GPS signal is strong. The aircraft utilizes GPS and the Vision System to locate itself and stabilize. Intelligent Flight Mode is enabled in this mode. When the Downward Vision System is enabled and lighting conditions are sufficient, the maximum flight altitude angle is 20° and the maximum flight speed is 8 m/s.
- The aircraft automatically changes to Attitude (ATTI) mode when the Vision System is unavailable or disabled and when the GPS signal is weak or the compass experiences interference. When the Vision System is unavailable, the aircraft cannot position itself or brake automatically, which increases the risk of potential flight hazards. In ATTI mode, the aircraft may be more easily affected by its surroundings. Environmental factors such as wind can result in horizontal shifting, which may present hazards, especially when flying in confined spaces.
- **Sport Mode:** In Sport mode, the aircraft uses GPS and Vision System for positioning. In Sport mode, aircraft responses are optimized for agility and speed making it more responsive to control stick movements. The maximum flight speed is 13 m/s, maximum ascent speed is 4 m/s, and maximum descent speed is 3 m/s.
- **CineSmooth Mode:** CineSmooth mode is based on Position mode and the flight speed is limited, making the aircraft more stable during shooting. The maximum flight speed is 4 m/s, maximum ascent speed is 1.5 m/s, and maximum descent speed is 1 m/s.
 - The aircraft's maximum speed and braking distance significantly increase in Sport mode. A minimum braking distance of 30 m is required in windless conditions.
 - Descent speed significantly increases in Sport mode. A minimum braking distance of 10 m is required in windless conditions.
 - The aircraft's responsiveness significantly increases in Sport mode, which means a small control stick

movement on the remote controller translates into the aircraft moving a large distance. Be vigilant and maintain adequate maneuvering space during flight.

Aircraft Status Indicator

The aircraft status indicator is located at the rear of the aircraft. It communicates the status of the aircraft's flight control system. Refer to the table below for more information about the aircraft status indicator.

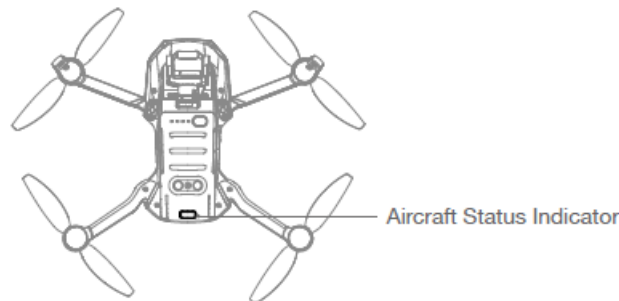



Aircraft Status Indicator States



Normal States	Color	Blinking/Solid	Description of Aircraft State
	Alternating red, green, and yellow	Blinking	Powering on and performing self-diagnostic tests
	Yellow	Blinks four times	Warming up
	Green	Blinking slowly	P-mode with GPS
	Green	Periodically blinks twice	P-mode with Downward Vision System
	Yellow	Blinking slowly	No GPS, or Downward Vision System (ATTI mode)
	Green	Blinking quickly	Braking
Warning States			
	Yellow	Blinking quickly	Remote controller signal lost
	Red	Blinking slowly	Low battery
	Red	Blinking quickly	Critically low battery
	Red	Blinking	IMU error
	Red	Solid	Critical error
	Alternating red and yellow	Blinking quickly	Compass calibration required

Return to Home

The Return to Home (RTH) function brings the aircraft back to the last recorded Home Point. There are three types of RTH: Smart RTH, Low Battery RTH, and Failsafe RTH. This section describes these three types of RTH in detail. RTH will also be triggered if the video link is disconnected.

	GPS	Description
Home Point		The default Home Point is the first location where the aircraft received a strong or moderately strong GPS signal (where the icon shows white). It is recommended to wait until the Home Point is successfully recorded before flying. After the Home Point is recorded, the aircraft status indicator blinks green and a prompt appears in DJI Fly. If it is necessary to update the Home Point during the flight (such as if the user changes position), the Home Point can be manually updated under Safety in System Settings on DJI Fly..

Smart RTH

If the GPS signal is sufficiently strong, Smart RTH can be used to bring the aircraft back to the Home Point. Smart RTH is initiated either by tapping  in DJI Fly or by pressing and holding the RTH button on the remote controller. Exit Smart RTH by tapping  in DJI Fly or by pressing the RTH button on the remote controller.

Low Battery RTH

- Low Battery RTH is triggered when the Intelligent Flight Battery is depleted to the point that the safe return of the aircraft may be affected. Return home or land the aircraft immediately when prompted.
- DJI Fly displays a warning when the battery level is low. The aircraft will automatically return to the Home Point if no action is taken after a 10-second countdown.
- The user can cancel RTH by pressing the RTH button on the remote controller. If RTH is canceled following a low battery level warning, the Intelligent Flight Battery may not have enough power for the aircraft to land safely, which may lead to the aircraft crashing or being lost.
- The aircraft will land automatically if the current battery level can only support the aircraft long enough to descend from its current altitude. The user cannot cancel the auto landing but can use the remote controller to alter the aircraft's direction during the landing process.

Failsafe RTH

If the Home Point was successfully recorded and the compass is functioning normally, Failsafe RTH automatically activates after the remote controller signal is lost for more than 11 seconds.


Other RTH Scenarios

If the video link signal is lost during flight while the remote controller is still able to control the movements of the aircraft, there will be a prompt to initiate RTH. RTH can be cancelled.

RTH Procedure

1. The Home Point is recorded.
2. RTH is triggered.
3. If the altitude is lower than 20 m, the aircraft ascends to the RTH altitude or 20 m, and then adjusts its orientation. If the altitude is higher than 20 m, the aircraft adjusts its orientation immediately.
4. If the aircraft is further than 20 m from the Home Point when the RTH procedure begins, it ascends to the preset RTH altitude and flies to the Home Point at a speed of 8 m/s. If the current altitude is higher than the RTH altitude, the aircraft flies to the Home Point at the current altitude.
If the aircraft is less than 20 m from the Home Point when the RTH procedure begins, it lands immediately.
5. After reaching the Home Point, the aircraft lands and the motors stop.

FailSafe RTH Illustration

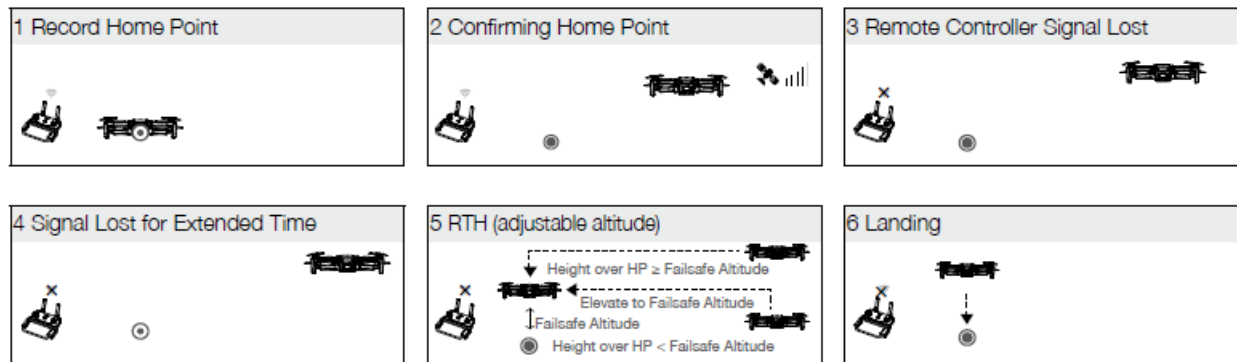

- The aircraft cannot return to the Home Point if the GPS signal is weak or unavailable. If the GPS signal becomes weak or unavailable after RTH is triggered, the aircraft will hover in place for a while, and then start landing.
- It is important to set a suitable RTH altitude before each flight. Launch DJI Fly, and then set the RTH altitude. In Smart RTH and Low Battery RTH, the aircraft automatically ascends to the RTH altitude. If the aircraft is at an altitude of 65 ft (20 m) or higher and has not yet reached the RTH altitude, the throttle stick can be moved to stop the aircraft from ascending. The aircraft will fly directly to the Home Point at its current altitude.
- During RTH, the aircraft's speed, altitude, and orientation can be controlled using the remote controller if the remote controller signal is normal, but the direction of flight cannot be controlled.
- GEO zones will affect RTH. If the aircraft flies into a GEO zone during RTH it will hover in place.
- The aircraft may not be able to return to a Home Point when the wind speed is too high. Fly with caution.


Landing Protection

Landing Protection will activate during Smart RTH.

1. During Landing Protection, the aircraft will automatically detect and gently land on suitable ground.
2. If Landing Protection determines that the ground is not suitable for landing, DJI Mini SE will hover and wait for pilot confirmation.
3. If Landing Protection is not operational, DJI Fly will display a landing prompt when DJI Mini SE descends below 0.5 meters. Pull down on the throttle stick or use the auto landing slider to land.


Vision System and Infrared Sensing System

DJI Mini SE is equipped with a Downward Vision System and Infrared Sensing System. The Downward Vision System consists of one camera and the Infrared Sensing System consists of two 3D infrared modules. The Downward Vision System and Infrared Sensing System help the aircraft maintain its current position, hover in place more precisely, and to fly indoors or in other environments where GPS is unavailable.

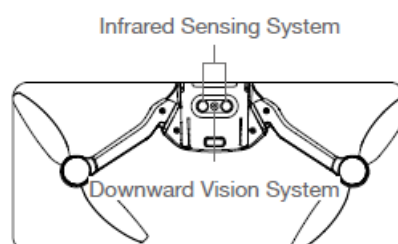


Detection Fields

The Downward Vision System works best when the aircraft is at an altitude of 0.5 to 10 m, and its operating range is 0.5 to 30 m.

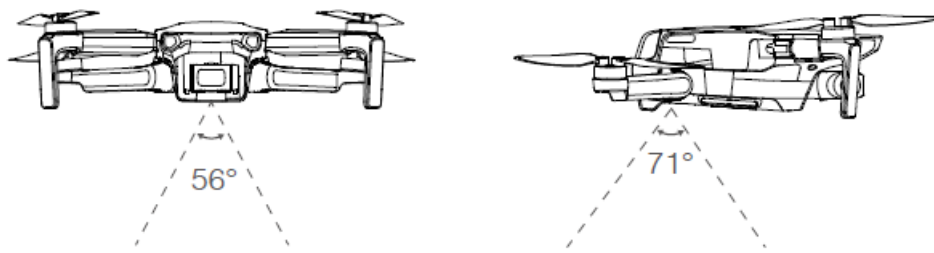

Using the Vision System

When GPS is unavailable, the Downward Vision System is enabled if the surface has a discernable surface and sufficient light. The Downward Vision System works best when the aircraft is at an altitude of 0.5 to 10 m. If the aircraft's altitude is above 10 m, the Vision System may be affected, so extra caution is required.

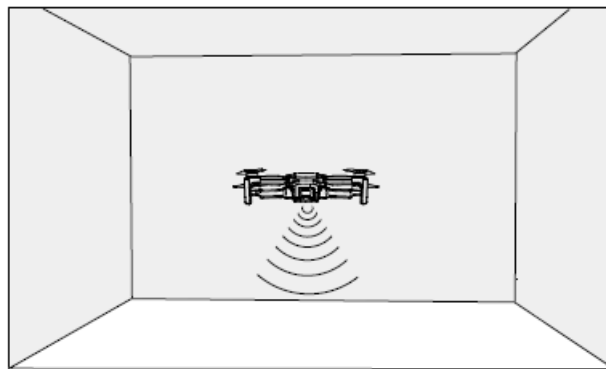





Follow the steps below to use the Downward Vision System

1. Make sure the aircraft is on a flat surface. Power on the aircraft.
 2. The aircraft hovers in place after takeoff. The aircraft status indicator blinks green twice, which indicates the Downward Vision System is working.
- The max hover altitude of the aircraft is 5 m if there is no GPS. The Vision System works best when the aircraft is at an altitude from 0.5 to 10 m. If the altitude of the aircraft is above 10 m, the Vision System may be affected, so extra caution is required.
 - The Vision System may not function properly when the aircraft is flying over water or snow-covered areas.
 - Note that the Vision System may not function properly when the aircraft is flying too fast. Fly with caution when flying at over 10 m/s at 2 m (6.6 ft) or over 5 m/s at 1 m (3.3 ft).
 - The Vision System cannot work properly over surfaces that do not have clear pattern variations. The Vision System cannot work properly in any of the following situations. Operate the aircraft cautiously.
 - Flying over monochrome surfaces (e.g., pure black, pure white, pure green).
 - Flying over highly reflective surfaces.
 - Flying over water or transparent surfaces.
 - Flying over moving surfaces or objects.
 - Flying in an area where the lighting changes frequently or drastically.
 - Flying over extremely dark (< 10 lux) or bright (> 40,000 lux) surfaces.

- Flying over surfaces that strongly reflect or absorb infrared waves (e.g., mirrors).
- Flying over surfaces without clear patterns or texture.
- Flying over surfaces with repeating identical patterns or textures (e.g., tiles with the same design).
- Flying over obstacles with small surface areas (e.g., tree branches).
- Keep the sensors clean at all times. DO NOT tamper with the sensors. DO NOT use the aircraft in an environment with dust and humidity. DO NOT obstruct the Infrared Sensing System.
- DO NOT fly on days that are rainy, smoggy, or if there is limited visibility.
- Check the following every time before takeoff:
 - Make sure there are no stickers or any other obstructions over the Infrared Sensing and Vision System.
 - If there is any dirt, dust, or water on the Infrared Sensing and Vision System, clean it with a soft cloth. Do not use any cleanser that contains alcohol.
 - Contact DJI Support if there is any damage to the glass of the Infrared Sensing and Vision System.


Intelligent Flight Mode

DJI Mini SE supports QuickShots Intelligent Flight Mode. QuickShots shooting modes include Dronie, Rocket, Circle, and Helix. DJI Mini SE records a video according to the selected shooting mode and automatically generates videos approximately 15 seconds long. The video can be viewed, edited, or shared on social media from playback.


-  **Dronie:** The aircraft flies backward and ascends, with the camera locked on the subject.
-  **Rocket:** The aircraft ascends with the camera pointing downward.
-  **Circle:** The aircraft circles around the subject.
-  **Helix:** The aircraft ascends and spirals around the subject.


Using QuickShots

1. Make sure that the Intelligent Flight Battery is sufficiently charged. Take off and hover at least 6.6 ft (2 m) above the ground.

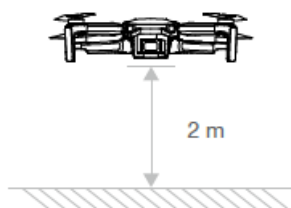

2. In DJI Fly, tap to select QuickShots and follow the prompts. Make sure that the user understands how to use the shooting mode and that there are no obstacles in the surrounding area.
3. Select your target subject in the camera view by tapping the circle on the subject or dragging a box around the subject. Choose a shooting mode and tap “Start” to begin recording. The aircraft flies back to its original position once shooting is finished.

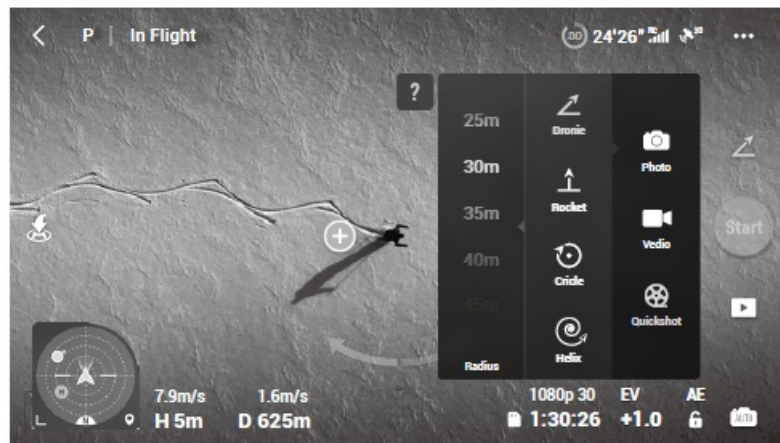

4. Tap  to access the video. The video can be edited and shared on social media after downloading to your phone.

Exiting QuickShots

Press the Flight Pause/RTH button once or tap the  in DJI Fly to exit QuickShots. The aircraft will hover in place.



- Use QuickShots at locations that are clear of buildings and other obstacles. Make sure that there are no humans, animals, or other obstacles in the flight path.
- Pay attention to objects around the aircraft and use the remote controller to avoid accidents with the aircraft.
- DO NOT use QuickShots in any of the following situations:
 - When the subject is blocked for an extended period or outside the line of sight.
 - When the subject is more than 50 m away from the aircraft.
 - When the subject is similar in color or pattern with the surroundings.
 - When the subject is in the air.
 - When the subject moves fast.
 - The lighting is extremely low (< 300 lux) or high ($> 10,000$ lux).
- DO NOT use QuickShots in places that are close to buildings or where the GPS signal is weak. Otherwise, the flight path may be unstable.
- Make sure to follow local privacy laws and regulations when using QuickShots.

Flight Recorder

Flight data including flight telemetry, aircraft status information, and other parameters are automatically saved to the internal data recorder of the aircraft. The data can be accessed using DJI Assistant 2 (Consumer Drones Series).


Propellers

There are two types of DJI Mini SE propellers, which are designed to spin in different directions. Marks are used to indicate which propellers should be attached to which motors. The two blades attached to one motor are the same.

Propellers	With marks	Without marks
Illustration		
Mounting Position	Attach to the motors of the arms with marks	Attach to the motors of the arms without marks

Attaching the Propellers

Attach the propellers with marks to the motors of the arm with marks and the unmarked propellers to the motors of the arm without marks. Use the screwdriver to mount the propellers. Make sure the propellers are secure.

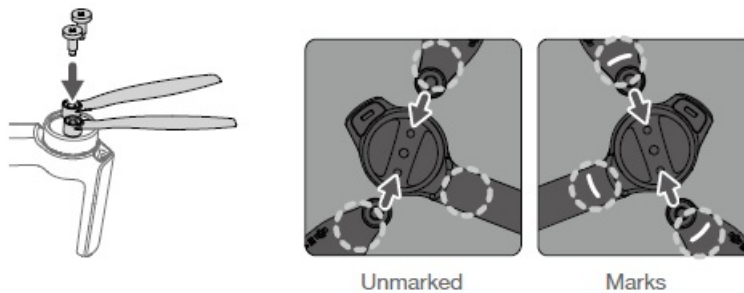

Detaching the Propellers

Use the screwdriver to detach the propellers from the motors.

- Propeller blades are sharp. Handle with care.
- The screwdriver is only used to mount the propellers. DO NOT use the screwdriver to disassemble the aircraft.
- If a propeller is broken, remove the two propellers and screws on the corresponding motor and discard them. Use two propellers from the same package. DO NOT mix with propellers from other packages.
- Only use official DJI propellers. DO NOT mix propeller types.
- Purchase the propellers separately if necessary.
- Make sure that the propellers are installed securely before each flight. Check if the screws on the propellers are tightened every 30 hours of flight time (approx. 60 flights).
- Make sure all propellers are in good condition before each flight. DO NOT use aged, chipped, or broken propellers.
- To avoid injury, stand clear of and do not touch propellers or motors when they are spinning.
- DO NOT squeeze or bend the propellers during transportation or storage.
- Make sure the motors are mounted securely and rotating smoothly. Land the aircraft immediately if a motor is stuck and unable to rotate freely.
- DO NOT attempt to modify the structure of the motors.
- DO NOT touch or let your hands or body come in contact with the motors after flight as they may be hot. DO NOT block any of the ventilation holes on the motors or the body of the aircraft.
- Make sure the ESCs sound normal when powered on.

Intelligent Flight Battery

The DJI Mini SE Intelligent Flight Battery is a 7.7 V, 2250 mAh battery with smart charging and discharging functionality.


Battery Features

1. **Balanced Charging:** during charging, the voltages of the battery cells are automatically balanced.
2. **Auto-Discharging Function:** to prevent swelling, the battery automatically discharges to approx. 96% of the battery level when it is idle for one day, and automatically discharges to approx. 72% of the battery level when it is idle for nine days. It is normal to feel moderate heat being emitted from the battery during the discharging process.
3. **Overcharge Protection:** the battery stops charging automatically once fully charged.

4. **Temperature Detection:** To prevent damage, the battery only charges when the temperature is between 5° and 40° C (41° and 104° F). Charging stops automatically if the temperature of the battery exceeds 50° C (122° F) during the charging process.
5. **Overcurrent Protection:** the battery stops charging if an excess current is detected.
6. **Over-discharge Protection:** discharging stops automatically to prevent excess discharge when the battery is not in flight use. Over-discharge protection is not enabled when the battery is in flight use.
7. **Short Circuit Protection:** the power supply is automatically cut if a short circuit is detected.
8. **Battery Cell Damage Protection:** DJI Fly displays a warning prompt when a damaged battery cell is detected.
9. **Hibernation Mode:** if the battery cell voltage is lower than 3.0 V or the battery level is less than 10%, the battery enters Hibernation mode to prevent over-discharge. Charge the battery to wake it from hibernation.
10. **Communication:** information about the voltage, capacity, and current of the battery is transmitted to the aircraft.
 - Refer to the DJI Mini SE Disclaimer and Safety Guidelines before use. Users take full responsibility for all operations and usage.

Using the Battery

Insert the battery in the battery compartment and secure the battery clamp. A clicking sound indicates the battery is fully engaged. Make sure that the battery is fully inserted and the battery cover is secure in place.

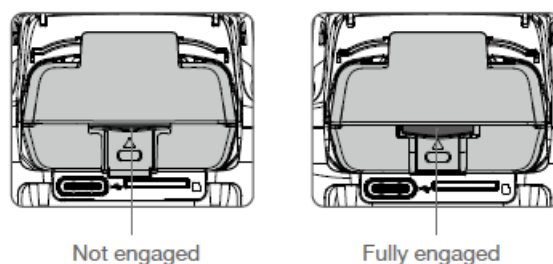


Press the battery clamp and detach the battery from the battery compartment to remove it.

- DO NOT detach the battery when the aircraft is powering on.
- Make sure that the battery is mounted firmly.

Checking Battery Level

Press the power button once to check the battery level.

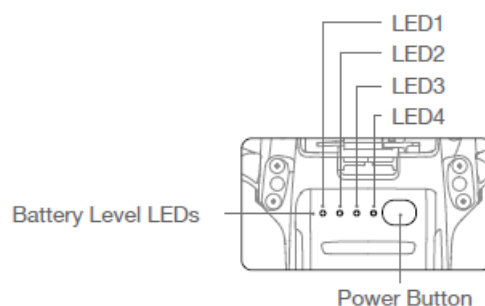

Battery Level LEDs				
○ : LED is on. ☀ : LED is flashing. ○ : LED is off.				
LED1	LED2	LED3	LED4	Battery Level
○	○	○	○	battery level > 88%
○	○	○	☀	75% < battery level ≤ 88%
○	○	○	○	63% < battery level ≤ 75%
○	○	☀	○	50% < battery level ≤ 63%
○	○	○	○	38% < battery level ≤ 50%
○	☀	○	○	25% < battery level ≤ 38%
○	○	○	○	13% < battery level ≤ 25%
☀	○	○	○	0% < battery level ≤ 13%

Powering On/Off

- Press the power button once, then press again, and hold for two seconds to turn the battery on or off. The battery level LEDs display the battery level when the aircraft is powered on.
- Press the power button once and the four battery level LEDs will blink for three seconds. If LED 3 and 4 blink simultaneously without pressing the power button, this indicates the battery is abnormal.


Low Temperature Notice

1. Battery capacity is significantly reduced when flying in low-temperature environments of 32° to 41° F (0° to 5° C). It is recommended to hover the aircraft in place temporarily to heat the battery. Make sure to fully charge the battery before takeoff.
2. To ensure the optimal performance of the battery, keep the battery temperature above 68° F (20° C).
3. The reduced battery capacity in low-temperature environments reduces the wind speed resistance performance of the aircraft. Fly with caution.
4. Fly with extra caution at high sea levels.
 - In cold environments, insert the battery into the battery compartment and turn on the aircraft to warm up before taking off.

Charging the Battery


Fully charge the Intelligent Flight Battery before using for the first time.

1. Connect the USB charger to an AC power supply (100-240V, 50/60 Hz). Use a power adapter if necessary.
2. Attach the aircraft to the USB charger.
3. The battery level LEDs display the current battery level during charging.
4. The Intelligent Flight Battery is fully charged when all the battery level LEDs are on. Detach the USB charger when the battery is fully charged.

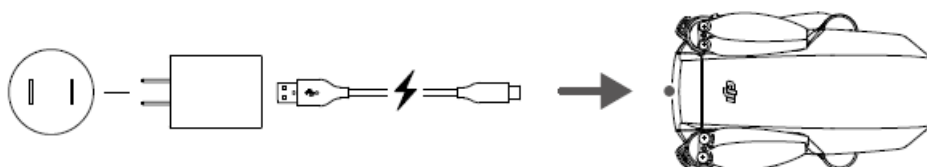

















- The battery cannot be charged if the aircraft is powered on and the aircraft cannot be powered on during


charging.

- DO NOT charge an Intelligent Flight Battery immediately after flight as the temperature may be too high. Wait until it cools down to room temperature before charging again.
- The charger stops charging the battery if the battery cell temperature is not within the operating range of 41° to 104° F (5° to 40° C). The ideal charging temperature is 71.6° to 82.4° F (22° to 28° C).
- The Battery Charging Hub (not included) can charge up to three batteries. Visit the official DJI Online Store to learn more.
- Fully charge the battery at least once every three months to maintain battery health.
- It is recommended to use a QC2.0 USB charger to charge. DJI does not take any responsibility for damage caused by using a charger that does not meet the specific requirements.
-  When using the DJI 18W USB charger, the charging time is approximately 1 hour and 22 minutes.
- It is recommended to discharge the Intelligent Flight Batteries to 30% or lower. This can be done by flying the aircraft outdoors until there is less than 30% charge left.

Battery Level LEDs During Charging

















The table below shows the battery level during charging.

LED1	LED2	LED3	LED4	Battery Level
				0% < battery level ≤ 50%
				50% < battery level ≤ 75%
				75% < battery level < 100%
				Fully charged

-  The blinking frequency of the battery-level LEDs will be different when using different USB chargers. If the charging speed is fast, the battery-level LEDs will blink quickly. If the charging speed is extremely slow, the battery-level LEDs will blink slowly (once every two seconds). It is recommended to change the Micro USB cable or USB charger.
- If there is no battery in the aircraft, LEDs 3 and 4 will blink three times alternatively.
- The four LEDs blink simultaneously to indicate the battery is damaged.

Battery Protection Mechanisms

The battery LED indicator can display battery protection indications triggered by abnormal charging conditions.

Battery Protection Mechanisms					
LED1	LED2	LED3	LED4	Blinking Pattern	Battery Protection Item
				LED2 blinks twice per second	Overcurrent detected
				LED2 blinks three times per second	Short circuit detected
				LED3 blinks twice per second	Overcharge detected
				LED3 blinks three times per second	Over-voltage charger detected

○	○	○	☀	LED4 blinks twice per second	Charging temperature is too low
○	○	○	☀	LED4 blinks three times per second	Charging temperature is too high


If the charging temperature protection is enabled, the battery will resume charging once the temperature has returned to within the allowable range. If one of the other battery protection mechanisms activate, in order to resume charging it is necessary to press the button to power off the battery, unplug the battery from the charger, and then plug it in again. If the charging temperature is abnormal, wait for the charging temperature to return to normal, and the battery will automatically resume charging without the need to unplug and plug in the charger again.

Gimbal and Camera

Gimbal Profile

DJI Mini SE's 3-axis gimbal provides stabilization for the camera, allowing you to capture clear and stable images and video. Use the gimbal dial on the remote controller to control the camera's tilt. Alternatively, enter the camera view in DJI Fly. Press the screen until a circle appears and drag the circle up and down to control the camera's tilt.

The gimbal has a tilt range of -90° to $+20^{\circ}$ by enabling "Allow Upward Gimbal Rotation" in DJI Fly. The default control range is -90° to 0° .

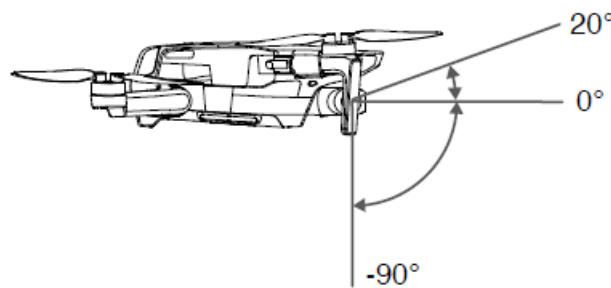

Gimbal Operation Modes

Two gimbal operation modes are available. Switch between the different operation modes in DJI Fly.

- **Follow Mode:** The angle between the gimbal's orientation and aircraft front remains constant at all times.
- **FPV Mode:** The gimbal synchronizes with the movement of the aircraft to provide a first-person flying experience.
 - Make sure there are no stickers or objects on the gimbal before taking off. When the aircraft is powered on, DO NOT tap or knock the gimbal. Take off from open and flat ground in order to protect the gimbal.
 - Precision elements in the gimbal may be damaged in a collision or impact, which may cause the gimbal to function abnormally.
 - Avoid getting dust or sand on the gimbal, especially in the gimbal motors.
 - A gimbal motor error may occur in the following situations:
 - The aircraft is on uneven ground or the gimbal is obstructed.
 - The gimbal experiences excessive external force, such as a collision.
 - DO NOT apply external force to the gimbal after the gimbal is powered on. DO NOT add any extra payload to the gimbal as this may cause the gimbal to function abnormally or even lead to permanent motor damage.
 - Make sure to remove the gimbal cover before powering on the aircraft. Also, make sure to mount the

gimbal cover when the aircraft is not in use.

- Flying in heavy fog or clouds may make the gimbal wet, leading to temporary failure. The gimbal recovers full functionality once it is dry.

Camera Profile

DJI Mini SE uses a 1/2.3" CMOS sensor camera, which can shoot up to 2.7K video and 12 MP photos, and supports shooting modes such as Single Shot and Interval.

The aperture of the camera is f/2.8 and can focus from 1 m to infinity.

- Make sure the temperature and humidity are suitable for the camera during usage and storage. Use a lens cleanser to clean the lens to avoid damage.
- DO NOT block any ventilation holes on the camera as the heat generated may damage the device and hurt the user.

Storing Photos and Videos

DJI Mini SE supports the use of a microSD card to store your photos and videos. A UHS-I Speed Grade 3 rating microSD card is required due to the fast read and write speeds necessary for high-resolution video data. Refer to the Specifications section for more information about recommended microSD cards.

- Do not remove the microSD card from the aircraft while it is turned on. Otherwise, the microSD card may be damaged.
- To ensure the stability of the camera system, single video recordings are limited to 30 minutes.
- Check camera settings before use to ensure they are configured as desired.
- Before shooting important photos or videos, shoot a few images to test the camera is operating correctly.
- Photos or videos cannot be transmitted or copied from the camera if the aircraft powered off.
- Make sure to power off the aircraft correctly. Otherwise, your camera parameters will not be saved and any recorded videos may be damaged. DJI is not responsible for any failure of an image or video to be recorded or having been recorded in a way that is not machine-readable.

Remote Controller

This section describes the features of the remote controller and includes instructions for controlling the aircraft and the camera.

Remote Controller Profile

Built into the remote controll is DJI's enhanced Wi-Fi technology, offering 2.4 GHz and 5.8 GHz* transmission frequencies, a maximum transmission distance of 2.49 mi (4 km), and 720p video downlink from the aircraft to DJI Fly on your mobile device. The detachable control sticks make the remote controller easier to store. Refer to the remote controller diagram in the Product Profile section for more information.

The built-in battery has a capacity of 2600 mAh and a maximum run time of 4.5 hours when using an iOS device and 1 hour and 40 minutes when using an Android device. The remote controller charges the Android device with a charging ability of 500 mA@5V. The remote controller automatically charges Android devices.


The MR1SD25 model remote controller can support both 2.4 GHz and 5.8 GHz. The MR1SS5 model remote controller only supports 5.8 GHz.

- **Compliance Version:** The remote controller is compliant with local regulations.
- **Control Stick Mode:** The control stick mode determines the function of each control stick movement. Three pre-programmed modes (Mode 1, Mode 2, and Mode 3) are available and custom modes can be configured in DJI Fly. The default mode is Mode 2.

Using the Remote Controller


Powering On/Off

- Press the power button once to check the current battery level.
- Press once, then again and hold to turn the remote controller on or off. If the battery level is too low, recharge before use.

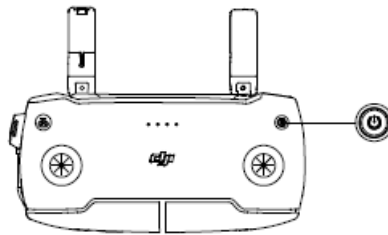

Charging the Battery

Use a Micro USB cable to connect the USB charger to the Micro USB port of the remote controller.

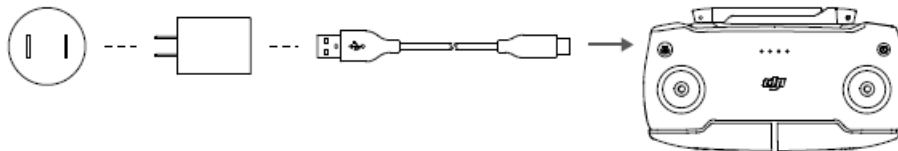

Controlling the Camera



1. **Record Button:** Press to start/stop recording (Video) or switch to video mode (Photo).
2. **Shutter Button:** Press to take photo (Photo) or switch to photo mode (Video).





Controlling the Aircraft

Three pre-programmed modes (Mode 1, Mode 2, and Mode 3) are available and custom modes can be defined in the DJI Fly app. The default mode is Mode 2.



Mode 1

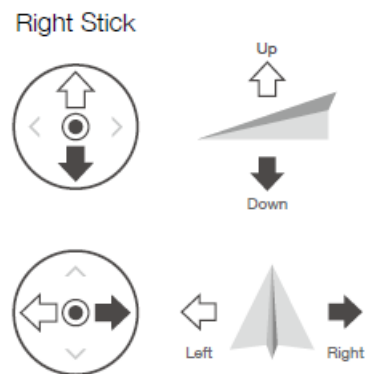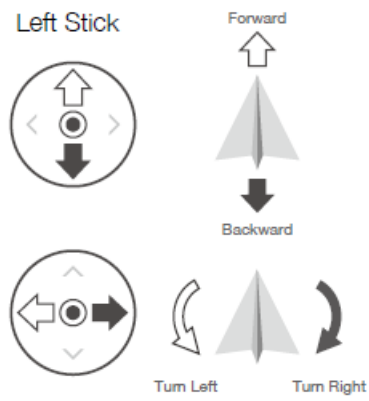



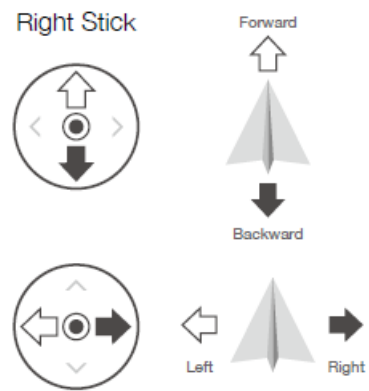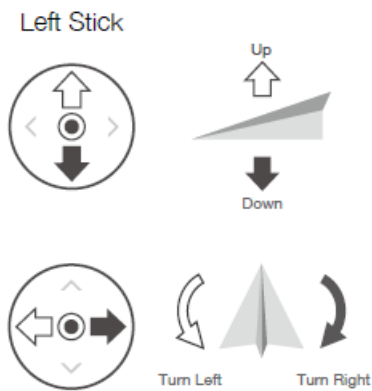




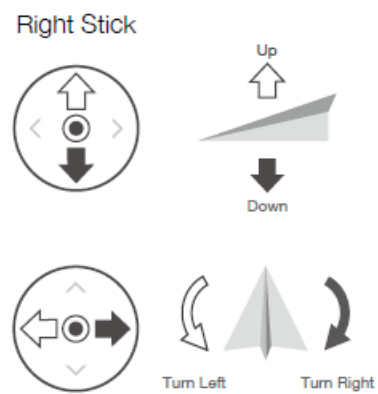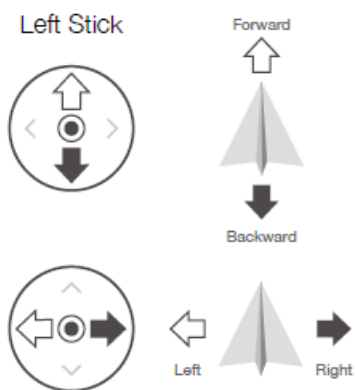

Mode 2



Mode 3

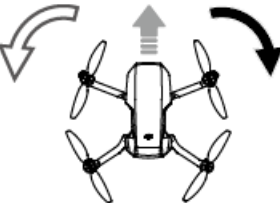


The figure below explains how to use each control stick, using Mode 2 as an example.

Remote Controller (Mode 2)	Aircraft ( Indicates Nose Direction)	Remarks
		Moving the left stick up or down changes the aircraft's altitude. Push the stick up to ascend and down to descend. The more the stick is pushed away from the center position, the faster the aircraft will change altitude. Push the stick gently to prevent sudden and unexpected changes in altitude.
		Moving the left stick to the left or right controls the orientation of the aircraft. Push the stick left to rotate the aircraft counter-clockwise and right to rotate the aircraft clockwise. The more the stick is pushed away from the center position, the faster the aircraft will rotate.
		Moving the right stick up and down changes the aircraft's pitch. Push the stick up to fly forward and down to fly backward. The more the stick is pushed away from the center position, the faster the aircraft will move.
		Moving the right stick to the left or right changes the aircraft's roll. Push the stick left to fly left and right to fly right. The more the stick is pushed away from the center position, the faster the aircraft will move.

Flight Pause/RTH Button

- Press once to make the aircraft brake and hover in place. If the aircraft is performing a QuickShot, RTH, or auto landing, press once to exit the procedure and hover in place.
- Press and hold the RTH button to start RTH. Press this button again to cancel RTH and regain control of the aircraft. Refer to the Return to Home section for more information about RTH.

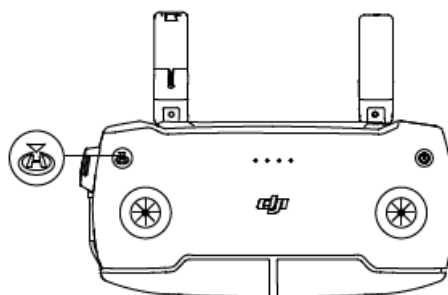

Optimal Transmission Zone

The signal between the aircraft and the remote controller is most reliable when the antennas are positioned in

relation to the aircraft as depicted below.



Linking the Remote Controller

The remote controller is linked to the aircraft before delivery. Linking is only required when using a new remote controller for the first time. Follow these steps to link a new remote controller:


1. Power on the remote controller and the aircraft.
2. Launch DJI Fly. In the camera view, tap ●●● and select Control and Connect to Aircraft, or press and hold the power button of the remote controller for more than four seconds. The remote controller beeps continuously indicating it is ready to link.
3. Press and hold the power button of the aircraft for more than four seconds. The aircraft beeps once indicating it is ready to link. The aircraft beeps twice indicating linking is successfully.
 - Make sure the remote controller is within 0.5 m of the aircraft during linking.
 - The remote controller will automatically unlink from an aircraft if a new remote controller is linked to the same aircraft.
 - Fully charge the remote controller before each flight.
 - If the remote controller is powered on and not in use for five minutes, an alert will sound. After six minutes, the aircraft automatically powers off. Move the control sticks or press any button to cancel the alert.
 - Adjust the mobile device clamp to ensure the mobile device is secure.
 - Make sure the antennas of the remote controller are unfolded and adjusted to the proper position to achieve optimal transmission quality.
 - Repair or replace the remote controller if damaged. A damaged remote controller antenna greatly decreases performance.
 - Fully charge the battery at least once every three months to maintain battery health.

DJI Fly App

This section introduces the main functions of the DJI Fly app.

Home

Launch DJI Fly and enter the home screen.

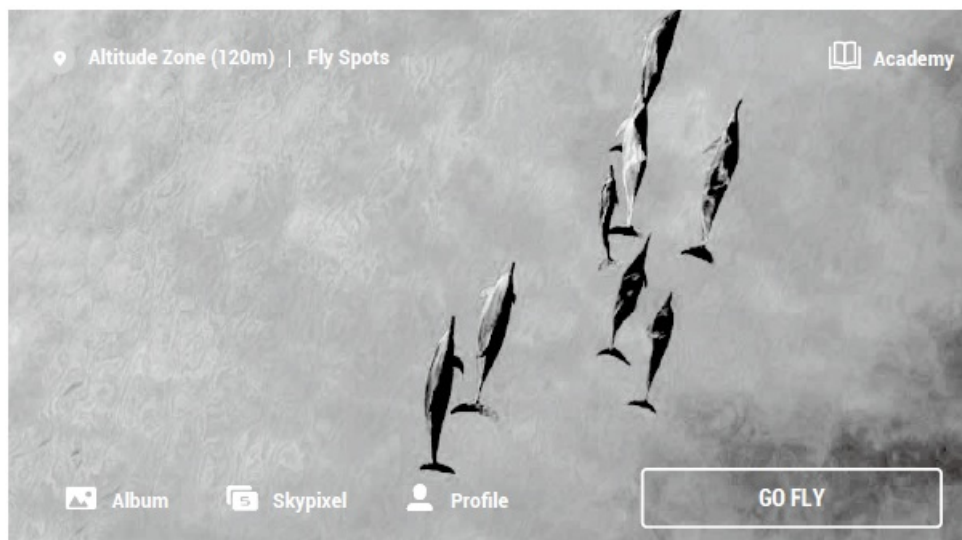

- **Fly Spots**

View or share nearby suitable flight and shooting locations, learn more about GEO zones, and preview aerial photos of different locations taken by other users.

- **Academy**

Tap the icon in the top right corner to enter Academy. Product tutorials, flight tips, flight safety, and manual documents can be viewed here.

- **Album**

Allows you to view the DJI Fly and your phone's album. QuickShots videos can be viewed after downloading to your phone. Create contains Templates and Pro. Templates provides auto edit feature for imported footage. Pro allows you to edit the footage manually.


- **SkyPixel**

Enter SkyPixel to view videos and photos shared by users.

- **Profile**

View account information, flight records, DJI forum, online store, Find My Drone feature, and other settings.

Camera View

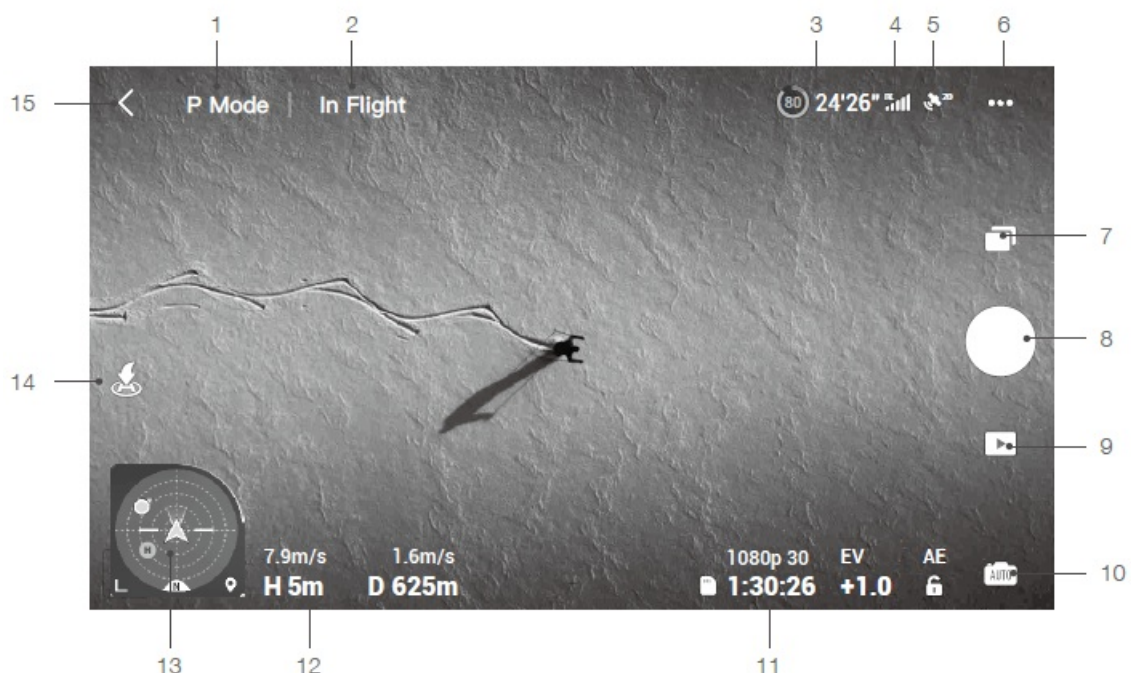


1. Flight Mode

P Mode: displays the current flight mode. Tap to switch between modes.

2. System Status Bar

In Flight: indicates the aircraft flight status and displays various warning messages. Tap to view more information when a warning prompt appears.

3. Battery Information

 24'26": displays the current battery level and remaining flight time. Tap to view more information about the battery.

4. Video Downlink Signal Strength

: displays the video downlink signal strength between the aircraft and remote controller.

5. GPS Status

: displays the current GPS signal strength.

6. System Settings

•••: There are Safety, Control, Camera, Transmission, and About.

Safety

- **Flight Protection:** Max Altitude, Max Distance, Auto RTH Altitude settings, and Update Home Point.
- **Sensors:** View the IMU and compass status and start to calibrate if necessary.
- Advanced Settings including Emergency Propeller Stop and Payload mode. "Emergency Only" indicates that the motors can only be stopped mid-flight in an emergency situation such as if there is a collision, a motor has stalled, the aircraft is rolling in the air, or the aircraft is out of control and ascending or descending very quickly. "Anytime" indicates that the motors can be stopped mid-flight anytime once the user performs a combination stick command (CSC). Stopping the motors mid-flight will cause the aircraft to crash.
- If accessories such as the propeller guard are mounted to the aircraft, it is recommended to enable Payload mode for enhanced safety. After takeoff, Payload mode is enabled automatically if a payload is detected. The flight performance will be reduced accordingly when flying with any payload. Note that the Max Service
- Ceiling above the Sea Level is 1500 m and the max flight speed is limited when the Payload mode is enabled.
- The Find My Drone feature helps to find the location of the aircraft on the ground.

Control

- **Aircraft Settings:** Select Flight mode and Units settings.
- **Gimbal Settings:** Switch the gimbal mode and calibrate the gimbal. Advanced gimbal settings include Pitch Speed, Pitch Smoothness, and Allow Upward Gimbal Rotation.
- **Remote Controller Settings:** Stick mode settings and remote controller calibration.
- **Beginner Flight Tutorial:** View the flight tutorial.
- **Connect to Aircraft:** When the aircraft is not linked to the remote controller, tap to start linking.

Camera


- Set the photo size and select the microSD card settings.
- Advanced Settings such as Histogram, Gridlines, Overexposure Warning, and Anti-Flicker.
- Tap Reset Camera Settings to restore all camera settings to default.
- **Transmission**

Frequency and Channel mode settings.

- **About**

View device information, firmware information, app version, battery version, and more.

7. Shooting Mode

-  **Photo**: Choose between a Single Shot and an Interval.
- **Video**: Video resolution can be set to 2.7K 24/25/30 fps and 1080P 24/25/30/48/50/60 fps. QuickShots: Choose from Dronie, Circle, Helix, and Rocket.


8. Shutter/Record Button

: Tap to start shooting photos or recording video.

 
 
9. Playback

: Tap to enter playback and preview photos and videos as soon as they are captured.

10. Camera Mode Switch

: Choose between Auto and Manual mode when in photo mode. In Manual mode, shutter and ISO can be set. In Auto mode, AE lock and EV can be set.

11. microSD Card Information


 **1080p 30**
 **1:30:26**: displays the remaining number of photos or video recording time of the current microSD card. Tap to view the available capacity of the microSD card.

12. Flight Telemetry



D 12m, H 6m, 1.6m/s, 1m/s: displays the distance between the aircraft and the Home Point, height from the Home Point, aircraft horizontal speed, and aircraft vertical speed.

13. Attitude Indicator

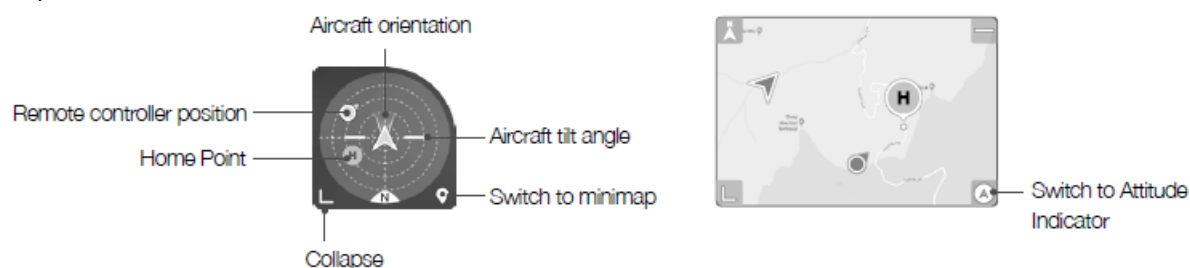
Displays information such as the orientation and tilt angle of the aircraft, the position of the remote controller, and the position of the Home Point.



14. Auto Takeoff/Landing/RTH

- : tap the icon. When the prompt appears, press and hold the button to initiate auto takeoff or landing.
- Tap  to initiate Smart RTH and have the aircraft return to the last recorded Home Point.

15. Back

: tap to return to the home screen.

Press the screen until a circle appears and drag the circle up and down to control the tilt of the gimbal.

- Make sure to fully charge your mobile device before launching DJI Fly.
- Mobile cellular data is required when using DJI Fly. Contact your wireless carrier for data charges.
- If you are using a mobile phone as your display device, DO NOT accept phone calls or use texting features during flight.
- Read all safety tips, warning messages, and disclaimers carefully. Be familiar with the related regulations in

your area. You are solely responsible for being aware of all relevant regulations and flying in a way that is compliant.

- Read and understand the warning messages before using the Auto-take off and Auto-landing features.
- Read and understand the warning messages and disclaimer before setting the altitude beyond the default limit.
- Read and understand the warning messages and disclaimer before switching between flight modes.
- Read and understand the warning messages and disclaimer prompts near or in GEO zones.
- Read and understand the warning messages before using the Intelligent Flight Mode.
- Land your aircraft immediately at a safe location if a prompt to land appears in the app.
- Review all warning messages on the checklist displayed in the app before each flight.
- Use the in-app tutorial to practice your flight skills if you have never operated the aircraft or if you do not have sufficient experience to operate the aircraft with confidence.
- Cache the map data of the area where you intend to fly the aircraft by connecting to the internet before each flight.
- The app is designed to assist your operation. Use your discretion and DO NOT rely on the app to control your aircraft. Your use of the app is subject to DJI Fly Terms of Use and DJI's Privacy Policy. Read them carefully in the app before flying.

Flight

This section describes safe flight practices and flight restrictions.

Once pre-flight preparation is complete, it is recommended to hone your flight skills and practice flying safely. Make sure that all flights are carried out in an open area. The flying height is limited to 500 m. DO NOT exceed this height. Strictly abide by local laws and regulations when flying. Make sure to read the DJI Mini SE Disclaimer and Safety Guidelines to understand the safety notices before flying.

Flight Environment Requirements


1. Do not use the aircraft in severe weather conditions including wind speeds exceeding 10 m/s, snow, rain, and fog.
2. Only fly in open areas. Tall structures and large metal structures may affect the accuracy of the onboard compass and GPS system. It is recommended to keep the aircraft at least 5 m away from structures.
3. Avoid obstacles, crowds, high voltage power lines, trees, and bodies of water. It is recommended to keep the aircraft at least 3 m above water.
4. Minimize interference by avoiding areas with high levels of electromagnetism such as locations near power lines, base stations, electrical substations, and broadcasting towers.
5. Aircraft and battery performance is subject to environmental factors such as air density and temperature. DO NOT fly the aircraft 3,000 m (9,842 ft) or higher above sea level. Otherwise, the battery and aircraft performance may be reduced.
6. Aircraft cannot use GPS within the polar regions. Use the Downward Vision System when flying in such locations.
7. Fly with caution when taking off from moving surfaces such as a moving boat or vehicle.

Flight Limits and GEO Zones

- Unmanned aerial vehicle (UAV) operators should abide by the regulations from self-regulatory organizations such as the International Civil Aviation Organization, the Federal Aviation Administration, and local aviation authorities. For safety reasons, flight limits are enabled by default to help users operate this aircraft safely and legally. Users can set flight limits on height and distance.
- Altitude limits, distance limits, and GEO zones function concurrently to manage flight safety when GPS is available. Only altitude can be limited when GPS is unavailable.

Flight Altitude and Distance Limits

The flight altitude and distance limits can be changed in DJI Fly. Based on these settings, the aircraft will fly in a restricted cylinder, as shown below:

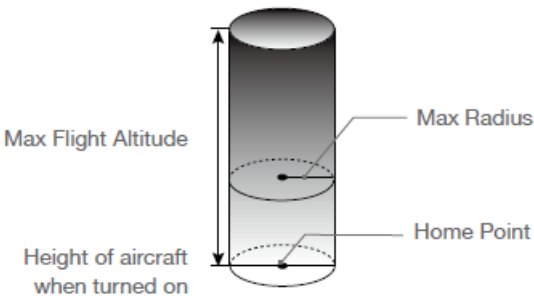

When GPS is available

	Flight Limits	DJI Fly App	Aircraft Status Indicator
Max Altitude	Aircraft's altitude cannot exceed the specified value	Warning: Height limit reached	Blinks green and red alternately
Max Radius	Flight distance must be within the max radius	Warning: Distance limit reached	

When GPS is weak

	Flight Limits	DJI Fly App	Aircraft Status Indicators
Max Altitude	<p>Height is restricted to 16 ft (5 m) when the GPS signal is weak and Infrared Sensing System is operating.</p> <p>Height is restricted to 98 ft (30 m) when the GPS signal is weak and Infrared Sensing System is not operating.</p>	Warning: height limit reached	Blinks red and green alternately
Max Radius	The restrictions on the radius are disabled and warning prompts cannot be received in the app.		

- There will be no altitude limit if the GPS signal becomes weak during flight as long as the GPS signal was stronger than weak (white or yellow signal bars) when the aircraft was powered on.
- If the aircraft is in a GEO zone and there is a weak or no GPS signal, the aircraft status indicator will glow red for five seconds every twelve seconds.
- If the aircraft reaches an altitude or radius limit, you can still control the aircraft, but you cannot fly it any further. If the aircraft flies out of the max radius, it will automatically fly back within range when the GPS signal is strong.
- For safety reasons, do not fly close to airports, highways, railway stations, railway lines, city centers, or other sensitive areas. Fly the aircraft only within your line of sight.

GEO Zones

All GEO zones are listed on the DJI official website at <http://www.dji.com/flysafe>. GEO zones are divided into different categories and include locations such as airports, flying fields where manned aircraft operate at low altitudes, borders between countries, and sensitive locations such as power plants.


There will be prompts in DJI Fly app alerting users of any nearby GEO zones.

Pre-Flight Checklist

1. Make sure the remote controller, mobile device, and Intelligent Flight Battery are fully charged.
2. Make sure the Intelligent Flight Battery and the propellers are mounted securely.
3. Make sure the aircraft arms are unfolded.
4. Make sure the gimbal and camera are functioning normally.
5. Make sure nothing is obstructing the motors and that they are functioning normally.
6. Make sure DJI Fly is successfully connected to the aircraft.
7. Make sure the camera lens and Vision System sensors are clean.
8. Use only genuine DJI parts or parts certified by DJI. Unauthorized parts or parts from non-DJI certified manufacturers may cause system malfunctions and compromise safety.


Auto Takeoff/Landing


Auto Takeoff

1. Launch DJI Fly and enter the camera view.
2. Complete all steps in the pre-flight checklist.
3. Tap . If conditions are safe for takeoff, press and hold the button to confirm.
4. The aircraft will take off and hover 3.9 ft (1.2 m) above the ground.
 - The aircraft status indicator shows whether the aircraft is using GPS and/or the Downward Vision System for flight control. It is recommended to wait until the GPS signal is strong before using auto takeoff.
 - DO NOT takeoff from an moving surface, such as a moving boat or vehicle.

Auto Landing

Use auto landing when the aircraft status indicator blinks green.


1. Tap . If conditions are safe to land, press and hold the button to confirm.

2. Auto landing can be cancelled by tapping .
3. If the Vision System is working normally, Landing Protection will be enabled.
4. Motors stops after landing.

Starting/Stopping the Motors

Starting the Motors


A Combination Stick Command (CSC) is used to start the motors. Push both sticks to the bottom inner or outer corners to start the motors. Once the motors have started spinning, release both sticks simultaneously.

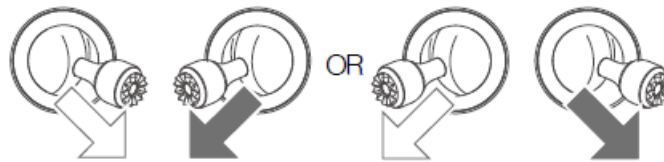

Stopping the Motors

There are two methods to stop the motors.

1. **Method 1:** When the aircraft has landed, push and hold the left stick down. The motors will stop after three seconds.
2. **Method 2:** When aircraft has landed, push the left stick down, then conduct the same CSC that was used to start the motors, as described above. The motors will stop immediately. Release both sticks once the motors have stopped.

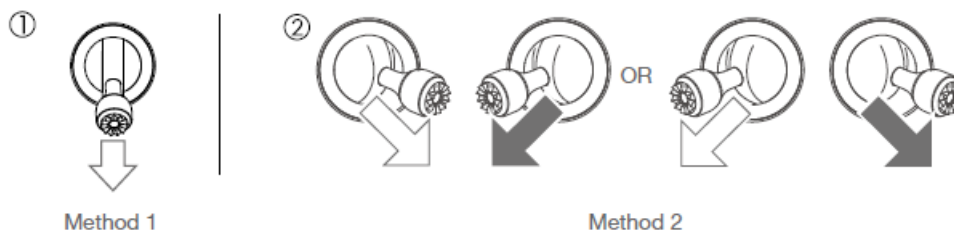

Stopping the Motors Mid-Flight

The motors should only be stopped mid-flight in an emergency situation such as if a collision has occurred or if the aircraft is out of control and is ascending or descending very quickly, rolling in the air, or if a motor has stalled. To stop the motors mid-flight, use the same CSC that was used to start the motors. The default setting can be changed in DJI Fly.

- Stopping motors mid-flight will cause the aircraft to crash.

Flight Test

Takeoff/Landing Procedures

1. Place the aircraft in an open, flat area with the aircraft status indicator facing towards you.
2. Turn on the aircraft and the remote controller.
3. Launch DJI Fly and enter the camera view.
4. Wait until the aircraft status indicator blinks green indicating that the Home Point has been recorded and it is now safe to fly.

5. Gently push the throttle stick to take off or use auto-takeoff.
6. Pull the throttle stick or use auto-landing to land the aircraft.
7. After landing, push the throttle stick down and hold. The motors stop after three seconds.
8. Turn off the aircraft and remote controller.

Video Suggestions and Tips

1. The pre-flight checklist is designed to help you fly safely and to ensure that you can shoot video during flight.
Go through the full pre-flight checklist before each flight.
2. Select the desired gimbal operation mode in DJI Fly.
3. Shoot video when flying in P-mode or C-mode.
4. DO NOT fly in bad weather conditions such as when it is raining or windy.
5. Choose the camera settings that best suit your needs.
6. Perform flight tests to establish flight routes and to preview scenes.
7. Push the control sticks gently to keep the aircraft movement smooth and stable.
 - It is important to understand the basic flight guidelines for the safety of both you and those around you.
 - DO NOT forget to read the disclaimer and safety guidelines.

Specifications

Aircraft

- Takeoff Weight <249 g
- **Dimensions (L×W×H)**
 - **Folded:** 138×81×58 mm
 - **Unfolded:** 159×203×56 mm
 - **Unfolded (with propellers):** 245×289×56 mm
- Diagonal Distance 213 mm
- **Max Ascent Speed**
 - 4 m/s (S Mode)
 - 2 m/s (P Mode)
 - 1.5 m/s (C Mode)
- **Max Descent Speed**
 - 3 m/s (S Mode)
 - 1.8 m/s (P Mode)
 - 1 m/s (C Mode)
- **Max Speed (near sea level, no wind)**
 - 13 m/s (S Mode)
 - 8 m/s (P Mode)
 - 4 m/s (C Mode)
- Max Service Ceiling Above Sea Level 3000 m
- Max Flight Time 30 mins (measured while flying at 17 kph in windless conditions)
- Max Wind Speed Resistance 10 m/s (Scale 5)
- **Max Tilt Angle**

- 30° (S Mode)
- 20° (P Mode)
- 20° (C Mode)
- **Max Angular Velocity**
 - 150°/s (S Mode)
 - 130°/s (P Mode)
 - 30°/s (C Mode)
- Operating Temperature Range 0° to 40° C (32° to 104° F)
- GNSS GPS+GLONASS
- Operating Frequency
 - Wi-Fi
 - Model MT2SS5: 5.725-5.850 GHz
 - Model MT2SD25: 2.400-2.4835 GHz, 5.725-5.850 GHz
 - GPS
 - 1.57302-1.57782 GHz
 - GLONASS
 - 1.597-1.607 GHz
- **Transmission Power (EIRP)**
 - Model MT2SS5
 - 5.8 GHz: <30 dBm (FCC); <28 dBm (SRRC)
 - Model MT2SD25
 - 2.4 GHz: <19 dBm (MIC/CE)
 - 5.8 GHz: <14 dBm (CE)
- **Hovering Accuracy Range**
 - **Vertical:** ±0.1 m (with Vision Positioning), ±0.5 m (with GPS Positioning)
 - **Horizontal:** ±0.3 m (with Vision Positioning), ±1.5 m (with GPS Positioning)

Gimbal

- **Mechanical Range**
 - **Tilt:** -110° to +35°
 - **Roll:** -35° to +35°
 - **Pan:** -20° to +20°
- Controllable Range Tilt: -90° to 0° (default setting), -90° to +20° (extended)
- Stabilization 3-axis (tilt, roll, pan)
- Max Control Speed (tilt) 120°/s
- Angular Vibration Range ±0.01°

Sensing System

- Downward Operating Range: 0.5-10 m
- Operating Environment Non-reflective, discernable surfaces with diffuse reflectivity of >20% Adequate lighting of lux>15

Camera

- Sensor
 - 1/2.3" CMOS
 - **Effective Pixels:** 12 MP
- Lens
 - **FOV:** 83°
 - **35 mm Format Equivalent:** 24 mm
 - **Aperture:** f/2.8
 - **Focus Range:** 1 m to ∞
- ISO 100-3200
- Shutter Speed Electronic Shutter: 4-1/8000 s
- Still Image Size 4:3: 4000×3000 16:9: 4000×2250
- Still Photography Modes
 - Single shot
 - **Interval:** 2/3/5/7/10/15/20/30/60 s
- **Video Resolution**
 - **2.7K:** 2720×1530 24/25/30 p
 - **FHD:** 1920×1080 24/25/30/48/50/60 p
- Max Video Bitrate 40 Mbps
- Supported File System
 - FAT32 (\leq 32 GB)
 - exFAT ($>$ 32 GB)
- Photo Format JPEG
- Video Format MP4 (H.264/MPEG-4 AVC)

Remote Controller

- Operating Frequency
 - **Model MR1SS5:** 5.725 – 5.850 GHz
 - **Model MR1SD25:** 2.400 – 2.4835 GHz, 5.725 – 5.850 GHz
- Max Transmission Distance (unobstructed, free of interference)
 - Model MR1SS5: 5.8 GHz: 4000 m (FCC); 2500 m (SRRC)
 - ModelMR1SD25: 2.4 GHz: 2000 m (MIC/CE); 5.8 GHz: 500 m (CE)
- Operating Temperature Range 0° to 40° C (32° to 104° F)
- Transmitter Power (EIRP)
 - **Model MR1SS5:** 5.8 GHz: <30 dBm (FCC); <28 dBm (SRRC)
 - **Model MR1SD25:** 2.4 GHz: <19 dBm (MIC/CE) 5.8 GHz: <14 dBm (CE)
- Battery Capacity 2600 mAh
- Operating Current/Voltage
 - 1200 mA 3.6 V (Android)
 - 450 mA 3.6 V (iOS)
- **Supported Mobile Device Size**
 - **Max length:** 160 mm

- **Max thickness:** 6.5 – 8.5 mm
- Supported USB Port Types Lightning, Micro USB (Type-B), USB-C
- Video Transmission System Enhanced Wi-Fi
- Live View Quality Remote Controller: 720p@30fps
- Max. Bitrate 4 Mbps
- Latency (depending on environmental conditions and mobile device) 170 – 240 ms

Charger

- Input 100 – 240V, 50/60 Hz, 0.5A
- Output 12V 1.5A / 9V 2A / 5V 3A
- Rated Power 18 W

Intelligent Flight Battery

- Battery Capacity 2250 mAh
- Voltage 7.7 V
- Charging Voltage Limit 8.8 V
- Battery Type LiPo 2S
- Energy 17.32 Wh
- Weight 82.5 g
- Charging Environment
- Temperature 5° to 40° C (41° to 104° F)
- Max Charging Power 29 W

App

- App DJI Fly
- Required Operating System iOS v10.0.2 or later; Android v6.0 or later

SD Cards

- Supported SD Cards Requires UHS-I Speed Grade 3 rating microSD card
- Recommended microSD Cards
 - **16 GB:** SanDisk Extreme
 - **32 GB:** Samsung Pro Endurance, Samsung Evo Plus, SanDisk Industrial, SanDisk Extreme V30 A2, SanDisk Extreme Pro V30 A1, SanDisk Extreme Pro V30 A2, Lexar 633x, Lexar 667x
 - **64 GB:** Samsung Pro Endurance, Samsung Evo Plus, SanDisk Extreme V30 A1, SanDisk Extreme V30 A2, Lexar 633x, Lexar 667x, Lexar 1000x, Lexar High Endurance, Toshiba EXCERIA M303 V30 A1, Netac Pro V30 A1
 - **128 GB:** Samsung Evo Plus, SanDisk Extreme V30 A2, SanDisk Extreme Plus V30 A1, SanDisk Extreme Plus V30 A2, Lexar 633x, Lexar 667x, Lexar 1000x, Lexar High Endurance, Toshiba EXCERIA M303 V30 A1, Netac Pro V30 A1
 - **256 GB:** SanDisk Extreme V30 A2

- Aircraft takeoff weight includes battery, propellers, and a microSD card.
- Registration not required in some countries and regions. Check local rules and regulations before use.
- These specifications have been determined through tests conducted with the latest firmware. Firmware updates can enhance performance. It is highly recommended to update to the latest firmware.

Calibrating the Compass


It is recommended that the compass is calibrated in any of the following situations when flying outdoors:

1. Flying at a location further than 31 miles (50 km) away from the location the drone was last flown.
2. The aircraft has not been flown for more than 30 days.
3. A compass interference warning appears in DJI Fly and/or the aircraft status indicator blinks red and yellow alternatively.
 - ⚠ DO NOT calibrate the compass in locations where magnetic interference may occur, such as close to magnetite deposits or large metallic structures such as parking structures, steel reinforced basements, bridges, cars, or scaffolding.
 - DO NOT carry objects (such as mobile phones) that contain ferromagnetic materials near the aircraft during calibration.
 - It is not necessary to calibrate the compass when flying indoors.

Calibration Procedure

Choose an open area to carry out the following procedure.

1. Tap the System Settings in DJI Fly, select “Control” and then select “Calibrate”, and follow the on-screen instructions. The aircraft status indicator grows yellow, indicating calibration has start.
2. Hold the aircraft horizontally and rotate it 360 degrees. The aircraft status indicator will turn solid green.
3. Hold the aircraft vertically and rotate it 360 degrees around a vertical axis.
4. If the aircraft status indicator blinks red, the calibration has failed. Change your location and try the calibration procedure again.

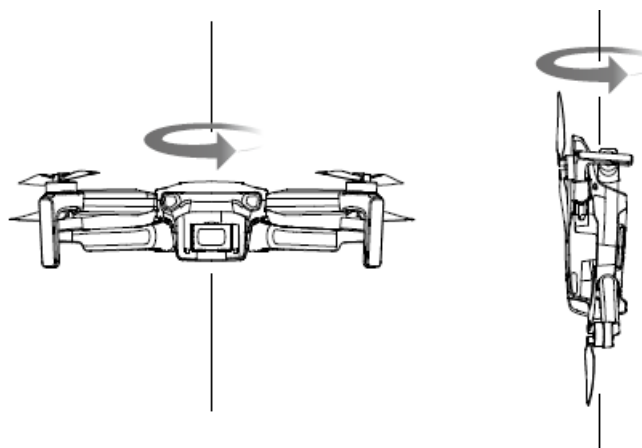

- If the aircraft status indicator blinks red and yellow alternatively after calibration is completed, this indicates that the current location is not suitable for flying the aircraft, due to the level of magnetic interference. Change your location.
- ⚠ A prompt will appear in DJI Fly if compass calibration is required before takeoff.
- The aircraft can take off immediately once calibration is complete. If you wait more than three minutes to take off after calibration, you may need to repeat the calibration process.

Updating Firmware

When you connect the aircraft or remote controller to DJI Fly, you will be notified if a new firmware update is available. To update, connect the mobile device to the internet and follow the on-screen instructions. Note that the firmware cannot be updated if the remote controller is not linked to the aircraft.

- Make sure to follow all the steps to update firmware. Otherwise, the update may fail. The aircraft will power off automatically after the firmware update is complete.
- The firmware update will take approx. 10 minutes. It is normal for the gimbal to go limp, aircraft status indicators to blink, and the aircraft to reboot. Wait patiently until the update is complete.
- Before performing an update, make sure the Intelligent Flight Battery is at least 15% charged and the remote controller is at least 20% charged.
- The remote controller may become unlinked from the aircraft after updating. Relink the remote controller and aircraft. Note that the update may reset various main controller settings, such as the RTH altitude and the maximum flight distance, to default settings. Before updating, take note of your preferred DJI Fly settings and readjust them after the update.

After-Sales Information

Visit <https://www.dji.com/support> for more information about after-sales service policies and value-added services such as DJI Care.

WE ARE HERE FOR YOU

Contact DJI SUPPORT via Facebook Messenger

This content is subject to change.


Download the latest version from <http://www.dji.com/mini-se>.

If you have any questions about this document, please contact DJI by sending a message to DocSupport@dji.com.

DJI is a trademark of DJI.

Copyright © 2021 DJI All Rights Reserved.

Documents / Resources

	<p>DJI MINI SE Camera Drone Remote Controller [pdf] User Manual MINI SE Camera Drone Remote Controller, MINI SE, Camera Drone Remote Controller, Drone Remote Controller, Remote Controller, Controller</p>
---	---

References

-  [Fly Safe - DJI](#)
-  [DJI Mini SE - Fly As You Are - DJI](#)
-  [DJI - Official Website](#)
-  [Support - DJI](#)
- [User Manual](#)