



# dji Osmo Action 4 4K Action Camera User Guide

[Home](#) » [DJI](#) » dji Osmo Action 4 4K Action Camera User Guide 

## Contents

- [1 dji Osmo Action 4 4K Action Camera](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 App](#)
- [5 Using Instructions](#)
- [6 Dimension](#)
- [7 Precautions](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



**dji Osmo Action 4 4K Action Camera**



## Product Information

The Adventure Combo is a versatile and feature-packed product designed for capturing high-quality action footage. It is equipped with advanced technology and comes with the DJI Mimo App for enhanced control and editing capabilities. For the latest updates and downloads related to the product, please visit the official DJI website at <https://www.dji.com/osmo-action-4/downloads>.

## Product Usage Instructions

### DJI Mimo App

To maximize the potential of your Adventure Combo, we recommend using the DJI Mimo App. Download the app from <https://s.dji.com/guide60> and install it on your compatible smartphone or tablet.

### Quick Start Guide

For a quick setup and initial configuration, please refer to the Quick Start Guide provided with your Adventure Combo package. Follow the step-by-step instructions to ensure a seamless start to your adventure.

### Video Settings

To adjust video settings, follow these steps:

1. Press the power button to turn on the Adventure Combo.
2. Access the video settings by navigating through the menu options.
3. Make your desired changes to settings such as resolution, frame rate, and zoom level.

### Power Options

The Adventure Combo offers various power options:

- **OFF:** Press and hold the power button to turn off the device.
- **1s:** Press the power button once to start recording a video with a 1-second timer.

## Recording Duration

The Adventure Combo displays the current recording duration and video settings on the screen. Use this information as a reference during your recording sessions.

## Distance Measurement


The Adventure Combo can measure the distance between the camera and the subject. This feature is useful for capturing accurate action footage. To enable distance measurement, follow these steps:

1. Access the settings menu.
2. Select the distance measurement option.
3. Choose the desired measurement unit (e.g., meters or feet).

## Stay Updated

- For the latest information, news, and updates related to DJI products, consider subscribing to our newsletter. Stay informed about new features, software updates, and more.


## App

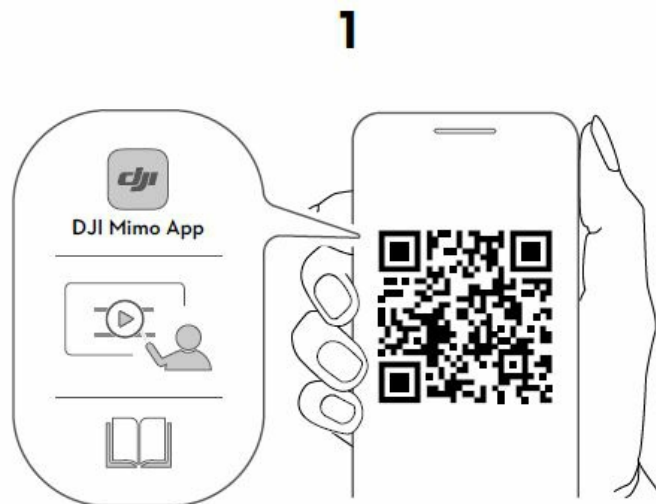


- <https://s.dji.com/guide60>

## Using Instructions


2

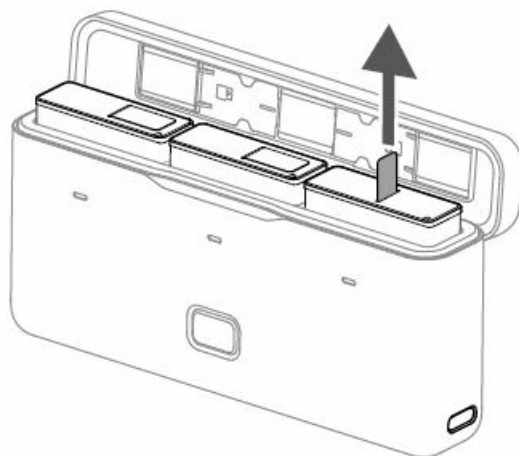


3

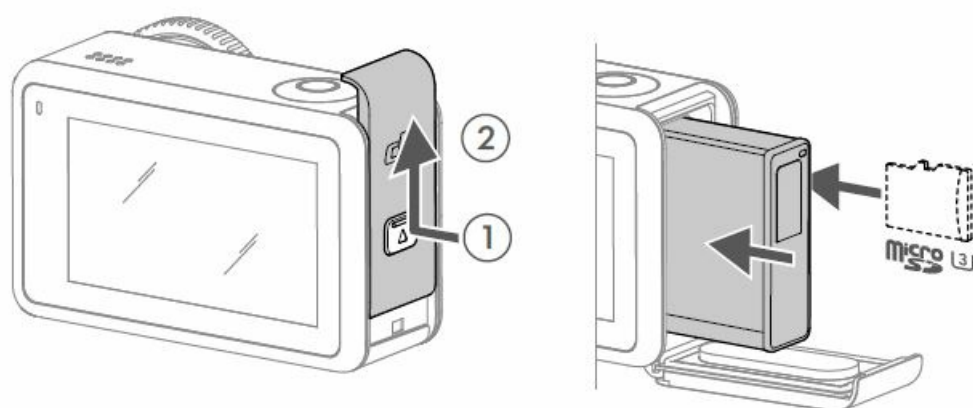


4

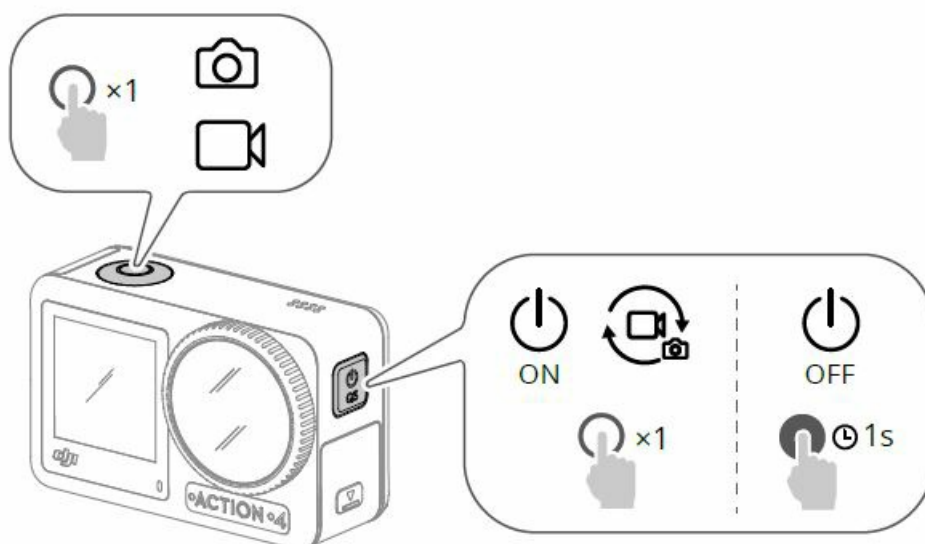



5

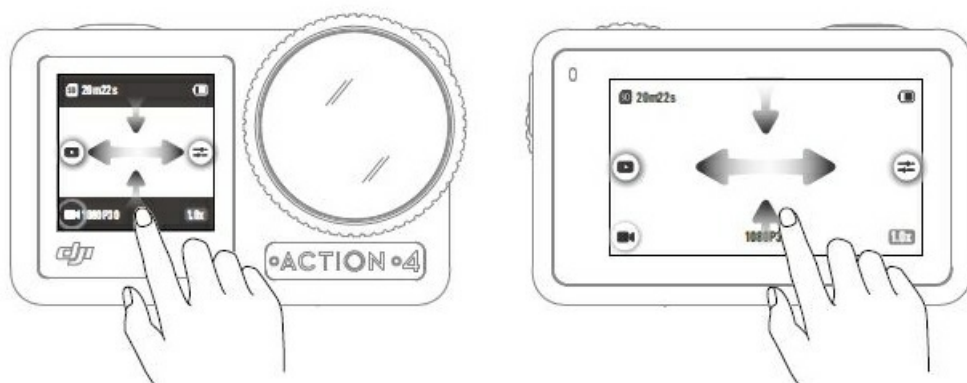


6

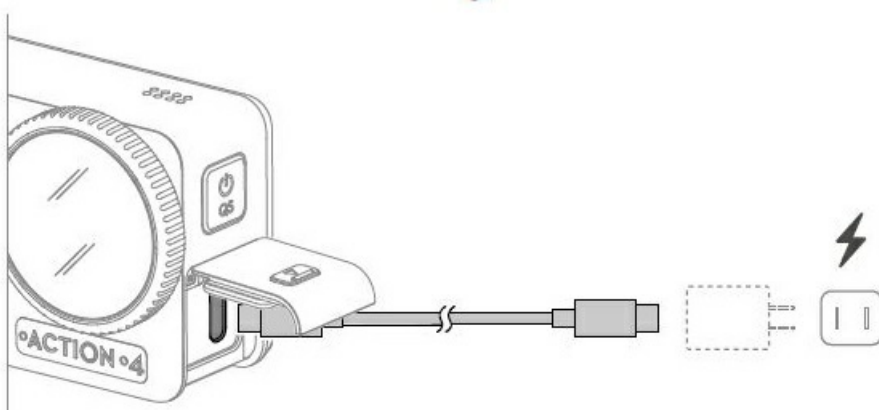

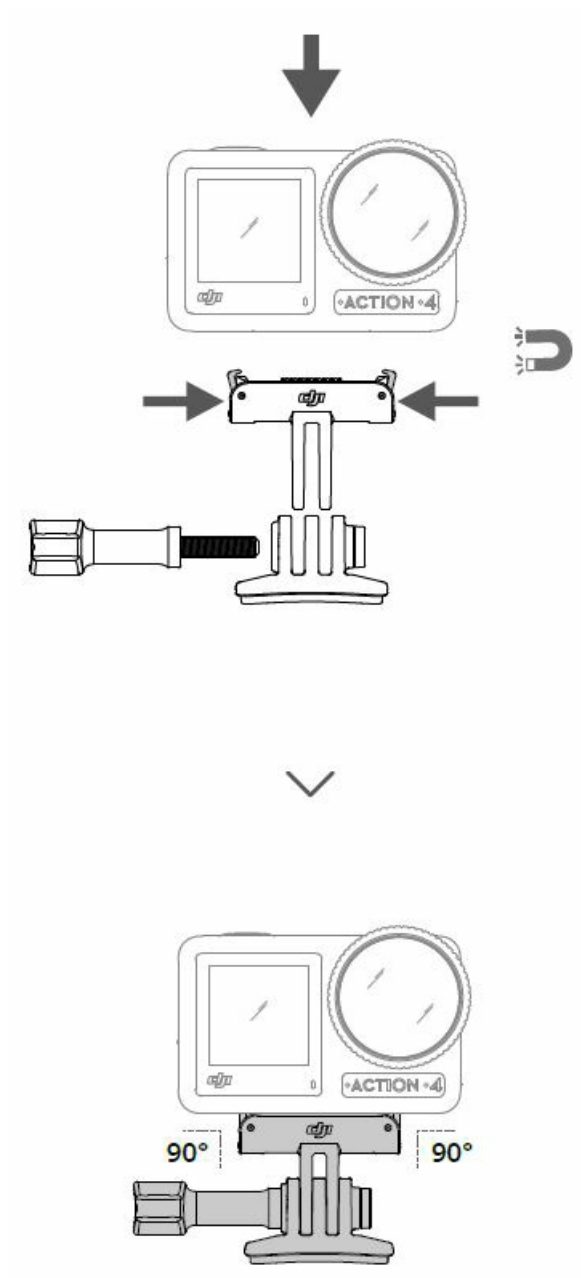


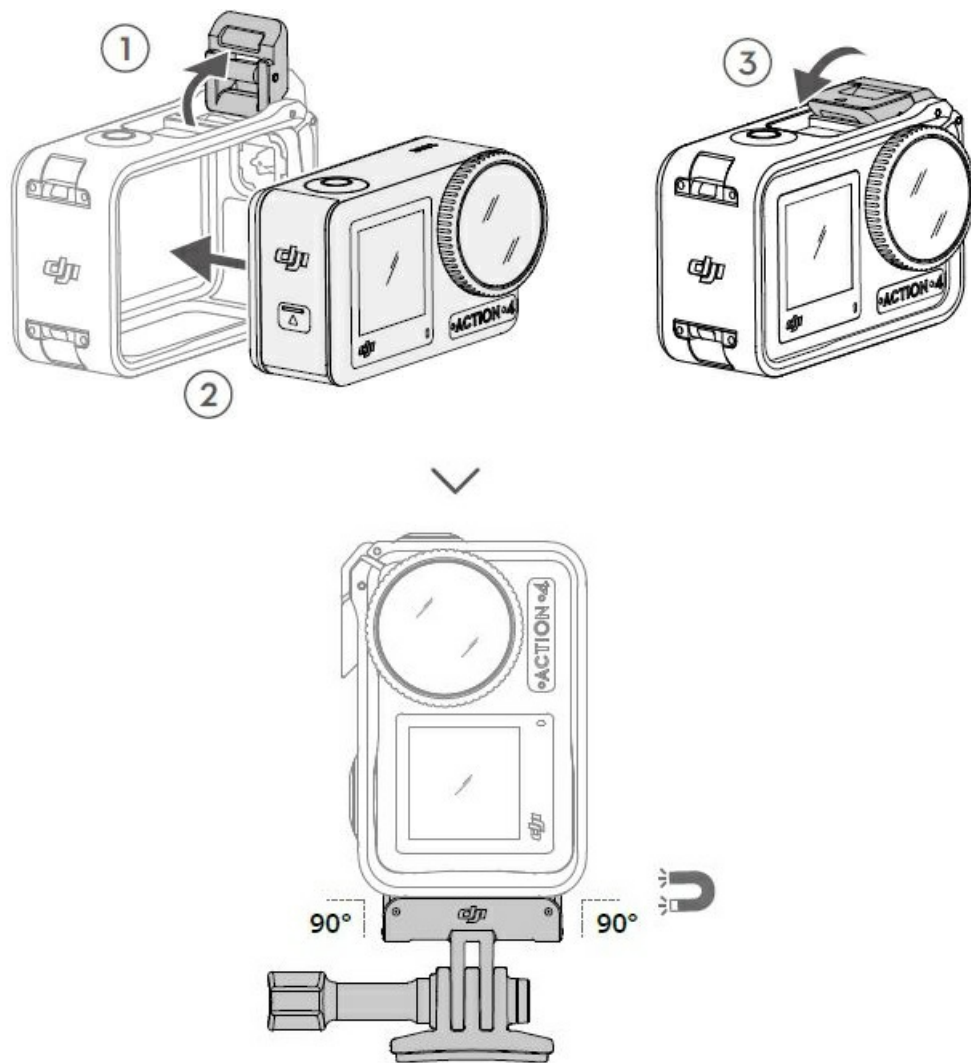

## Dimension

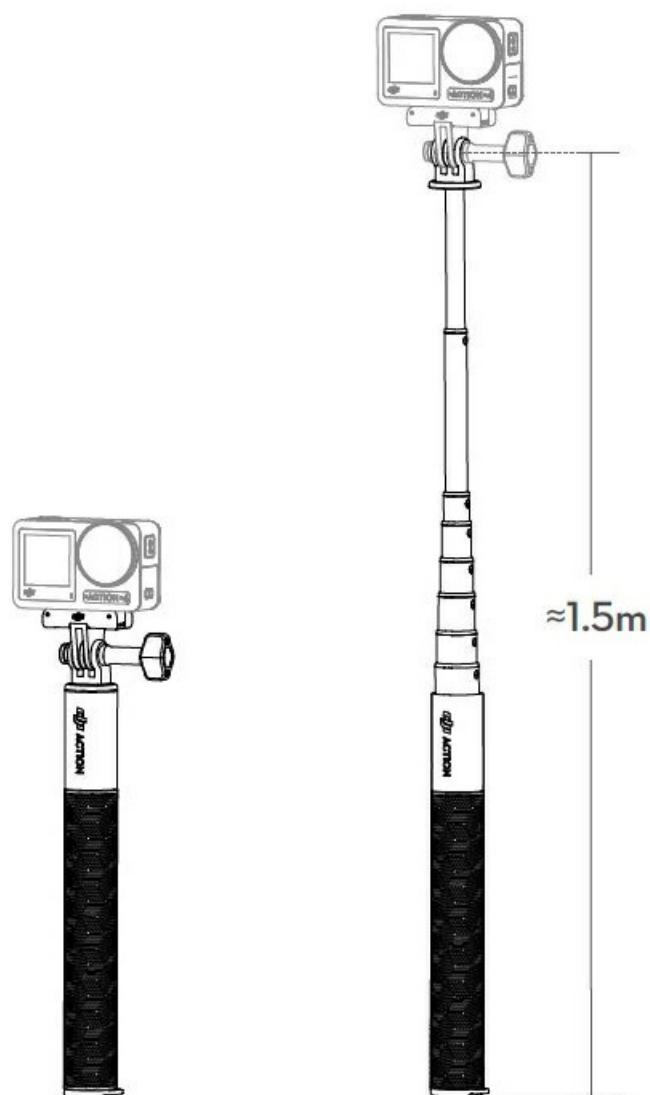

## Warning

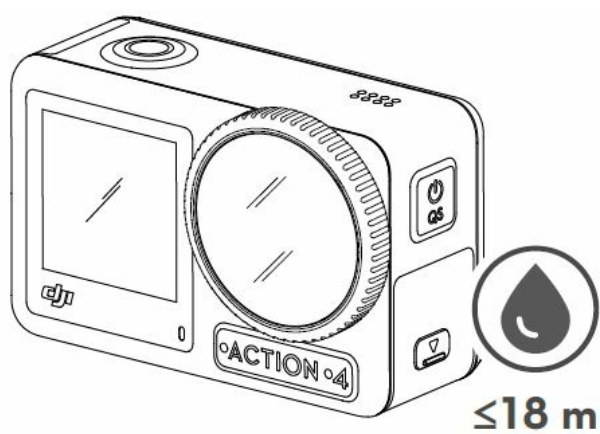

## Precautions

WE ARE HERE FOR YOU



Contact DJI SUPPORT



## SUBSCRIBE FOR MORE INFO



This content is subject to change without prior notice.

DJI and OSMO are trademarks of DJI.


Copyright © 2023 DJI OSMO All Rights Reserved.



YCBZSS00244303

- <https://www.dji.com/osmo-action-4/downloads>

## Documents / Resources

	<p><a href="#">dji Osmo Action 4 4K Action Camera</a> [pdf] User Guide</p> <p>Osmo Action 4 4K Action Camera, Osmo Action 4, 4K Action Camera, Action Camera, Camera</p>
---	--

