




dji Osmo Action 4 Digital Camera User Guide

[Home](#) » [DJI](#) » dji Osmo Action 4 Digital Camera User Guide 

Contents

- [1 dji Osmo Action 4 Digital Camera](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Documents / Resources](#)



dji Osmo Action 4 Digital Camera



Product Information

- Product Name: DJI Osmo Action
- Version: v1.0
- User Manual Link: <https://www.dji.com/osmo-action-4/downloads>
- Disclaimer: This content is subject to change without prior notice.
- Model Number: YCBZSS00244203



<https://www.dji.com/osmo-action-4/downloads>

This content is subject to change without prior notice.

DJI and OSMO are trademarks of DJI. Copyright © 2023 DJI OSMO All Rights Reserved.

Product Usage Instructions

- Step 1: Download and install the DJI Mimo App on your mobile device. You can find the app at


1



<https://s.dji.com/guide60>


- Step 2: Set the video resolution to 1080P30 and the zoom level to 1.0x.

2

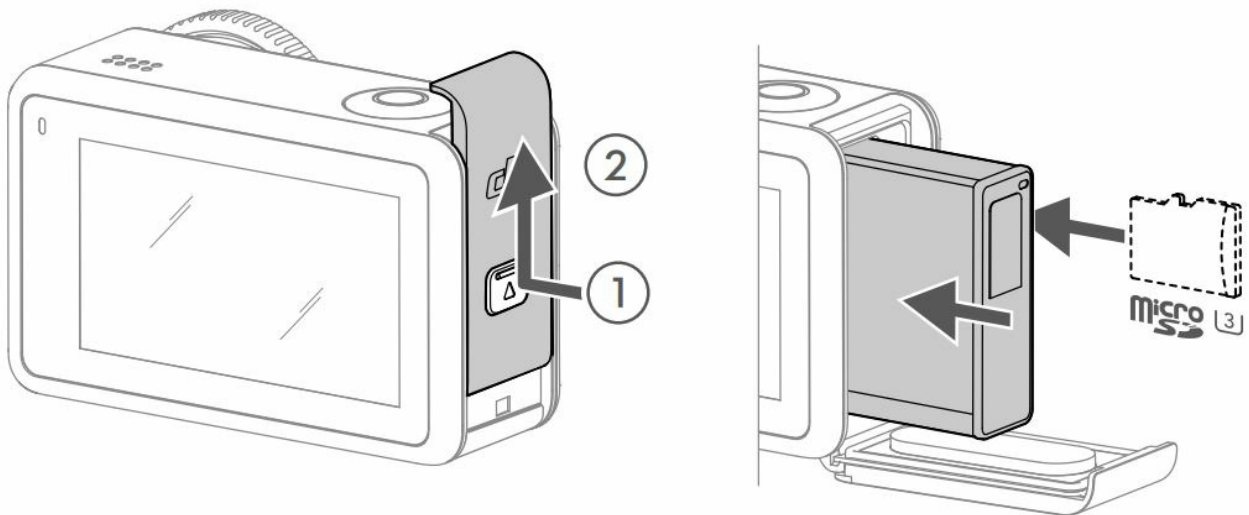


- Step 3: Adjust the video recording duration to OFF (continuous recording) or set it to 1 second for time-lapse videos.

3

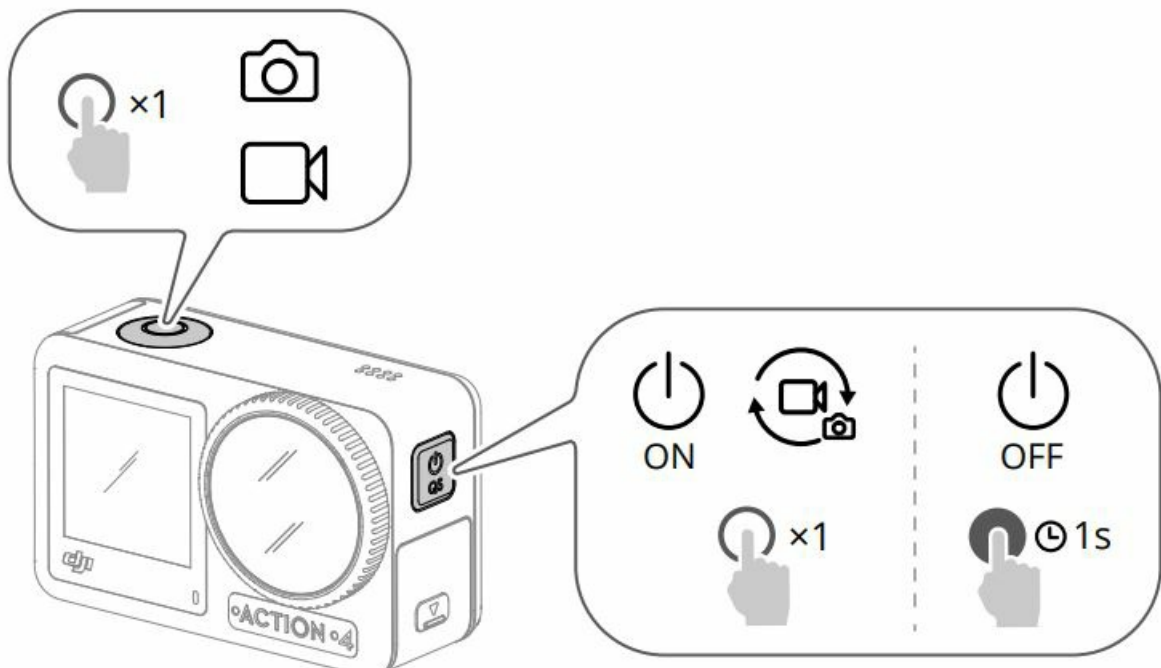


- Step 4: Start recording videos by pressing the record button. The recorded video duration will be displayed on the screen.

4

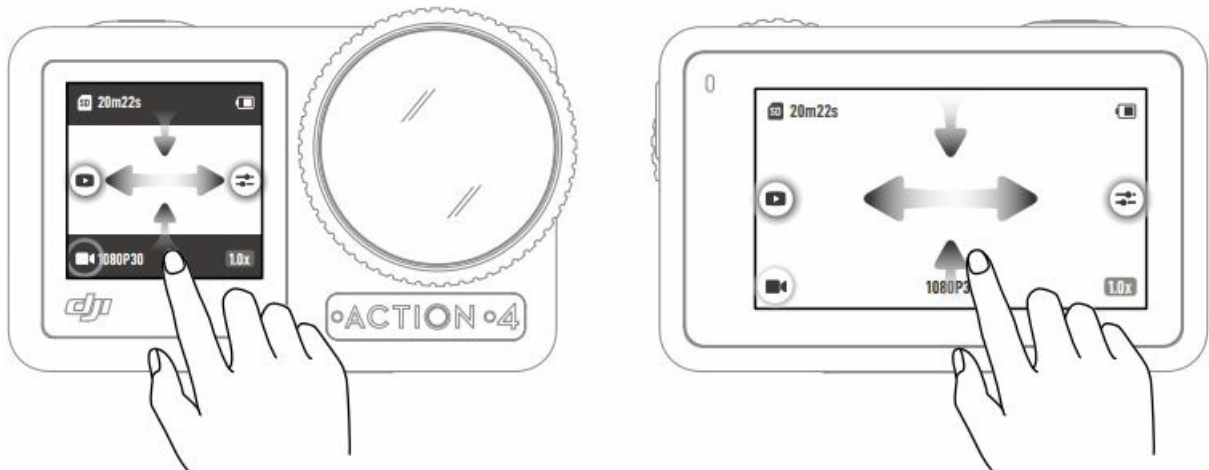


- Step 5: To capture photos, press the photo button. You can set the photo timer delay to 1, 3, or 5 seconds.


5

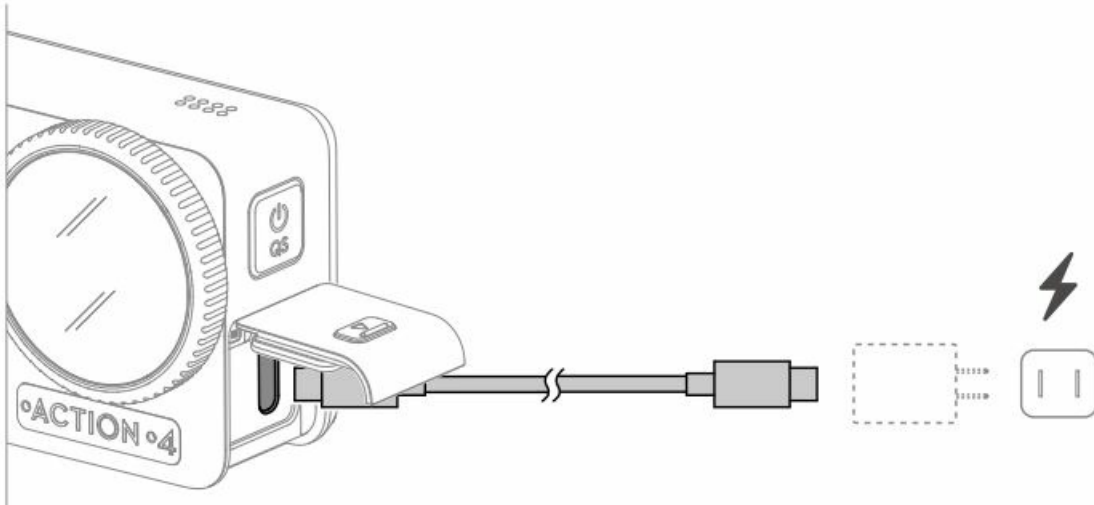


- Step 6: For slow-motion videos, select the desired frame rate and resolution.

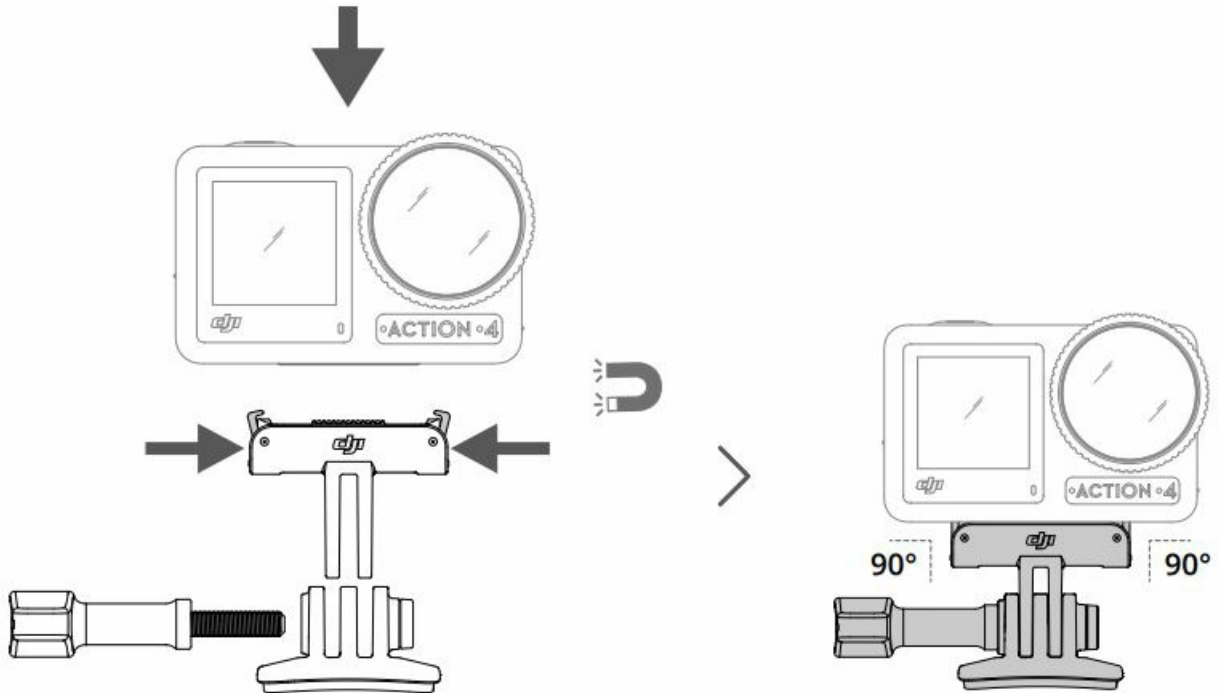

- Step 7: If you need assistance or have any questions, you can contact DJI Support.

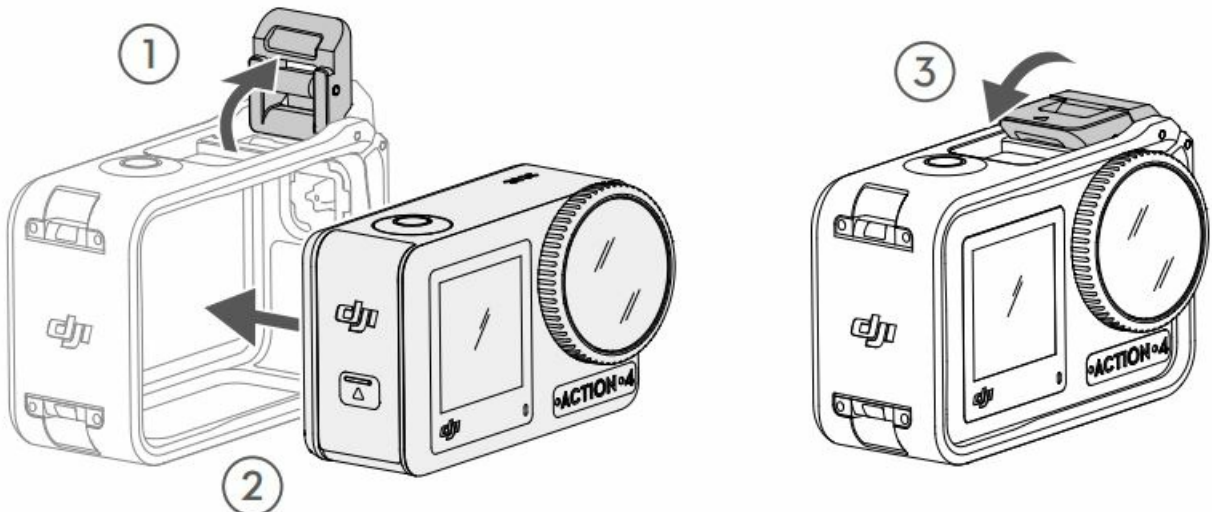

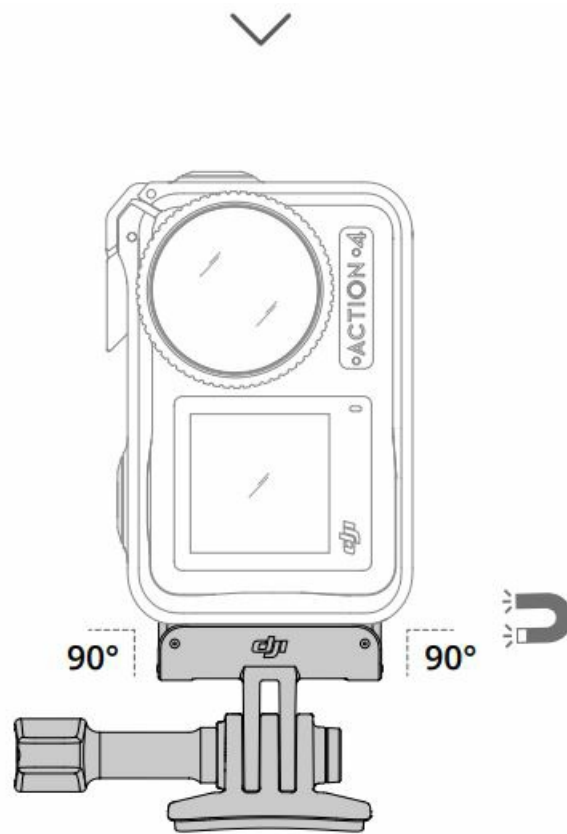

- Step 8: Stay updated with the latest information by subscribing to DJI's newsletter.




WE ARE HERE FOR YOU



Contact
DJI SUPPORT

Documents / Resources

	<p>dji Osmo Action 4 Digital Camera [pdf] User Guide</p> <p>DJI_Osmo_Action_4, Osmo Action 4 Digital Camera, Osmo Action 4, Digital Camera, Camera</p>
---	--

[Manuals+](#).