

dji T1d Bluetooth Controller User Manual

Home » DJi » dji T1d Bluetooth Controller User Manual

Contents

- 1 dji T1d Bluetooth Controller
- **2 Product Introduction**
- **3 Product Parameters**
- **4 Concept of Controller**
- **5 Function Description**
- 6 Troubleshoot
- 7 Product notes
- **8 IMPORTANT SAFETY**

INSTRUCTIONS

- 9 FCC Statment
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



dji T1d Bluetooth Controller




Product Introduction

Bluetooth controller T1d, support Bluetooth 4.0 wireless connection. It is suitable for Android devices (version 4.3 or above) and Apple devices (system version iOS8.0 or above). This product fully intelligent and automatically identifies various models of equipment, no need to manually set Android or iOS mode, connect and play.

Product Parameters

Name of the product	Bluetooth controller T1d
Model of product	T1d
Supporting platform	Android, iOS
Bluetooth	Bluetooth 4.0
Battery type	600mAh, polymer lithium battery
Input	5V-1A
Packaging size	185*180*80mm
Product size	162*101*67mm

Concept of Controller

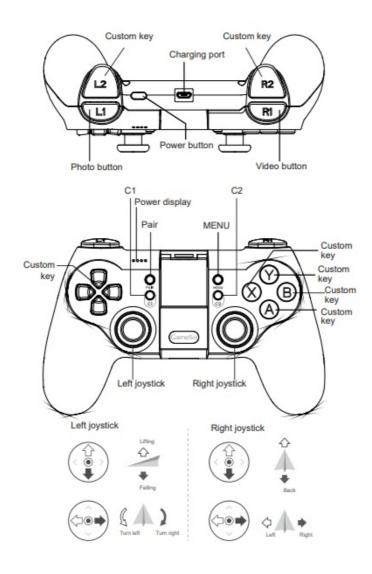

Function Description

1. Turn on and connect the controller

- 1. Short press the button to turn on, if it starts successfully, the ABXY button of the controller will be always on.
- 2. Power display LED flickers slowly; Enter the Bluetooth mode directly to wait for the APP connection;
- 3. Enter the flight control APP to connect the controller;
- 4. After connecting, the power display LED is always on and show the quantity of electricity.
- 5. If the controller has been connected to other phones, press the "Pair" button of the controller to force the controller to enter the state of waiting match.

2. Turn-off

1. Long press the power button for 3-5 seconds, shut down the controller, turn off all the LED lights;

3. Automatic turn-off

- 1. The controller is in connecting state, if it is idle for more than 5 minutes, the controller will turn off automatically.
- 2. The controller is in disconnecting state (waiting for connection), if no connection for 2 minutes, the controller will turn off automatically.

4. Check the power

After the controller is connected successfully, the LED lamp will show current power information. The LED lamp group shows the proportion: Fully bright is about 75% to 100%; 3 lights are about 50% to 75%; 2 lights are

about 25% to 50%; 1 light is about 1% to 25%.

5. Low battery alarm

- 1. When the available power is lower than the low power alarm voltage, the LED light group lasts double flash:
- 2. When the available power is lower than the battery protection voltage, the controller will turn off automatically.

6. Battery charging

- 1. LED lights 1-4 flicker slowly during charging;
- 2. When the charge is over (full), the LED light group is always on; Disconnect the charging cable after charging.

7. Reset

Press the pinhole on the back of the controller quickly with the paperclip, to force the entire controller to power off once, and reboot.

8. Firmware upgrading(OTA)

Connect the controller through the mobile phone APP Bluetooth, to process OTA upgrade. Support Android 4.3 +, iOS8.0 + system; App download address: www.gamesirhk/t1d

- 1. After entering the upgrade mode, the LED keeps on Lantern Dance and waits for the upgrade.
- 2. After the upgrade is completed, turn off the machine and restart it automatically.

Troubleshoot

- 1. When you can't start the machine, Maybe the built-in battery is out of power. Please recharge the controller with the USB line and start up again.
- 2. If the controller crashed or dropped please don't keep it far away from the device, or
- 3. Factory setting (reset): There is a small hole on the back of the controller, press it down with a toothpick or other hard bar object, press RESET key to restore the factory

Product notes

- 1. Avoid strong vibration, don't disassemble, refit, repair by yourself
- 2. Avoid storing in humid, high temperature, fumes and other places
- 3. Avoid the water or other liquids entering the inside of the controller, it may affect the controller
- 4. There are batteries inside, do not drop the controller into the fire, there is a danger of
- 5. The charging voltage of this product is USB 3.7-5.5V DC power supply (ordinary Android mobile phone charging power can be used directly), otherwise it may not be able to charge or cause
- 6. Children need to use this product in the custody of an adult.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.

- 6. Clean only with a dry doth.
- 7. Do not block any ventilation openings. Install this apparatus in accordance with the manufacturer[^] instructions.
- 8. Do not install this apparatus near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the satiety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- 11. Use only attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus.

 When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over
- 13. The mains plug of the power-supply cord shall remain readily operable.
- 14. Do not expose batteries to excessive heat such as sunshine, fire or the like

FCC Statment

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B)/NMB-3(B) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in agordance with the instructions, may cause harmful interference to radi communications. However, there is no guarantee that interference will WARNING: TO REDUCE THE RISK OF FIRE OR ELEQRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Federal Communication Commission Interference Statement THE LIGHTNING FLASH AN ARROWHEAD SYMBOL, WITHIN AN EQUILATERALTRIANGLE, IS INTENDEDTO ALERT THE USER TO THE PRESENCE OF UNINSULATEDTANGEROUS VOLTAGE"WITHIN THE PRODUQ'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCKTO PERSONS. smart THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDEDTO ALERT THE USERID THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUQ. 17. The mains plug of the power-supply cord shall remain readily operable. 18.Do not expose batteries to excessive heat such as sunshine, fire or the like. not occur in a particular installation. If this equipment does ause harmliil interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD [The remote control supplied with] This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not dose securely, stop using the product and keep it away from children. If you think batteries might have

been swallowed or placed inside any part of the body, seek Immediate medical attention.

For All Products with Wireless Operation:

Guangzhou Chicken Run Network Technology Co,Ltd. hereby declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU,ErP 2012/27/EU Directive and RoHS 2011/65/EU Directive The declaration of conformity may be consulted in the support section of our Web site, accessible from www.gamesir.hk

Documents / Resources



<u>dji T1d Bluetooth Controller</u> [pdf] User Manual T1d Bluetooth Controller, T1d, Bluetooth Controller

References

• GameSir | The Global Leading Game Peripheral Brand – GameSir Official Store

Manuals+,