



DKS Doorking 1601-800 Octagonal Lighted Signal Arm Installation Guide


[Home](#) » [DKS](#) » DKS Doorking 1601-800 Octagonal Lighted Signal Arm Installation Guide 

Contents

- [1 DKS Doorking 1601-800 Octagonal Lighted Signal Arm](#)
- [2 Installation instruction](#)
- [3 Install End Cap](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)




DKS Doorking 1601-800 Octagonal Lighted Signal Arm

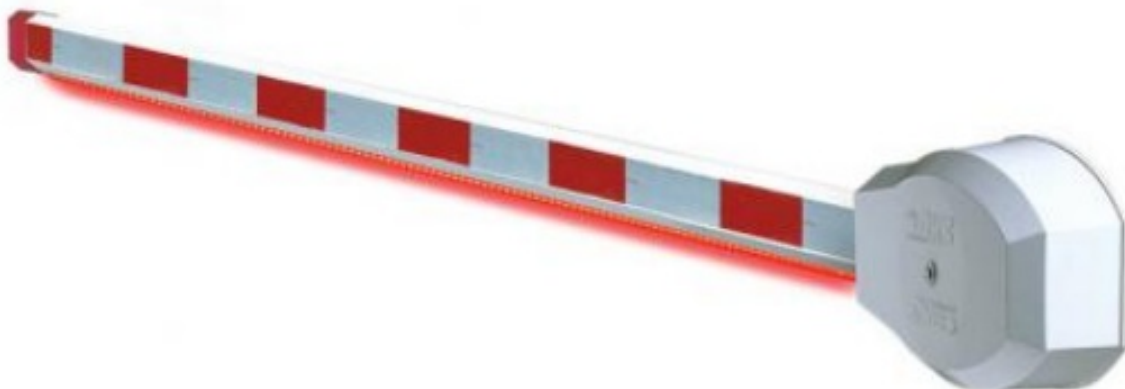

This kit is designed for a 1601 barrier gate operator OR 1603 auto-spikes barrier operator. It CANNOT be used

with a LED/Reverse Edge. It ONLY works with a 1-Piece 14 ft octagon arm with a STANDARD arm bracket, NOT a Break-Away bracket. It will extend a 14 ft arm an extra two feet. The OPTIONAL 2-ft extension MUST be installed WITH the counterweight to balance the extra weight of the extension.

Installation instruction

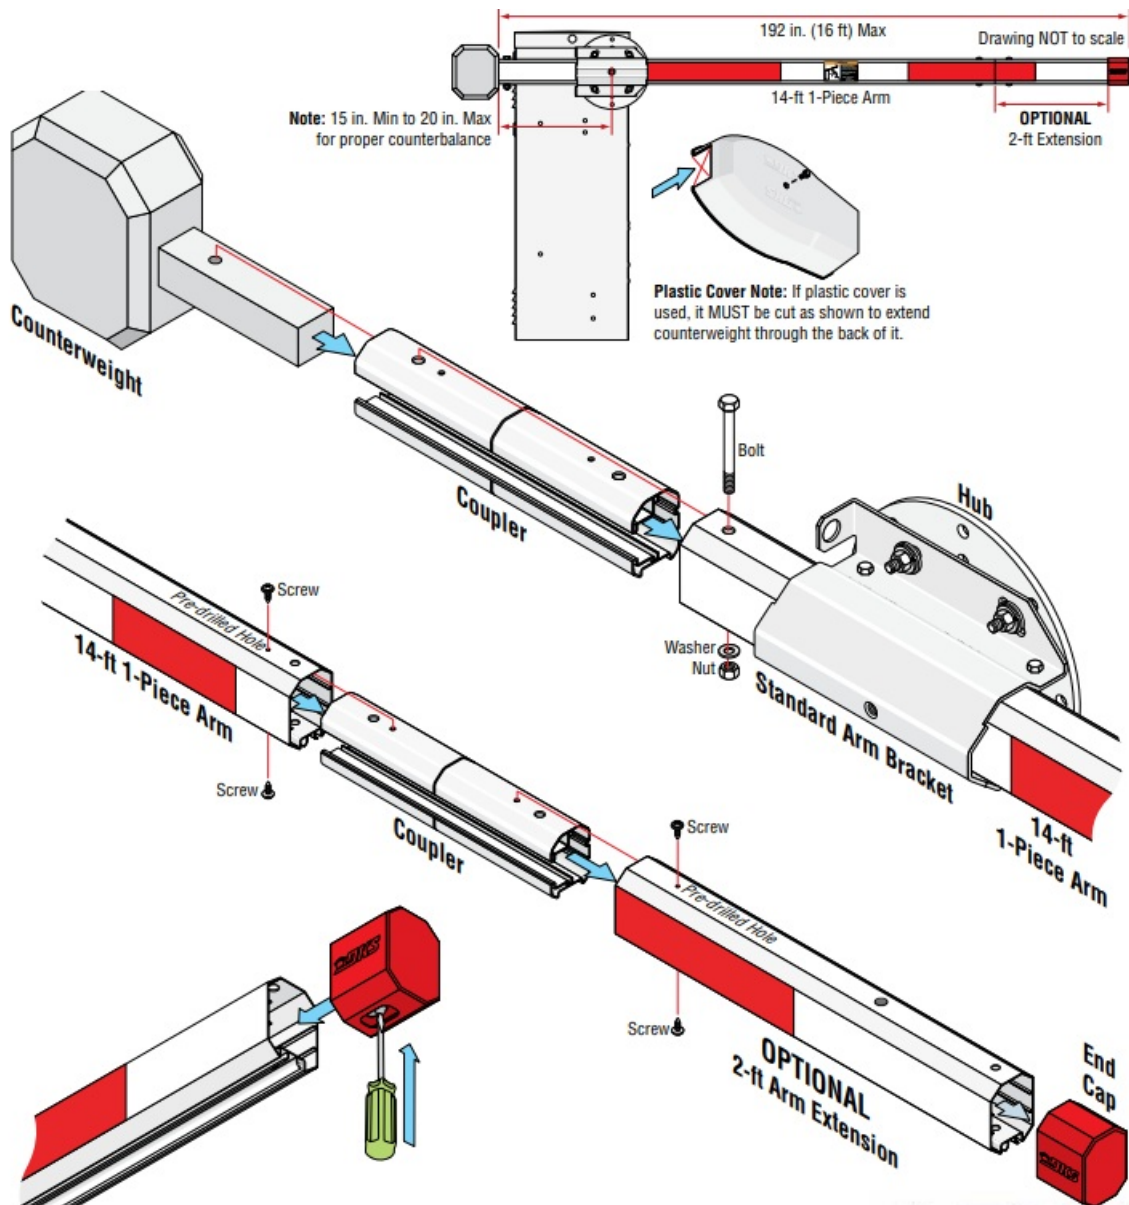


Install End Cap

Push a screwdriver through the hole in cap to release spring while pushing cap on. Keep pushing cap on until a "CLICK" is heard, locking it in place.

Adrees: 120 S. Glasgow Avenue Inglewood, California 90301 U.S.A

Documents / Resources

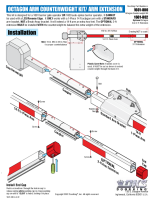

[DKS Doorking 1601-800 Octagonal Lighted Signal Arm](#) [pdf] Installation Guide
Doorking 1601-800 Octagonal Lighted Signal Arm, Octagonal Lighted Signal Arm, Doorking 1601-80, Lighted Signal Arm, Signal Arm, Arm