

DMP V-6012WB WiFi Bullet Network Camera User Guide

Home » DMP » DMP V-6012WB WiFi Bullet Network Camera User Guide 12



Contents

- 1 DMP V-6012WB WiFi Bullet Network
- Camera
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 GET STARTED**
- **5 WIRE THE CAMERA**
- **6 CONNECT THE CAMERA TO WI-FI**
- **7 MOUNT THE CAMERA**
- **8 CONFIGURE MOTION DETECTION REGIONS**
- 9 ADDITIONAL INFORMATION
- **10 ORDERING INFORMATION**
- 11 CERTIFICATIONS
- 12 SPECIFICATIONS
- **13 FCC Information**
- 14 Industry Canada Information
- 15 Documents / Resources
 - 15.1 References
- **16 Related Posts**



DMP V-6012WB WiFi Bullet Network Camera



Product Information

Product Name	V-6012WB Wi-Fi Bullet Network Camera	
Features	2 Megapixel indoor/outdoor video camera Live and recorded HD video clips Compatible with Virtual KeypadTM Requires active Dealer Admin account at dealer.securecomwireless.com	
Included Items	One V-6012WB Camera with Mounting Plate 12 VDC Power Supply Mounting Template Hardware Pack One 32 GB SD Card	
Compatibility	Any active Virtual Keypad account with Cameras and NVRs enabled The Tech APP must be used to connect the camera to Wi-Fi	

Product Usage Instructions

- 1. Wire the camera:
 - Refer to Figure 1 for the location of the power and Ethernet connectors.
 - To use this camera with a Wi-Fi connection, connect a 12 VDC power source to the camera power connector. You can optionally connect a network cable to the camera Ethernet connector.
 - Note: The V-6012WB does not support POE.
- 2. Connect the camera to Wi-Fi:
 - 1. Log into Tech APP and select Video.
 - 2. Tap the Add icon in the Cameras section.
 - 3. When prompted to select a connection type, tap Wi-Fi.

- 4. Enter the Wi-Fi SSID and passphrase. Press Next.
- 5. The camera will flash a blue LED when it is ready to connect to the Wi-Fi network. Hold the QR code 6-12 inches in front of the camera lens until the red LED flashes faster. The QR code must be facing the camera lens. The LED will turn solid blue once it has been connected to the Wi-Fi network. Press Next.
- 6. Enter the camera MAC Address. Press Next.
- 7. Wait for the camera to be added to the system in Tech APP. This may take several minutes.
- 8. Enter a name for the camera.
- 9. Under Advanced, you can configure the following basic settings: Video Quality, Flip Image, Record on Alarm, Time Zone, Observe DST.
- 10. Press Save.
- 11. Note: If the LED flashes red (around once every second), it means that the network connection has failed. Press and hold the reset button for 10 seconds until the camera restarts, then try again.
- 3. Mount the camera:
 - Refer to Figure 3 for mounting instructions.
 - Place the mounting template at the location you want to mount the camera.
 - Drill holes into the mounting template.
 - Turn the adjustment knob counterclockwise to loosen the camera.
 - Use the included screws and wall anchors to mount the camera base to a wall or ceiling.
 - Turn the adjustment knob clockwise to tighten the camera.
- 4. Configure motion detection regions according to the provided guide.

GET STARTED

The V-6012WB is a 2 Megapixel indoor/outdoor video camera that allows users to view live and recorded HD video clips in Virtual Keypad™.

To activate the camera, you need an active Dealer Admin account at dealer.securecomwireless.com.

Compatibility

- Any active Virtual Keypad account with Cameras and NVRs enabled
- The Tech APP must be used to connect the camera to Wi-Fi

What's Included

- One V-6012WB Camera with Mounting Plate
- 12 VDC Power Supply
- Mounting Template
- Hardware Pack
- · One 32 GB SD Card

Procedure

This guide walks you through the required steps needed to install a V-6012WB camera. They are:

- 1. Wire the camera.
- 2. Connect the camera to Wi-Fi.

- 3. Mount the camera.
- 4. Configure motion detection regions.

WIRE THE CAMERA

Refer to Figure 1 for the location of the power and Ethernet connectors.

Standard Power Connection

To use this camera with a Wi-Fi connection, connect a 12 VDC power source to the camera power connector. You can optionally connect a network cable to the camera Ethernet connector. For compatible power supplies, refer to "Accessories".

Note: The V-6012WB does not support POE.

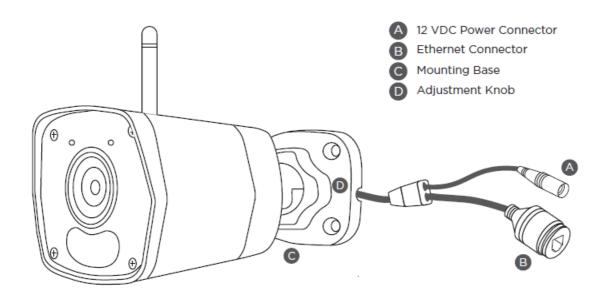


Figure 1: Camera Power Details

CONNECT THE CAMERA TO WI-FI

Ensure that you know the Wi-Fi network and password that you wish to connect the camera to.

- 1. Log into Tech APP and select Video.
- 2. Tap the Add icon in the Cameras section.
- 3. When prompted to select a connection type, tap Wi-Fi.
- 4. Enter the Wi-Fi SSID and passphrase. Press Next.
- 5. The camera will flash a blue LED when it is ready to connect to the Wi-Fi network. Hold the QR code 6-12 inches in front of the camera lens until the red LED flashes faster. The QR code must be facing the camera lens. The LED will turn solid blue once it has been connected to the Wi-Fi network. Press Next.
- 6. Enter the camera MAC Address. Press Next.
- 7. Wait for the camera to be added to the system in Tech APP. This may take several minutes.



Figure 2: Connect the Camera to WI-FI with Tech APP

- 8. Enter a name for the camera.
- 9. Under Advanced, you can configure the following basic settings:
 - 1. Video Quality
 - 2. Flip Image
 - 3. Record on Alarm
 - 4. Time Zone
 - 5. Observe DST
- 10. Press Save.

Note: If the LED flashes red (around once every second), it means that the network connection has failed. Press and hold the reset button for 10 seconds until the camera restarts, then try again.

STATUS	INDICATOR
Camera is starting up	Steady red
Ready for Wi-Fi connection	Flashing green (around once every second)
Wi-Fi connection successful	Steady green
Wi-Fi connection failed	Flashing red (around once every second)
Press and hold the reset button	Flashing red (around once every second)

MOUNT THE CAMERA

Standard Wall or Ceiling Mount

Refer to Figure 3 when mounting the camera.

- 1. Place the mounting template at the location you want to mount the camera.
- 2. Drill holes into the mounting template.
- 3. Turn the adjustment knob counterclockwise to loosen the camera.
- 4. Use the included screws and wall anchors to mount the camera base to a wall or ceiling.
- 5. Turn the adjustment knob clockwise to tighten the camera.

Note: The mounting surface must be capable of holding five times the camera's weight.

Adjust the Camera

Refer to Figure 4 when adjusting the camera.

- 1. Turn the adjustment knob counterclockwise to loosen the camera.
- 2. Adjust the pan, tilt, and camera rotation angle as needed.
- 3. Turn the adjustment knob clockwise to tighten the camera.

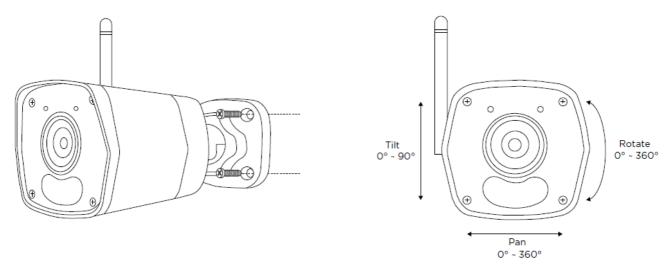


Figure 3: Mount the Camera

Figure 4: Adjust the Camera

CONFIGURE MOTION DETECTION REGIONS

After mounting the camera, configure the camera motion detection regions in Dealer Admin.

1. Navigate to Dealer Admin and select the camera you want to add a motion detection region to.

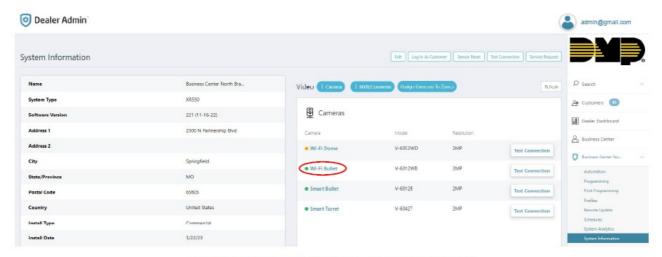


Figure 5: Select a V-6000 Camera in Dealer Admin

- 2. In the Regions & Analytics section, select +Region and give it a Name.
- 3. Select the sensitivity of the region. Default is 50.
- 4. Dealer Admin will populate a 4-point rectangle in camera view screen. Click and drag an endpoint to change the size of the region.

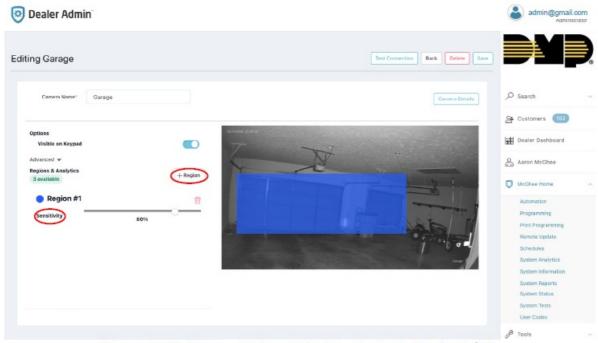


Figure 6: Configure a Motion Detection Region in Dealer Admin

ADDITIONAL INFORMATION

Video Privacy in Dealer Admin and Virtual Keypad

In Virtual Keypad, end users can choose to allow video access to technicians and dealers. When video access is enabled, all Administrator level app users will receive a notification email. To enable video access, follow the steps below.

- 1. Navigate to Virtual Keypad.
- 2. Go to Settings and select Video Privacy.
- 3. Use the toggle to grant technicians and dealers unlimited access to the video feed. Use the Grant Access button to give temporary access. The default is 12 hours, although access can be revoked instantly by pressing the Revoke Access button.

Note: All cameras brought online will immediately be granted access to the video feed for 12 hours.

Replace the SD Card

Refer to Figure 7 for the location of the SD card slot.

- 1. Locate the replacement SD card and place it to the side.
- 2. Remove the cover on the bottom of the camera.
- 3. Insert the SD card into the slot.
- 4. Reattach the cover.

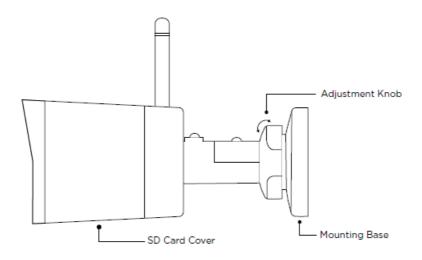


Figure 7: Camera Details

ORDERING INFORMATION

• V-6012WB 2 MP Wi-Fi Bullet Network Camera

Accessories

- V-6000-PS 12 VDC Power Supply
- V-SD32G 32 GB Replacement SD Card
- V-SD64G 64 GB Replacement SD Card

CERTIFICATIONS

- FCC Part 15 Registration ID: CCK-V6012WB
- Industry Canada: 5251A-V6012WB

SPECIFICATIONS

Sensor and Lens

• Image Sensor 2 MP, 1/2.8" CMOS

Network

Protocols IPv4

Wi-Fi

- Wireless Standards IEEE 802.11b/g/n
- Frequency Range 2.4 GHz ~ 2.4835 GHz
- Frequency Bandwidth 20 MHz Support

Hardware

- Power Consumption 12 VDC Max 4.0 W
- Weight 0.55 lbs (0.25 kg)
- Dimensions 6.8" x 3" x 2.8" (17.2 cm x 7.6 cm 7.2 cm)
- · Housing Material Metal + Plastic

Environmental

- Operating Temperature -22°F to 140°F (-30°C to 60°C)
- Operating Humidity Less than 95% RH, non-condensing

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Information

This device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Designed, engineered, and manufactured in Springfield, MO using U.S. and global components. LT-2734 23231 © 2023

Documents / Resources



DMP V-6012WB WiFi Bullet Network Camera [pdf] User Guide

V-6012WB, V-6012WB WiFi Bullet Network Camera, WiFi Bullet Network Camera, Bullet Network Camera, Network Camera, Camera

References

• <u>DMP.com</u> | Welcome to Digital Monitoring Products

Manuals+,