

DNAKE
UM5-F19 Cameras
Security Relay
Module



DNAKE UM5-F19 Cameras Security Relay Module User Guide


[Home](#) » [DNAKE](#) » DNAKE UM5-F19 Cameras Security Relay Module User Guide 

Contents

- [1 DNAKE UM5-F19 Cameras Security Relay Module](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Instruction](#)
- [5 Key Features](#)
- [6 Physical](#)
- [7 Package Features](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



DNAKE UM5-F19 Cameras Security Relay Module

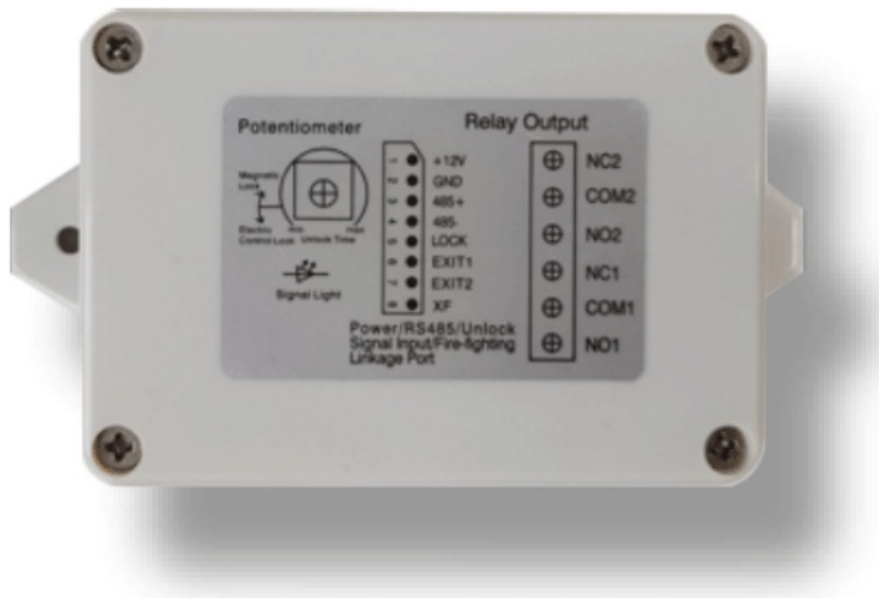

Product Information

Specifications:

- **Model:** DNAKE Security Relay I/O Module UM5-F19
- **Features:** Two relays, Two exit buttons, Unlock time setting
- **Package Content:** DNAKE UM5-F19 (Power adapter not included), Screwing Kit, Quick Start Guide
- **Qty/CTN:** 81 pcs
- **N.W/PCS:** 0.12 kg
- **G.W/CTN:** 12.60 kg
- **Giftbox Size:** 120 x 65 x 45 mm
- **Carton Size:** 375 x 440 x 200 mm

Product Usage Instructions

1. Connect the DNAKE Security Relay I/O Module UM5-F19 to the DNAKE Door Station using the provided Screwing Kit.
2. Ensure the power adapter is connected to the module for proper functionality.
3. Use the two exit buttons to trigger the opening of the designated doors.
4. Set the unlock time as needed using the provided settings.
5. For elevator integration, follow the elevator manufacturer's instructions for connecting to the module.

Instruction

The DNAKE Security Relay I/O Module UM5-F19 enables DNAKE Door Station to open two doors, for example, main door and garage door. It also enables elevator to reach the first floor automatically for the resident or visitor after the door is open.

Key Features

- Two relays

- Two exit buttons
- Unlock time setting

Physical

- **Material:** Plastic
- **Power Supply:** DC12V±10%
- **Unlock Current:** Maximum 3.5 A
- **Standby Power:** 1 W
- **Rated Power:** 1W
- **Dimension:** 114.5 x 57.5 x 34 mm
- **RS485:** 1
- **Exit Button:** 2
- **Fire Linkage:** Yes
- **Unlock Time Setting:** Yes
- **Working Temperature:** -40°C +55°C
- **Storage Temperature:** -40°C +70°C
- **Working Humidity:** 10% to 90% (non-condensing)

Package Features

- **Package Content:**
 - DNAKE UM5-F19 (Power adapter not included)
 - Screwing Kit
 - Quick Start Guide
- **Qty/CTN:** 81 pcs
- **N.W/PCS:** 0.12 kg
- **G.W/CTN:** 12.60 kg
- **Giftbox Size:** 120 x 65 x 45 mm
- **Carton Size:** 375 x 440 x 200 mm

Email: sales01@dnake.com

FAQ

Q: Can I use this module with any DNAKE Door Station model?

A: The DNAKE Security Relay I/O Module UM5-F19 is designed to work specifically with compatible DNAKE Door Station models. Ensure compatibility before use.

Q: How do I adjust the unlock time setting?

A: To adjust the unlock time setting, refer to the user manual for detailed instructions on accessing and modifying the settings.

Q: Is the power adapter included in the package?

A: No, the power adapter is not included in the package. You will need to use a compatible power adapter for proper operation.



DNAKE UM5-F19 Cameras Security Relay Module [pdf] User Guide
UM5-F19, UM5-F19 Cameras Security Relay Module, UM5-F19, Cameras Security Relay Module, Security Relay Module, Relay Module, Module

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.