

DNAKE v1.1.3 Remote Upgrade App User Guide

[Home](#) » [DNAKE](#) » DNAKE v1.1.3 Remote Upgrade App User Guide 

Contents

- 1 [DNAKE v1.1.3 Remote Upgrade App](#)
- 2 [Upgrade intercom devices](#)
- 3 [Add UUID and Authkey to Indoor Monitor](#)
- 4 [Documents / Resources](#)
 - 4.1 [References](#)
- 5 [Related Posts](#)



DNAKE v1.1.3 Remote Upgrade App




Upgrade intercom devices

Upgrade intercom devices by RemoteUpgrade_v1.1.3

The followings are the steps to upgrade DNAKE Intercom devices.

1. **Step 1:** Run RemoteUpgrade_v1.1.3 and click search to search devices in the same local network.
2. **Step 2:** Make sure IP address of devices is the same network segment with your computer.
3. **Step 3:** Select firmware file and click the one you prepare to upgrade.
4. **Step 4:** Click upgrade and wait for the upgraded device reboot.

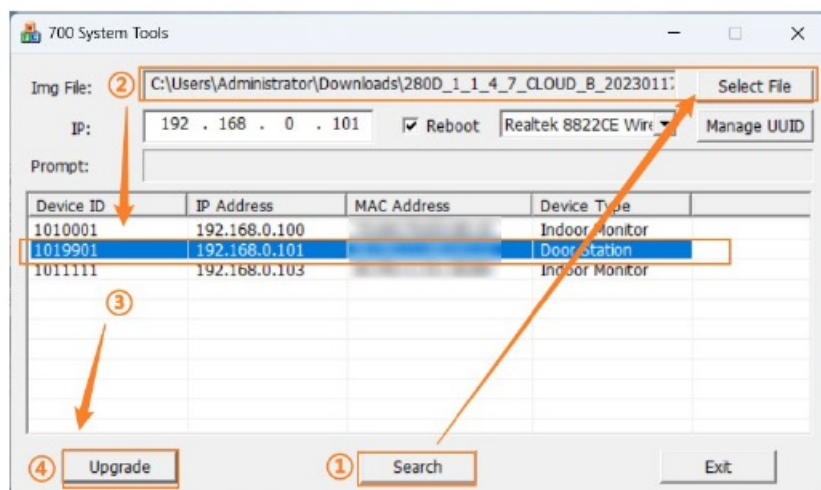


Add UUID and Authkey to Indoor Monitor


Add UUID and Authkey to Indoor Monitor by RemoteUpgrade_v1.1.3

The followings are the steps to add UUID and Authkey to Indoor Monitor.


1. **Step 1:** Run RemoteUpgrade_v1.1.3 and click Manage UUID.

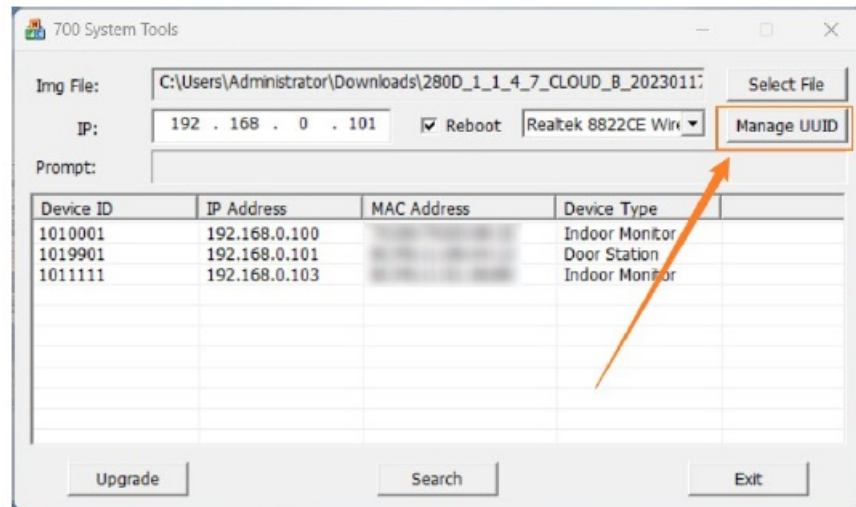

2. **Step 2:** Click import and select the Account file to register licenses to devices. If you don't have license file, please contact DNAKE or DNAKE partners. Export is used for exporting registered licenses or template.
3. **Step 3:** Wait for the process. You can use DNAKE Smart Life app to scan QR Code after uploading license to Indoor Monitor.

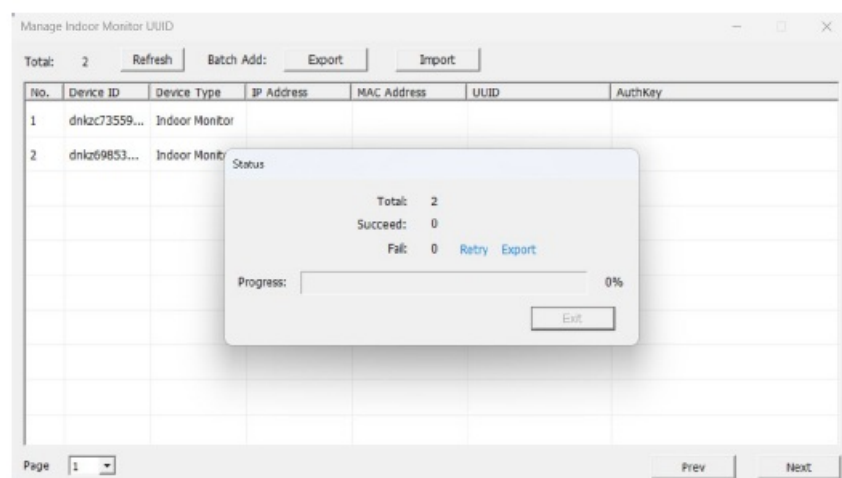

Documents / Resources

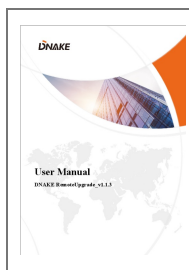

[DNAKE v1.1.3 Remote Upgrade App \[pdf\] User Guide](#)
v1.1.3 Remote Upgrade App, v1.1.3, Remote Upgrade App, Upgrade App, App

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)