



DocSmart CS08 Mini Chainsaw User Manual

[Home](#) » [DocSmart](#) » DocSmart CS08 Mini Chainsaw User Manual 

DocSmart CS08 Mini Chainsaw User Manual



Contents

- 1 Introduce
- 2 What's in the Box
- 3 Operation
- 4 Operating Instructions
- 5 Frequently Asked Questions
- 6 Specification
- 7 Warranty
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

 
Introduce

DocSmart mini cordless chainsaw features an 8 inch and a 6 inch 2-in-1 guideplate design that allows you to adjust the size of the chainsaw at any time to your work needs. And our mini cordless chainsaw for cutting trees is equipped with powerful 2*2000mAh rechargeable batteries that can provide longer battery life. It is perfect for gardening pruning, shrub pruning, logging.


What's in the Box

8inch Guide Plate and 8inch Chain are already preinstalled on the chainsaw.


- Electric coarse branch

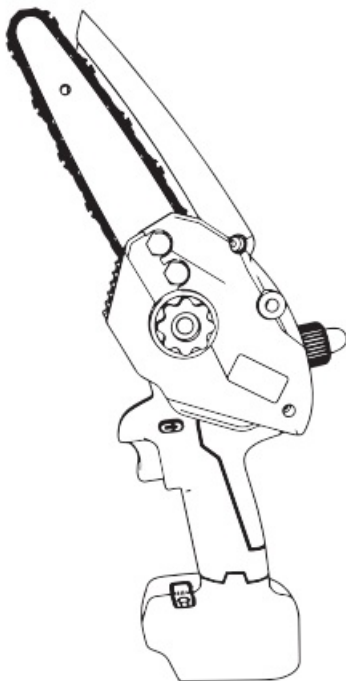

- Battery

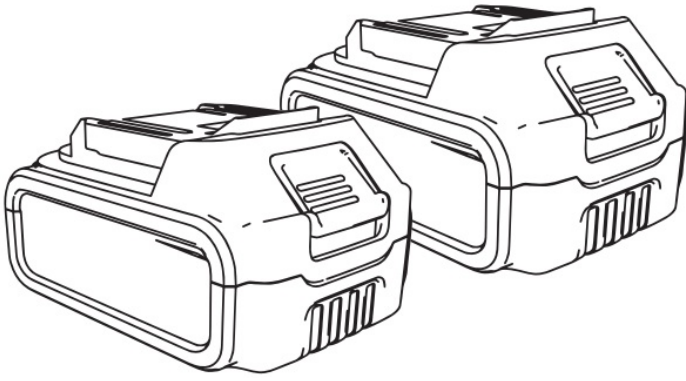 


- Carrying case

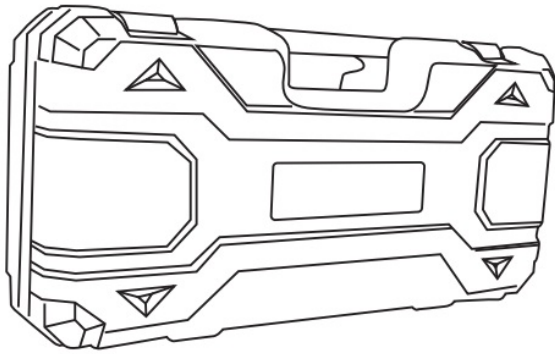 


- 6inch Chain



 
- 6inch Guide Plate

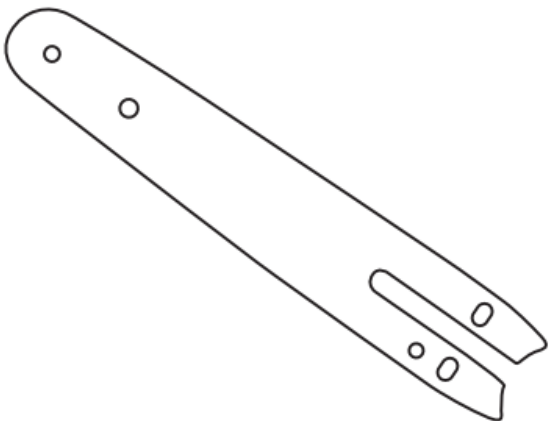


- Charger

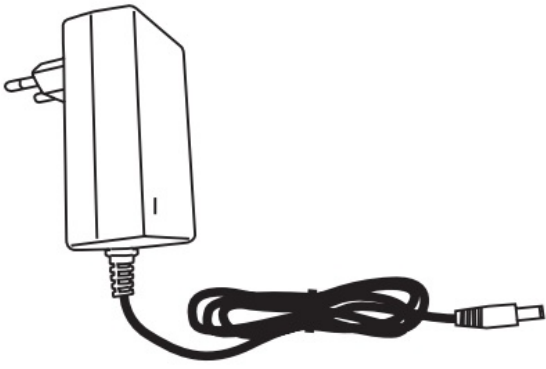 


- brush

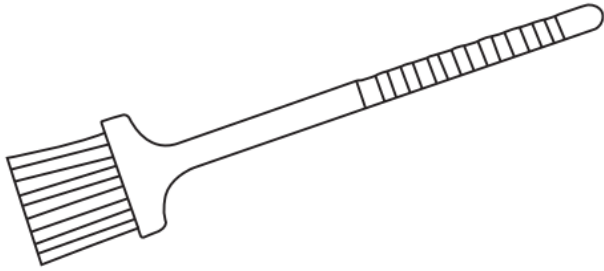 


- Sharpener

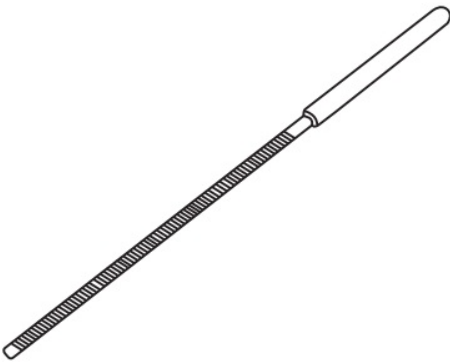 


- Glasses

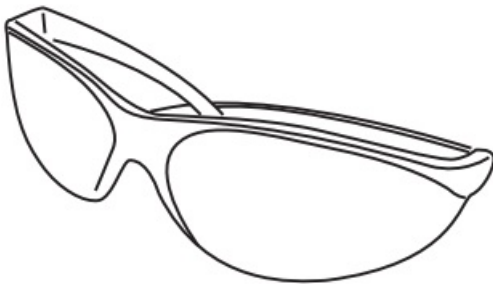 


- Grip

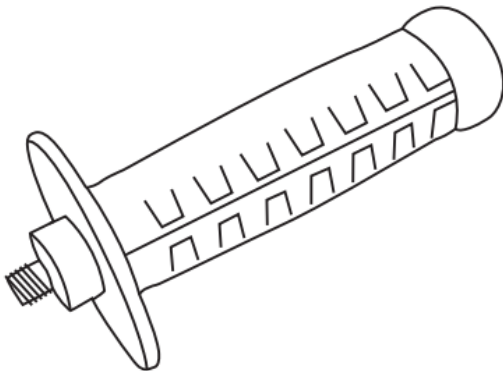 


- Wrench

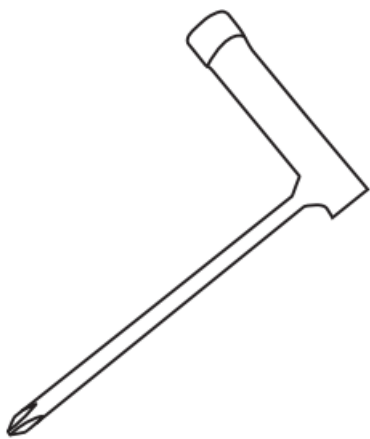 

- Gloves

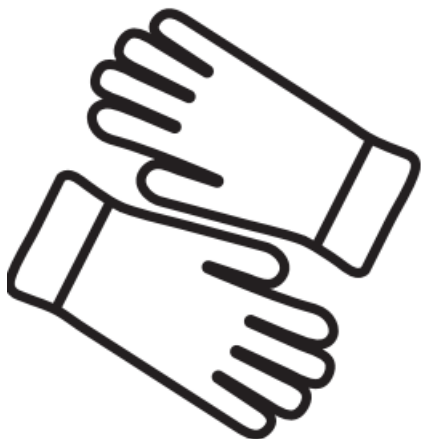 


- User Manual

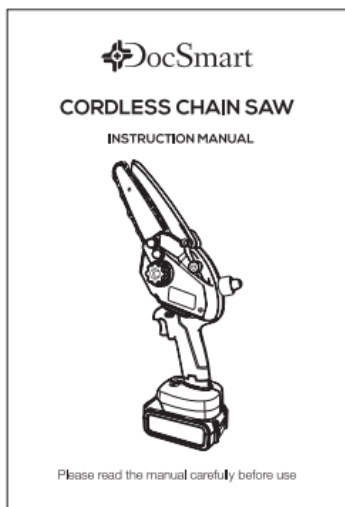 


Operation

Structure

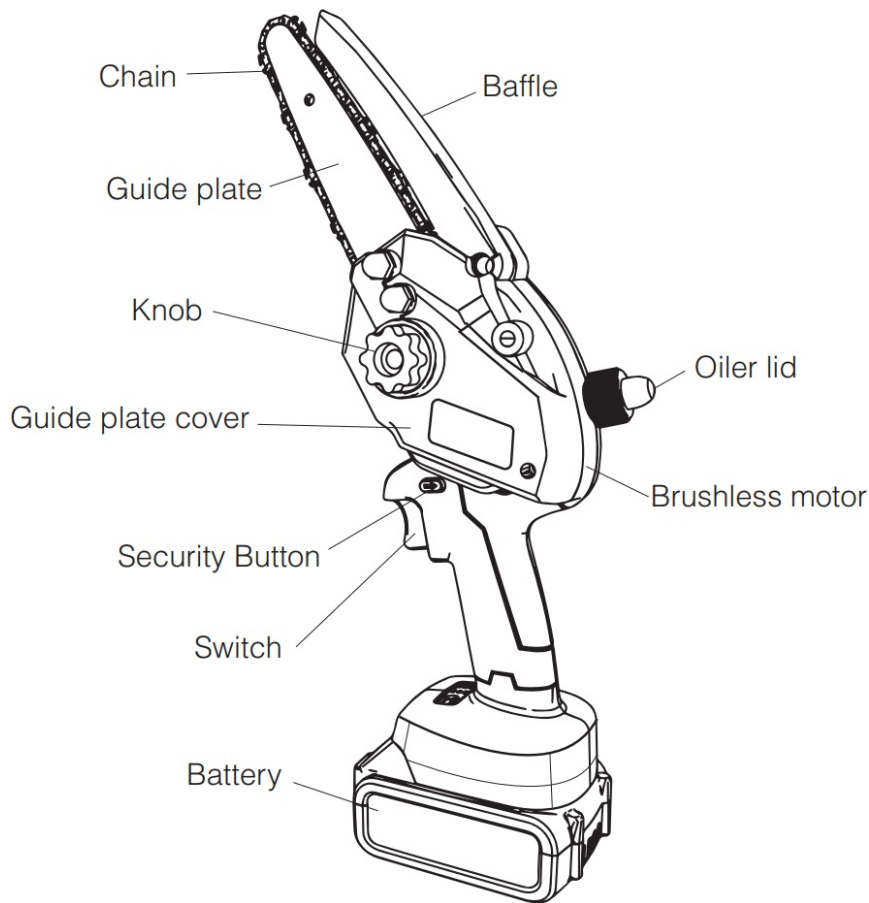

Steps for usage


1. Install the guide plate to the host, the guide plate screw hole is flush with the first screw post.

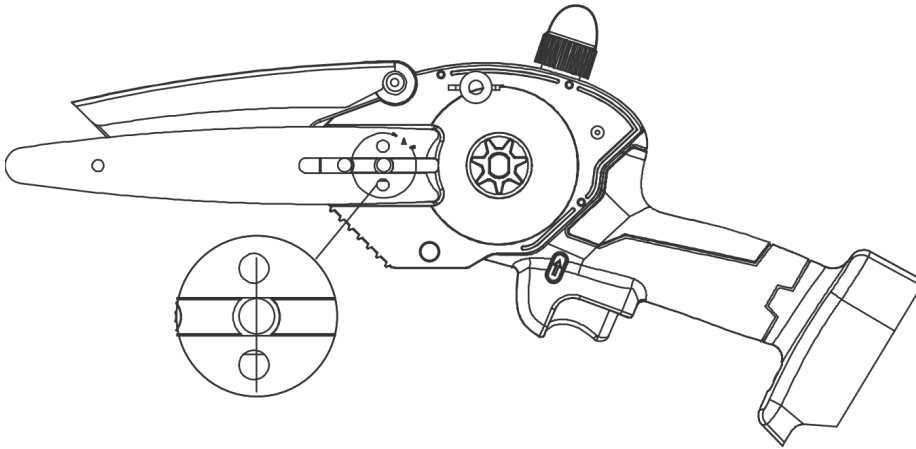

Notice:

When installing the guide plate, make sure that the adjusting block gets stuck into the positioning adjusting hole at the end of the guide plate! How to remove guide plate, loosen compression button, remove the side cover, after remove the side cover as picture, remove the guide carefully.


2. Install the chain, First load the chain into the guide plate, and the middle guide tooth just sticks into the guide plate guide slot.

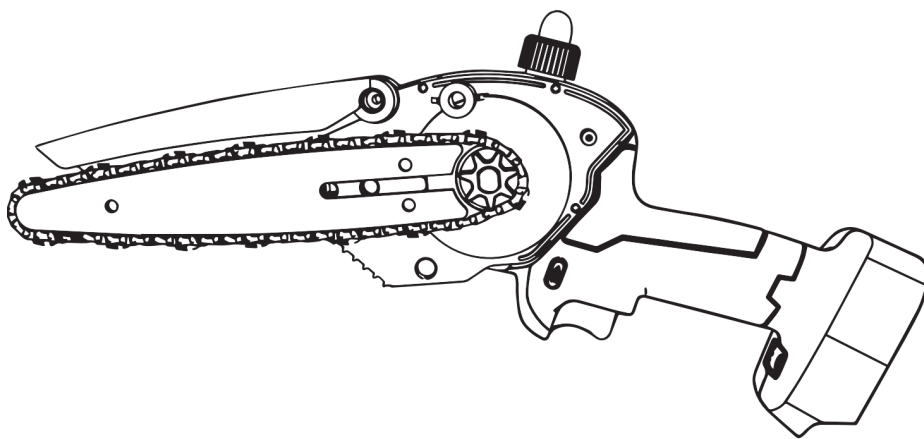


Notice:

The chain blade should be forward. The charging chainsaw has a device to adjust the tensioning of the chain.


3. Turn the knob on the guide plate cover to align the guide plate adjusting screw column boss with the first screw hole

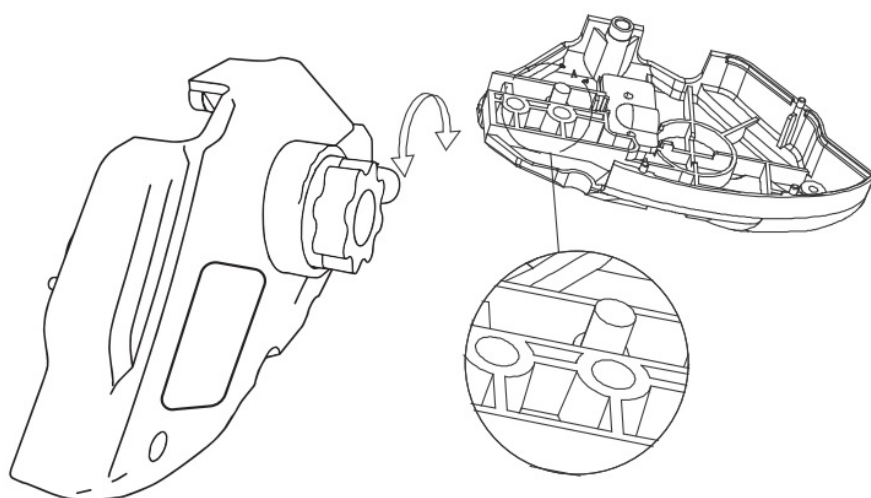


4. Align the convex points of the adjusting screws on the guide plate cover with the guide plate holes to install the guide plate cover.

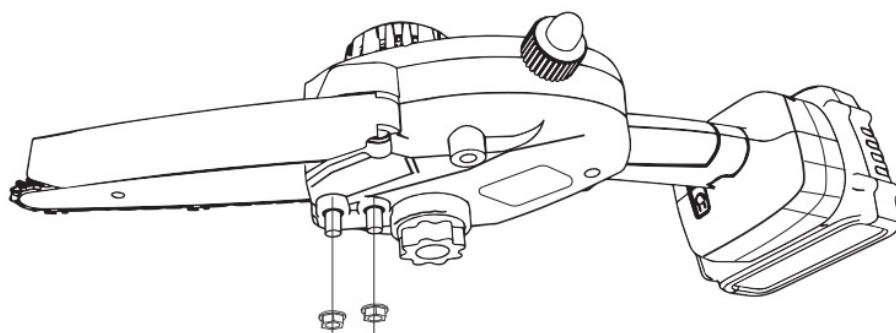


5. Turn the knob on the guide plate cover clockwise, pull the chain down when you turn the knob, and it can rebound quickly when you loosen the chain.

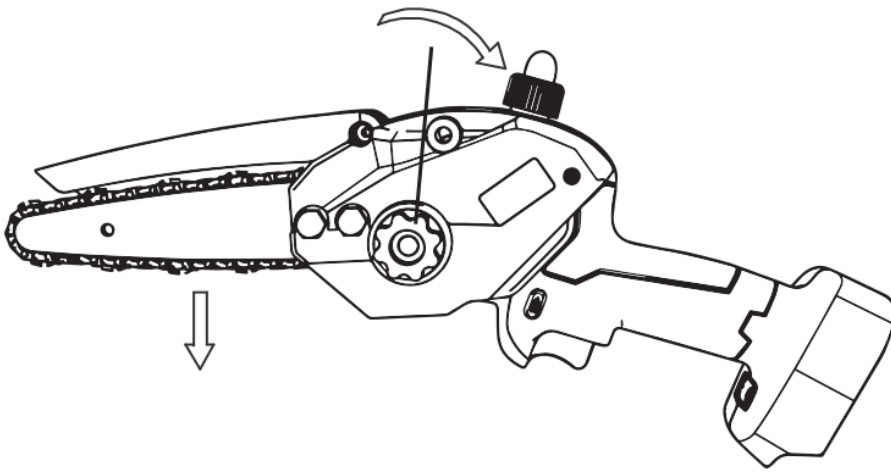


6. Use a socket wrench to tighten the outer hexagonal nut, and then screw the screw into the hole of the guide plate cover.

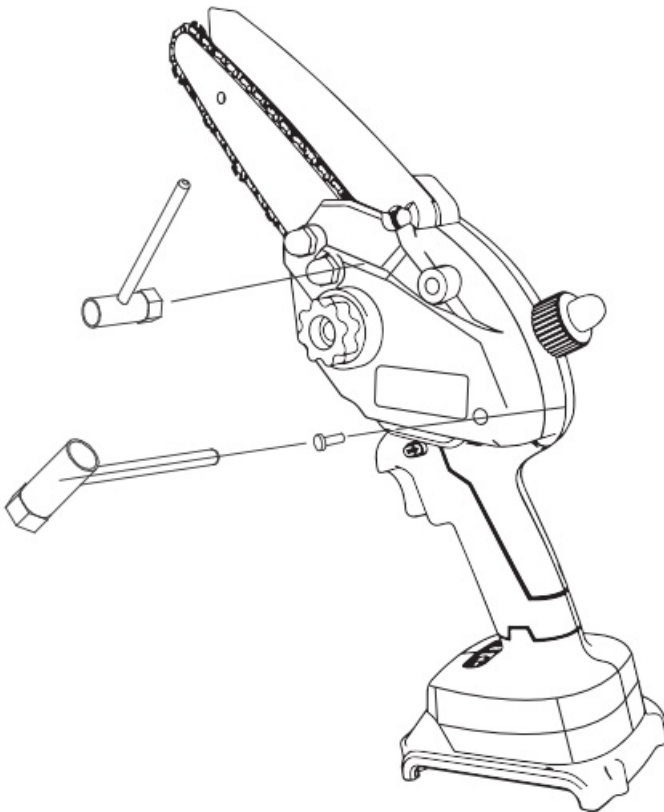


7. Unscrew the oiler lid, pour the lubricating oil into the oiler, and tighten the oiler lid (the product does not provide lubricating oil).

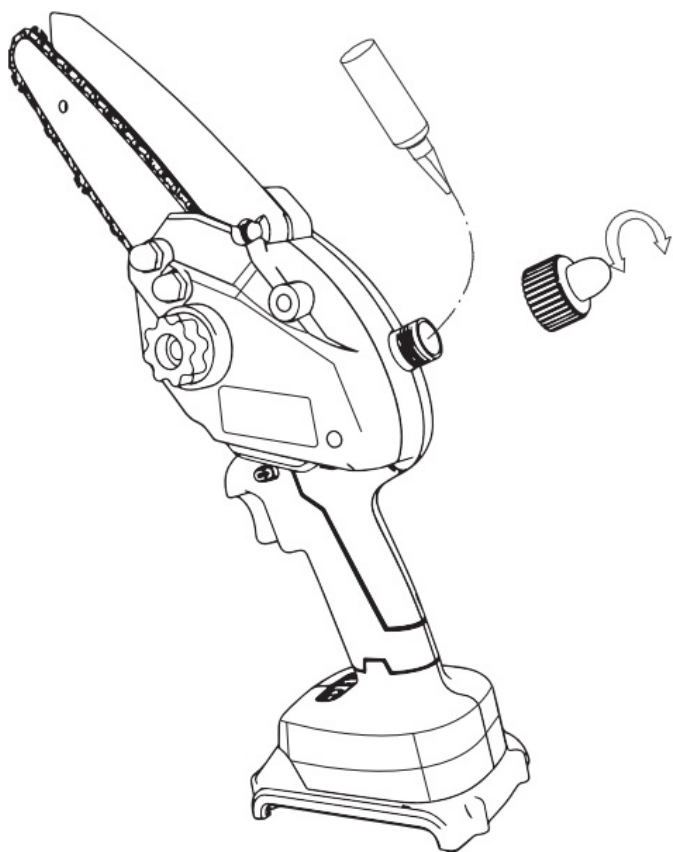

8. Pack the battery into the machine.

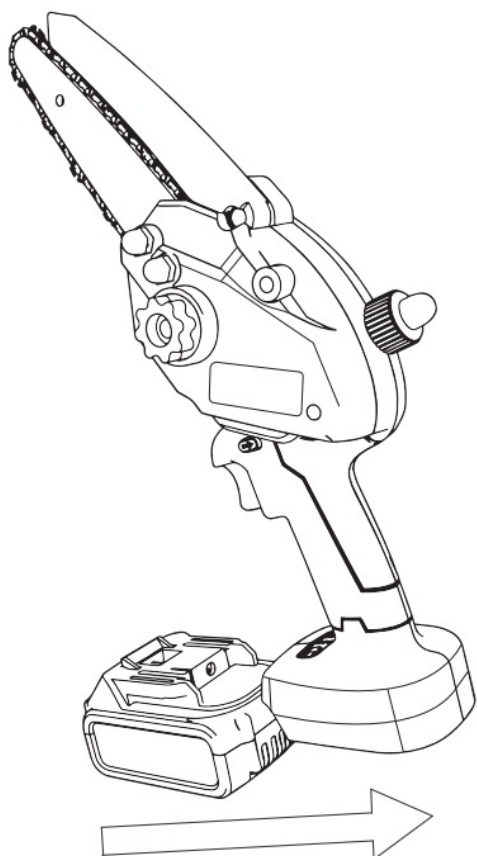

9. Press the switch to start the machine,

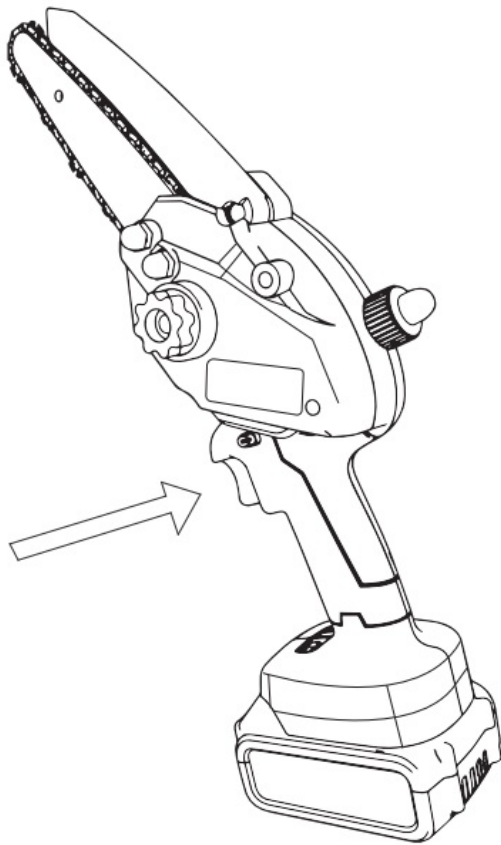

Operating Instructions

1. Please wear suitable clothing and work gloves when using this mini chainsaw.
2. Before each use, make sure the belt is running normally, start/off switch and safety switch must be available for normal use. When loosening the start switch the power must be turned off. If the switch is damaged, stop using the device. Make sure the voltage of the power supply is consistent with the voltage on the nameplate. The risk of injury can be reduced by wearing protective devices and ensuring that the devices are functioning properly.
3. Confirm the frequency of the operation to ensure that the operation is in the best condition.
4. In order to save the battery and ensure the best service life of the electric chain saw, don't let the machine overload and cut dry and wet branches with a diameter of more than 130mm.
5. When cutting the knife edge mode to stop the operation, turn off the power switch and splash down the battery box.
6. When the device is running, stay your other hand is at least 15cm away from the cutting area of the blade, and the hand must not be put into the knife edge.
7. Do not use this equipment to force the bigger branches, otherwise it may make the blade deform and make the pruning stick,
8. In cold or humid weather, to protect the battery pack, put it under waterproof clothing, do not use this equipment in rainy days.
9. We recommend that after daily use, the connection between the pruning number and the battery pack must be cut, and the power switch is closed and put together into the matching tool box.
10. If the user feels the electricity is not enough or the cutting is not smooth enough, check if the electricity is exhausted or the blade is dull. Safety Warnings

Charing the battery

1. Do not expose the battery to extreme conditions such as high temperature or shock. Otherwise, it will cause personal injury due to the leakage of the electrolytic solution.
2. Before charging, check that the surface of the battery is clean and dry.
3. Before delivery, the battery of this product is not fully charged. Therefore, before the first use, it must be sufficient electricity.
4. Do not charge the battery for long periods of time, and do not run out of all the power, otherwise it will damage the battery.
5. The Essential Security Department does not include failure due to incorrect use
6. If the battery with sufficient electricity is significantly shorter, it must be replaced if the battery is exhausted.
7. The user can only use the battery pack manufactured by the original equipment operated by the customer center.

Battery protection

1. Maintain charging temperature 32-113°F (0°C-45 C) and battery pack, discharge temperature 14°F (-10 C) for battery pack 140°F (60 C).
2. Put the charger in the room between 50°F (10 C) and 71.6°F (22 C), and stops moisture entering.
3. Make sure the power is consistent with the rated values on the charger and adapter.
4. When the red light is on the charger, it indicates that the battery is charging, and the green light indicates that the charge is completed the average charge time is 2 hours.
5. When charging is complete, drive the connector from the power source and then cut off the connector and battery connection.
6. To ensure that the battery is fully charged, avoid setting SS3S in extremely hot or cold Environments.
7. If the equipment will not be used for a long time, please remove the battery before storage.
8. The batteries and chargers must be placed in the instrument box to prevent heat dust and moisture from entering, check if the switch is off.
9. Recommended storage temperature 32F-86F (0C-30 C) for longer storage time.
10. The distance between the battery and the combustible must be kept beyond 1.5m.
11. To ensure the service life of the equipment and prevent its degradation, store it in a fully charged state. When not in use, charge and discharge the battery at least once a month.

Maintenance


1. To ensure safe use, only original parts can be used.
2. Please close the equipment before starting the chainsaw repair. And store the battery in a safe package.
3. Wear hand care when touching safety blades. This can avoid sharp blade scratching the user. Follow-up cleaning and maintenance must be carried out regularly. This ensures long-term and reliable operation of the equipment.

Clearness

1. Do not spray the equipment with water or break it into the water, otherwise, it may cause electric shock. Keep the ventilator, motor room and equipment handle clean. Use a damp cloth or brush cleaner.
2. Do not use a bay cleaner. Otherwise, it may cause permanent saka failure of the equipment. Please clean the

blade carefully after each use.

3. Use oily cloth to wipe the blade and absorb the metal to protect the fog.
4. After 8 hours of continuous operation, please remove the debris such as dust from the front turbulent cover plate of the equipment.
5. Use the sharpener to sharpen the chain.

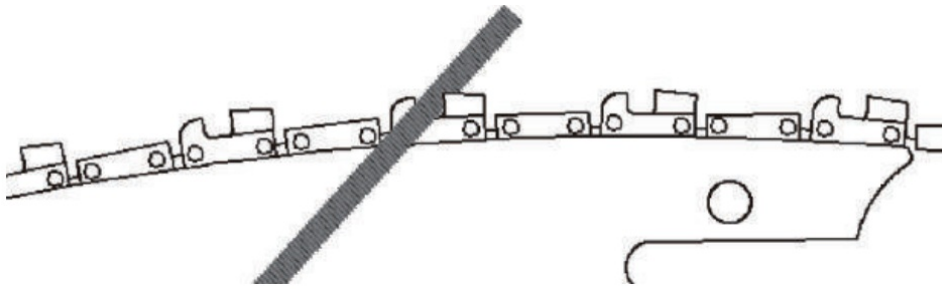

Frequently Asked Questions

1. Why didn't the chainsaw turn on?

Please charge the battery immediately when you receive the product, so as to avoid the consumption of battery power due to long-distance transportation. If you encounter that the product cannot be turned on, please charge the product for 1-2 hours before turning it on.

2. Can you cut screws and metal with this?

Correct tool to cut metal is a 'Grinder' with correct blade, not a Chainsaw. You could severely hurt yourself using a chainsaw on metal.

3. Why does the chain pops off?

Adjust the chain tension.

4. Does the on off button have to pressed in at all times to operate the saw?

Yes, there is an on button that must be pressed while operating the chainsaw.

5. How do I remove battery?

Depress red button and slide it forward the opposite way of how you slide it on.

Specification

Model		CS08
supply voltage		21-24V
The most powerful hm		120mm- 140mm
battery	types	U-ion
	capacity (Ah)	2.0
Rated Voltage		100-240VAC, 50-60Hz
Force Voltage		DC21-24V
Glaring current		0.8-2.0A
Netball (no including batteries)		1.06KG

Warranty

Your product enjoys a 1-year limited warranty, and you can ask for a product replacement or a refund under quality problems caused by non-human reasons.


How to Activate the warranty?

Please feel free to contact us:

- **Email:** support@docsmarts.net
Subject: #Activate the Warranty#
Amazon Order Number: xxx-xxxxxxx-xxxxxxx
 - **Call:** 1-888-980-8556
 - Amazon Message
- We will get back to you within 1 business day



Documents / Resources

 <p>DocSmart CORDLESS CHAIN SAW USER MANUAL</p> <p>Please read the manual carefully before use</p>	<p>DocSmart CS08 Mini Chainsaw [pdf] User Manual CS08 Mini Chainsaw, CS08, Mini Chainsaw, Chainsaw</p>
---	--

References

- [User Manual](#)