



DOLPHIN S20 Portable Bluetooth Party Speaker User Manual

[Home](#) » [DOLPHIN](#) » DOLPHIN S20 Portable Bluetooth Party Speaker User Manual 

Contents

- [1 DOLPHIN S20 Portable Bluetooth Party Speaker User Manual](#)
- [2 DIRECTIONS \(ENGLISH\):](#)
- [3 Read More About This Manual & Download PDF:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

DOLPHIN S20 Portable Bluetooth Party Speaker User Manual



DIRECTIONS (ENGLISH):

Bluetooth: Connect your device in by searching for “S20” in your device’s Bluetooth settings. To disconnect, press and hold the play button for 3 seconds. MP3 (USB/Micro SD): Load MP3 files onto a USB or Micro SD card, insert it into the speaker’s port, and it will automatically play the song files.

FM Radio: Enter radio mode by pressing the mode button and plugging in the speaker to charge which acts as an antenna. Scan for radio stations by holding the play button for 3 seconds, then use the + and – buttons to switch between stations. A strong radio signal is necessary for proper playback.

AUX Mode: Connect your device with a 3.5mm cable to automatically switch the speaker to AUX mode.

Charging Indicator: When charging the speaker, the battery indicator flashes left to right when it’s below 50%. The left light stays on and the right light flashes when above 50%. Both lights stay on when the battery is at 100%. The light turns red when below 10%.


Battery & Volume: The speaker will automatically shut off after 15 minutes if no music is playing or if the speaker is not being charged. The unit will fully charge in 4 hours and operate more than 6 hours on a full charge. The speaker volume defaults to 70% when turned on.

Wavesync: To pair two speakers, turn them on and press

Wavesync button on one. Ensure no devices are connected initially. Once Wavesync is successful, follow the instructions to connect your Bluetooth device. To disconnect, press the button again. Wavesync only works with matching speakers.

Waterproof Rating: IPX5 rated for rain, showers and splashes, but the back cover must be closed and charging port must not be exposed to water. Do not submerge the speaker into water.


Support Contact: 1-[888-550-3938](tel:888-550-3938) support@dolphinaudio.com

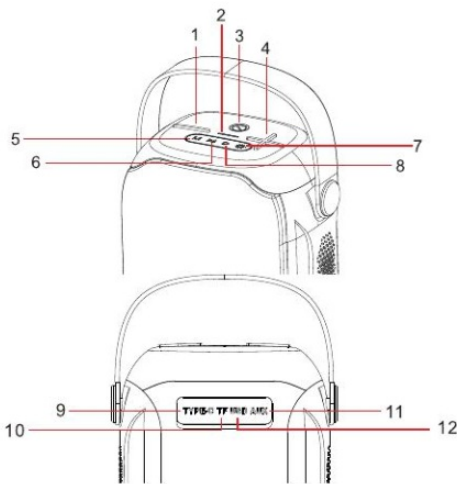

1. Minus Button: Press once to lower the volume, hold for previous song or station.
2. Battery indicator light
3. Power Button
4. Plus Button: Press once to increase the volume, hold for next song or station.
5. Mode Button
6. : Wavesync Button
7. Light Button: Press once to change the light pattern, hold to turn the lights off
8. Play/Pause Button
9. Type-C charging port
10. Micro SD Slot
11. AUX Input (3.5mm)
12. USB Drive Input

Read More About This Manual & Download PDF:

Documents / Resources

	DOLPHIN S20 Portable Bluetooth Party Speaker [pdf] User Manual S20 Portable Bluetooth Party Speaker, S20, Portable Bluetooth Party Speaker, Bluetooth Party Speaker, Party Speaker, Speaker
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.