



DOMO DO1107GO Built in Mini Oven Instruction Manual

[Home](#) » [DOMO](#) » DOMO DO1107GO Built in Mini Oven Instruction Manual 

DOMO

DO1107GO



Instruction booklet Oven



PRODUCT OF **LINEA** 2000



Read all instructions carefully – save this instruction manual for future reference.

Contents

- 1 WARRANTY
- 2 SAFETY INSTRUCTIONS
- 3 PARTS
- 4 BEFORE THE FIRST USE
- 5 USE
- 6 CLEANING AND MAINTENANCE
- 7 PROBLEM AND SOLUTION
- 8 ENVIRONMENTAL GUIDELINES
- 9 Documents / Resources
 - 9.1 References

WARRANTY

Dear client ,

All of our products are always submitted to a strict quality control before they are sold to you.

Should you nevertheless experience problems with your device, we sincerely regret this.

In that case, we kindly request you to contact our customer service.

Our staff will gladly assist you.



+32 14 21 71 91



info@linea2000.be

Monday – Thursday: 8.30 – 12.00 and 13.00 – 17.00

Friday: 8.30 – 12.00 and 13.00 – 16.30

This appliance has a two year warranty period. During this period the manufacturer is responsible for any failures that are the direct result of construction failure. When these failures occur the appliance will be repaired or replaced if necessary. The warranty will not be valid when the damage to the appliance is caused by wrong use, not following the instructions or repairs executed by a third party. The guarantee is issued with the original till receipt. All parts, which are subject to wear, are excluded from the warranty.

If your device breaks down within the 2-year warranty period, you can return the device together with your receipt to the shop where you purchased it.

The guarantee on accessories and components that are liable to wear-and-tear is only 6 months.

The guarantee and responsibility of the supplier and manufacturer lapse automatically in the following cases:

- If the instructions in this manual have not been followed.
- In case of incorrect connection, e.g. electrical voltage that is too high.
- In case of incorrect, rough or abnormal use.
- In case of insufficient or incorrect maintenance.
- In case of repairs or alterations to the device by the consumer or non-authorised third parties.
- If the customer used parts or accessories that are not recommended or provided by the supplier /manufacturer.

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken, including the following:

- Read all instructions carefully. Keep this manual for future reference.
- Make sure all packaging materials and promotional stickers have been removed before using the appliance for the first time. Make sure children cannot play with the packaging materials.
- This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 16 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 16 or supervised.
- Keep the appliance and its cord out of reach of children younger than 16 years.
- All repairs should be carried out by the manufacturer or its aftersales service.



ELECTRICAL WARNINGS

- In order to avoid a hazard this appliance must not be supplied through an external switching device, such as a timer or a separate remote control, or connected to a circuit that is regularly switched on and off by the utility.
- The appliance must be disconnected from its power source when not in use, during service and when replacing parts.

Allow to cool before putting on or taking off parts, and before cleaning the appliance. To disconnect, turn controls to “OFF” or “0” position, then remove the plug from the wall. Never pull the cord or appliance to remove the plug from the socket.

- Before use, check carefully that the electric tension and frequency of the power net at your home match the indications on the rating label of the appliance.
- The appliance must be plugged into an appropriate outlet that is installed and grounded in accordance with local installation regulations.
- Do not let the power supply cord hang over the edge of a counter, or touch hot surfaces.
- Keep the power cord away from hot parts and don't cover the appliance.
- Unwrap the cord completely to prevent overheating of the cord. Do not allow the power cord supply to run underneath or around the unit.
- The appliance may not be used with an extension lead or a multiple socket.
- Do not operate this appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Return the appliance to the DOMO Service Department or its service agent for examination, repair, or electrical or mechanical adjustment. Do not try to repair the appliance yourself.



INSTALLATION

- Do not place near flammable materials, gases or explosives.
- Do not use or store this appliance outdoors.
- Always use the appliance on a steady, dry and level surface.
- Never place this appliance near a gas stove or electrical stove or in a place where it may come into contact with a warm appliance.


USE

- Do not use this appliance for other than intended use.
- Only use the appliance for domestic use. The manufacturer cannot be held responsible for accidents that result from improper use of the appliance or not following the instructions described in this manual.
- Never leave the appliance unattended while it is functioning.
- Do not operate the appliance with wet hands.
- The use of accessories that are not recommended or sold by the manufacturer can cause fire, electrical shock or injuries. Only use the utensils delivered with the appliance.

CLEANING AND MAINTENANCE


- To protect against electrical shock or burns, do not immerse unit, cord, or plug in water or other liquid.
- Failure to maintain this appliance in a clean condition could adversely affect the life of the appliance and possibly result in a hazardous situation.

PRODUCT-SPECIFIC WARNINGS

- Do not touch any hot parts, use the handles and knobs.
- When using the oven, ensure you have a clearance of minimum 10 cm around every side to allow air to circulate freely around the machine.
- The machine must not be used in an enclosed space (such as a cupboard, for example).
- Never cover the machine's plate and grill with aluminium foil. This could cause the oven to overheat.
- Do not use metal scourers to clean the oven. Small particles of the scourer may break loose and land on the heating element.
- Do not put foods or metal accessories that are too big in the oven as they may cause fire or electrocution.
- A fire may be caused if the machine comes into contact with or is covered with flammable materials during operation, such as oven gloves, curtains, wall, etc. Do not place any objects on top of the oven when it is in use.
- Take great care when using dishes made entirely of metal or glass.
- Do not place any of the following materials in the oven: cardboard, plastic, paper or similar.
- Store only oven parts in the machine when it is not in use.
- Always use oven gloves when placing or removing items in the oven.
-  The housing of the oven can get hot during use. Keep the electrical cord away from hot parts and do not cover the oven.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

PARTS

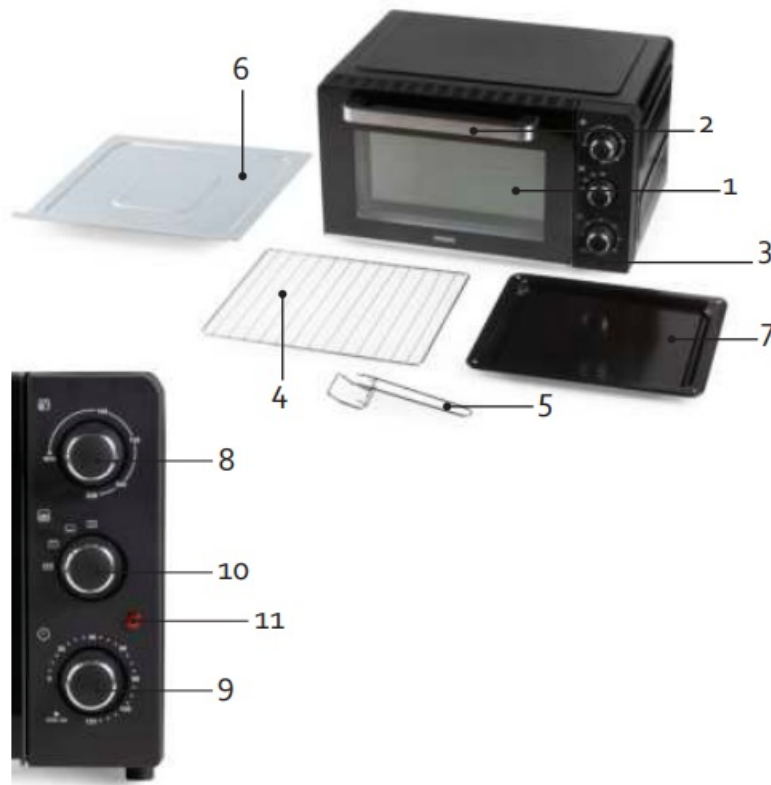

1. Observation window
2. Handle
3. Control panel
4. Grill rack
5. Handle for removing the grill rack or baking tray
6. Crumb tray
7. Baking sheet
8. Temperature setting button
9. Timer setting button
10. Function setting button
11. Indicator light "Power on"

BEFORE THE FIRST USE

Remove all packaging materials and wipe the machine with a damp cloth. Clean the baking tray, grill rack, crumb tray and handle in warm water and a mild detergent. Make sure that the parts are completely dry before using the machine again.

USE

Insert the baking tray or grill rack in the oven in one of the three available levels. This of course depends on the height of the dish. Never allow the dish to come into contact with the heating element.

SET THE TEMPERATURE




Select the required temperature by rotating the knob. The maximum temperature is 230 °C. Remember to preheat the oven for 5 to 10 minutes prior to use so that the oven is at the right temperature before food is placed in the oven.



SET FUNCTIONS



Turn this knob to the required position.








1. Position "OFF": at this position, the oven is turned off.
2. Top heating : on this setting, the heating element heats from the top of the oven.
3. Bottom heating : on this setting, the heating element heats from the bottom of the oven.
4. Top and bottom heating : on this setting, the heating element at both the bottom and at the top heat up to cook the dish evenly.

SET THE TIMER



Set the timer by rotating the knob. If the required time is less than 15 minutes, first rotate the button past the 15 minutes and then turn the button back to the required time. The maximum amount of time that can be set is 120 minutes. A bell will ring when the time has expired. The oven will not work if the timer has not been set. If you do not want to set a timer, turn the knob to the left (STAY ON). This will enable you to use the oven without setting a time. The indicator light turns red to indicate that the machine is switched on.

Note: the machine will not begin to work until the temperature, timer and function have been set. You can always change the time during the cooking process if required. The table below shows a few dishes, and their recommended settings. Recommendation: pre-heat the oven for 10 minutes.

Preparation	Temperature setting	Preparation time	Function
Fresh pizza	200°C	25 min.	
Frozen pizza	220°C	15 min.	
Cake	200°C	35 min.	
Lasagne	200°C	40 min.	
Vegetable casserole	200°C	30 min.	
Meat	220°C	20 min.	
Apple cake	190°C	90 min.	

Note: the machine will not begin to work until the temperature, timer and function have been set.
After use, turn all the knobs back to OFF/O/MIN before switching the machine off.
Use the handle to remove the grill rack or baking tray from the appliance after use.

CLEANING AND MAINTENANCE

- Always make sure you remove the plug from the socket before cleaning the appliance.
- Let the appliance cool down before cleaning.
- Clean the inside of the appliance after every use with a slightly damp cloth.
- Clean the parts in warm water with a mild detergent.
- The door and the control panel can be cleaned with a slightly damp cloth.

PROBLEM AND SOLUTION

PROBLEM	SOLUTION
The oven does not heat.	<ul style="list-style-type: none"> · Make sure that the timer, function and temperature buttons are set correctly. · Make sure that the appliance is plugged into a working outlet. Test the outlet with other appliances and have it repaired by a professional if necessary. · Check the fuse in the fuse box and have it repaired by a professional if necessary.
The timer is not counting down.	<ul style="list-style-type: none"> · If the desired time is less than 15 minutes, first turn the knob past 15 minutes and then turn the knob back to the desired time.
The food is burnt at the top.	<ul style="list-style-type: none"> · Next time, place the food on a lower floor and/ or use just the lower heater. · Lower the temperature setting.
Smoke is coming from the appliance.	<ul style="list-style-type: none"> · At first use, this is perfectly normal and it will stop after a short period of time. · If this happens after the first use, it is probably from spilled food residue on the heating elements at the top or bottom. Allow the appliance to cool completely and clean the heating elements.
There is a burnt smell coming from the appliance.	<ul style="list-style-type: none"> · This is probably from spilled food residue on the heating elements at the top or bottom. Allow the appliance to cool completely and clean the heating elements.

ENVIRONMENTAL GUIDELINES



This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it must be brought to the applicable collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



The packaging is recyclable. Please treat the packaging ecologically.

DOMO

**Webshop
ORDER**

the original Domo

accessories and parts online at: webshop.domo-elektro.be



of scan hier:

ou scannez ici:

oder hier scannen:

or scan here:





<http://webshop.domo-elektro.be>

LINEA 2000 BV – Dompel 9 – 2200 Herentals – Belgium

– Tel: +32 14 21 71 91

– Fax: +32 14 21 54 63

Documents / Resources

  <p>DO1107GO</p> <table border="1"> <tr><td>Model</td><td>DO1107GO</td></tr> <tr><td>Power</td><td>1000W</td></tr> <tr><td>Capacity</td><td>10L</td></tr> <tr><td>Material</td><td>Stainless Steel</td></tr> <tr><td>Color</td><td>Black</td></tr> <tr><td>Dimensions (HxWxD)</td><td>300x400x300mm</td></tr> <tr><td>Weight</td><td>4.5kg</td></tr> <tr><td>Accessories</td><td>Recipe book, Measuring cup, Spoon</td></tr> </table> <p>CE   PRODUCT OF LINEA</p>	Model	DO1107GO	Power	1000W	Capacity	10L	Material	Stainless Steel	Color	Black	Dimensions (HxWxD)	300x400x300mm	Weight	4.5kg	Accessories	Recipe book, Measuring cup, Spoon	<p>DOMO DO1107GO Built in Mini Oven [pdf] Instruction Manual</p> <p>DO1107GO Built in Mini Oven, DO1107GO, Built in Mini Oven, Mini Oven, Oven</p>
Model	DO1107GO																
Power	1000W																
Capacity	10L																
Material	Stainless Steel																
Color	Black																
Dimensions (HxWxD)	300x400x300mm																
Weight	4.5kg																
Accessories	Recipe book, Measuring cup, Spoon																

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.