



# DOMO DO522S Multipurpose Slicer Cutter Instruction Manual

[Home](#) » [DOMO](#) » DOMO DO522S Multipurpose Slicer Cutter Instruction Manual 

## DOMO DO522S Multipurpose Slicer Cutter Instruction Manual



### Contents

- [1 SAFETY INSTRUCTIONS](#)
- [2 ONDERDELEN](#)
- [3 INSTRUCTIONS FOR USE](#)
- [4 REMOVING AND REPLACING THE BLADE](#)
- [5 CLEANING INSTRUCTIONS](#)
- [6 WARRANTY](#)
- [7 RECYCLING INFORMATION](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

## SAFETY INSTRUCTIONS

This appliance may be used by children from the age of 8 and up, and also by persons with a physical or sensory limitation, as well as mentally limited persons or persons with a lack of experience and knowledge. But only on the condition that these persons have received the necessary instructions on how to use this appliance in a safe way and know the dangers that can occur by using this appliance.

Children cannot be allowed to play with the appliance.

Maintenance and cleaning of the appliance may not be done by children, unless they are older than 8 years old and are under supervision. Keep the appliance out of reach of children younger than 8 years old.

**This appliance is suitable to be used in a household environment and in similar surroundings such as:**

- Kitchen for personnel of shops, offices or other similar professional surroundings
- Farms
- Hotel or motel rooms and other surroundings with a residential character
- Guest rooms or similar

**Attention:** This appliance cannot be used with an external timer or a separate remote control.

- Read all instructions before use.
- Before use, check if the voltage stated on the appliance corresponds with the voltage of the power net at your home.
- Do not let the cord hang on a hot surface or on the edge of a table or counter top.
- Never use the appliance when the cord or plug is damaged, after malfunction or when the appliance itself is damaged. In that case, take the appliance to the nearest qualified service center for check-up and repair.
- Close supervision is necessary when the appliance is used near or by children.
- The use of accessories that are not recommended or sold by the manufacturer can cause fire, electrical shock or injuries.
- Unplug the appliance when it is not in use, before assembling or disassembling any parts and before cleaning the appliance. Put all buttons and knobs into the 'off' position and unplug the appliance by grasping the plug. Never unplug by pulling the cord.
- Do not leave a working appliance unattended.
- Never place this appliance near a gas stove or electrical stove or in a place where it may come into contact with a warm appliance.
- Do not use the appliance outdoors.
- Only use the appliance for its intended use.
- Always use the appliance on a steady, dry and level surface
- Only use the appliance for domestic use. The manufacturer can not be held responsible for accidents that result from improper use of the appliance or not following the instructions described in this manual.
- All repairs should be carried out by the manufacturer or its aftersales service.
- Never immerse the appliance, the cord or the plug in water or any other liquid.
- Make sure that children do not touch the cord or appliance.
- Keep the cord away from sharp edges and hot parts or other heat sources.
- Before use, remove all packaging materials and any promotional stickers.
- Do not use the appliance for longer than ten minutes at any one time. Allow it to cool before continuing to work.
- Do not use the appliance for cutting frozen food or bones.
- Do not use the appliance, unless the blade is well in place.

- Handle the blade with the greatest possible care when you are removing it, cleaning it, or replacing it in the machine.
- Do not touch the cutting edge of the blade.
- Note that the blade continues to revolve for a moment after the appliance has been turned off.
- To avoid any danger of injury, the food must always be cut using the food board and pressure plate. Always use the food board and pressure plate, unless the size and shape of the piece to be cut do not allow it.
- After using and before cleaning the appliance, always set the cut thickness adjustment and the safety button to "0".

## ONDERDELEN



1. On/off switch
2. **Blade:** ø 22 cm
3. Food sled
4. Button to remove food sled
5. Press plate
6. Slice thickness knob

## INSTRUCTIONS FOR USE

1. Place the slicing machine on a flat, stable support, in order to prevent it from sliding away.
2. Make sure that on/off switch is switched off before putting the plug into the socket. Use an alternating current plug, which is suitable for the voltage shown on the appliance (230V~ 50Hz).
3. Set the desired slice thickness by turning the knob. The slice thickness can be set from 0 to 15 mm. After each use, set the slice thickness knob back to 0. The slicer can be used to slice meat, bread, vegetables or cheese.
4. Place the food onto the food sled.
5. Switch on the on/off switch to spin the blade.
 

**Caution:** Be extra careful while slicing.
6. Slice the food by pushing the food sled forward. Use the press plate to push the food against the blade. Always slice the food using the food sled and if possible the press plate to avoid the risk of injuries. The forward movement should last for about 2 to 3 seconds. The backward movement should last at least as long (3

seconds or longer).

**Caution:** Do not use the appliance for longer than 10 minutes at a time.

7. Switch off the on/off switch to stop slicing. Unplug the appliance when it is not in use.

## REMOVING AND REPLACING THE BLADE

1. Remove the blade from the slicer by turning the screw in the middle of the blade clockwise, using a large coin or a screwdriver. Be careful when removing the screw and the blade.
2. To replace the blade: place the blade in the same position, with the large black ring on the inside, inside the slicer.
3. Tighten the screw in its place again by turning it counterclockwise using a coin or screwdriver. Make sure that the screw and the blade are tightened well.

## CLEANING INSTRUCTIONS

- Always unplug the slicer before cleaning. Make sure that the on/off switch is switched off.
- Never immerse the appliance in water
- Before cleaning the appliance, set the slice thickness to "0".
- Remove the blade from the slicer by turning the screw in the middle of the blade clockwise, using a large coin or a screwdriver. Be careful when removing the screw and the blade.
- Clean the blade with a damp cloth and mild detergent. Dry thoroughly. Be careful while handling the very sharp blade. Do not touch the blade with bare hands.
- Clean the press plate and the food sled and dry thoroughly. To remove the food sled from the appliance, press and hold the small grey button at the side of the appliance (4) – for instance with a spoon – and slide the food sled to the right so that it slides off the appliance.
- You can clean the rest of the appliance with a soft, damp cloth and maybe some mild detergent.
- Do not use any sharp objects to remove the dirt.

## WARRANTY

This appliance has a two year warranty period. During this period the manufacturer is responsible for any failures that are the direct result of construction failure. When these failures occur the appliance will be repaired or replaced if necessary. The warranty will not be valid when the damage to the appliance is caused by wrong use, not following the instructions or repairs executed by a third party. The guarantee is issued with the original till receipt. All parts, which are subject to wear, are excluded from the warranty.

If your device breaks down within the 2-year warranty period, you can return the device together with your receipt to the shop where you purchased it.

**Type nr. of appliance:**

**Name:**

**Address:**

**Date of purchase:**

**Tel:**

## RECYCLING INFORMATION



This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it must be brought to the applicable collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. The packaging is recyclable. Please treat the packaging ecologically.

## WEBSHOP

From now on, accessories and parts of Domo appliances can also be ordered online from the Domo webshop\*:

<http://webshop.domo-elektro.be>

You can reach the webshop through the Domo website as well: [www.domo-elektro.be](http://www.domo-elektro.be).

The accessories and parts can also still be obtained at the store where you bought the appliance.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

Out of dust bags?

Need an antiscald cartridge?

You can now also order our accessories and parts in the

**Domo Webshop Surf to:**


[webshop.domo-elektro.be](http://webshop.domo-elektro.be)

or scan here:



# DOMO

## Documents / Resources

	<p><a href="#">DOMO DO522S Multipurpose Slicer Cutter</a> [pdf] Instruction Manual</p> <p>DO522S Multipurpose Slicer Cutter, DO522S, Multipurpose Slicer Cutter, Slicer Cutter, Cutter</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.