

DOMO DO727BL My Soup Express Digital Soup Maker



DOMO DO727BL My Soup Express Digital Soup Maker User Manual

[Home](#) » [DOMO](#) » DOMO DO727BL My Soup Express Digital Soup Maker User Manual 

Contents

- [1 DOMO DO727BL My Soup Express Digital Soup Maker](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 WARRANTY](#)
- [5 SAFETY INSTRUCTIONS](#)
- [6 ELECTRICAL WARNINGS](#)
- [7 PRODUCT-SPECIFIC WARNINGS](#)
- [8 PARTS](#)
- [9 USE](#)
- [10 SETTINGS](#)
- [11 CLEANING AND MAINTENANCE](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

DOMO

DOMO DO727BL My Soup Express Digital Soup Maker



Product Information

Specifications:

- Model: DO727BL
- Product Name: My Soup Express Digital Soup Maker
- Warranty: 2 years from the date of purchase

Product Usage Instructions

First Time Use:

1. Unpack the product and check for all components.
2. Remove the packaging and any stickers from the product.
3. Wash the parts that will come in contact with food following the cleaning instructions.

Usage:

1. Ensure the product is placed on a stable and flat surface near a power outlet.
2. Connect the power cable to the product and plug it into the power outlet.
3. Open the lid of the product by turning it counterclockwise and lifting it up.
4. Add ingredients into the container inside the product. Ensure it is filled between the minimum and maximum markings.
5. For making plant-based milk, fill the container only up to 0.8 liters.
6. Close the lid securely making sure it is properly placed.
7. Select the desired program by pressing the program selection knob 'MODE'. The chosen program's indicator light will blink.
8. Press the start-stop button to begin the program. The program indicator light will stay on, and the timer will start counting down on the display.

9. Upon completion of the program, you will hear a signal. The indicator light will remain on for a minute before the product enters standby mode automatically.
10. If you wish to stop the program midway or change programs, press and hold the start-stop button.

Frequently Asked Questions (FAQ):

1. What should I do if the program indicator light does not turn on?

If the program indicator light does not turn on, check if the lid is properly closed. If not, reposition it correctly and restart the program.

2. Can I use this soup maker to prepare solid food items?

No, this soup maker is designed specifically for preparing soups and liquid-based recipes. Do not attempt to use it for solid foods as it may damage the product.

Read all instructions carefully – save this instruction manual for future reference.

WARRANTY

Dear client ,

All of our products are always submitted to a strict quality control before they are sold to you. Should you nevertheless experience problems with your device, we sincerely regret this. In that case, we kindly request you to contact our customer service.

Our staff will gladly assist you.

- **Tel:** +32 14 21 71 91
- **Email:** info@linea2000.be

Monday – Thursday: 8.30 – 12.00 and 13.00 – 17.00

Friday: 8.30 – 12.00 and 13.00 – 16.30

This appliance has a two year warranty period. During this period the manufacturer is responsible for any failures that are the direct result of construction failure. When these failures occur the appliance will be repaired or replaced if necessary. The warranty will not be valid when the damage to the appliance is caused by wrong use, not following the instructions or repairs executed by a third party. The guarantee is issued with the original till receipt. All parts, which are subject to wear, are excluded from the warranty. If your device breaks down within the 2-year warranty period, you can return the device together with your receipt to the shop where you purchased it. The guarantee on accessories and components that are liable to wear-and-tear is only 6 months.

The guarantee and responsibility of the supplier and manufacturer lapse automatically in the following cases:

- If the instructions in this manual have not been followed.
- In case of incorrect connection, e.g., electrical voltage that is too high.
- In case of incorrect, rough or abnormal use.
- In case of insufficient or incorrect maintenance.
- In case of repairs or alterations to the device by the consumer or non-authorised third parties.
- If the customer used parts or accessories that are not recommended or provided by the supplier / manufacturer.

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken, including the following:

- Read all instructions carefully. Keep this manual for future reference.
- Make sure all packaging materials and promotional stickers have been removed before using the appliance for the first time. Make sure children cannot play with the packaging materials.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 16 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 16 and supervised.
- Keep the appliance and its cord out of reach of children younger than 16 years.
- All repairs should be carried out by the manufacturer or its aftersales service.
- Any injury or damage caused by failure to comply with these rules are at your own risk. Neither the manufacturer, importer, or the supplier may be held liable.

ELECTRICAL WARNINGS

- In order to avoid a hazard this appliance must not be supplied through an external switching device, such as a timer or a separate remote control, or connected to a circuit that is regularly switched on and off by the utility.
- The appliance must be disconnected from its power source when not in use, during service and when replacing parts. Allow to cool before putting on or taking off parts, and before cleaning the appliance. To disconnect, turn controls to “OFF” or “0” position, then remove the plug from the wall. Never pull the cord or appliance to remove the plug from the socket.
- Check carefully that the voltage and frequency of the power net match the indications on the rating label of the appliance.
- The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local standards and requirements.
- Do not let the power supply cord hang over the edge of a counter, or touch hot surfaces.
- Keep the power cord away from hot parts and don't cover the appliance.
- Unwrap the cord completely to prevent overheating of the cord. Do not allow the power cord supply to run underneath or around the unit.
- The appliance may not be used with an extension lead or a multiple socket.
- Do not operate this appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Return the appliance to the DOMO Service Department or its service agent for examination, repair, or electrical or mechanical adjustment. Do not try to repair the appliance yourself.

INSTALLATION

- Do not place near flammable materials, gases or explosives.
- Do not use or store this appliance outdoors.
- Always use the appliance on a steady, dry and level surface.
- Never place this appliance near a gas stove or electrical stove or in a place where it may come into contact with a warm appliance.

USE

- Do not use this appliance for other than intended use.
- Only use the appliance for domestic use. The manufacturer cannot be held responsible for accidents that result from improper use of the appliance or not following the instructions described in this manual.
- Never leave the appliance unattended while it is functioning.
- Do not operate the appliance with wet hands.
- The use of accessories that are not recommended or sold by the manufacturer can cause fire, electrical shock or injuries. Only use the utensils delivered with the appliance.

CLEANING AND MAINTENANCE

- To protect against electrical shock or burns, do not immerse unit, cord, or plug in water or other liquid.
- Failure to maintain this appliance in a clean condition could adversely affect the life of the appliance and possibly result in a hazardous situation.

PRODUCT-SPECIFIC WARNINGS

- Do not use the appliance without ingredients.
- Handle with great care when using sharp accessories like knives. Only touch the accessories when they stopped moving inside the appliance.
- The surfaces of the appliance are likely to get hot during use. It is advised not to touch the surfaces of the appliance other than the handles to avoid burns.
- Always use the soup maker with the lid on.
- Do not use the appliance to grind, chop, or powder dry ingredients. Always fill with enough liquid during use.
- Always use the appliance on a flat, stable, dry surface. Place the appliance at least 10 cm back from the edge of the table or kitchen counter.
- Do not place the device in a damp room or use it near a fire or heat source. The distance should be at least 30 cm.
- Do not remove the lid until the blades have come to a complete stop.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

PARTS

1. Lid
2. Jug
3. Handgrip

4. Power socket
5. Control panel
6. Blade

CONTROL PANEL

7. Display
8. Indicator lights programme
9. Setting button 'MODE'
10. On-off button 'START/STOP'



BEFORE THE FIRST USE

- Make sure all packaging materials and promotional stickers have been removed before using the appliance for the first time.
- Before using the device, clean it with a moist cloth.

USE

1. Ensure the soup maker is unplugged before adding the ingredients.



2. Remove the cover. Turn it counter-clockwise and lift it up.



3. Place all the ingredients in the soup maker.



4. Add the water or broth last, filling it up to between the min and max indication lines. Make sure that the

appliance is always filled between the minimum (0,6 l) and maximum (1,2 l) indicators. Make sure there is enough liquid so that the starch in the ingredients cannot burn. Take into account a ratio of 40% vegetables to 60% moisture.



When making vegetable milk, the jug should only be filled to 0.8 litres.

5. Place the lid on the housing and tighten it into place. Ensure it is securely in place.



6. Plug the cable in the power socket at the bottom of the handle. The indicator lights will blink one by one. If this is not the case and you see dashes on the display, this means that the lid has not been placed correctly.



7. Select the required program (juice, jam, extra smooth, soy/nut milk, smooth, chunky, blend/clean) by pressing the setting button 'MODE'. The indicator light for the selected programme lights up. Then press the 'START/STOP' button. The indicator light for the selected programme will remain lit and the time on the display will count down.



8. When the programme has finished, you will hear a signal 10 times. The indicator light of the completed programme will remain lit for 1 minute, after which the appliance will automatically return to the standby mode. Be careful when you pour out the soup!



If you want to turn the appliance off during the programme or want to change the programme, press and hold the on/off button for a few seconds.

- Do not use the appliance without ingredients.
- The housing gets warm during certain programmes. Do not touch the device.
- Steam may come out of the appliance during heating. This is normal. Be careful; the steam is hot. Never cover the device during operation.
- Allow the device to rest for 30 minutes after a cycle. Switching the soup maker on again too soon can drastically reduce the service life of the appliance.

MEMORY FUNCTION

If you have forgotten to add an ingredient, you can still do this while the appliance is running by just removing the lid from the appliance. The soup maker will remember the current programme for 3 minutes. Add the forgotten ingredients and replace the lid. The programme will continue.

SETTINGS

Smooth: smooth soup

The smooth-function is perfect for a soup with a smooth consistency. The program lasts for 19 minutes. The appliance will alternately heat up and mix.

Chunky: soup with chunks

The chunky-function is perfect for soups requiring a chunkier consistency. For chunky soup there is no blending process, just heating. It is therefore recommended that you cut the vegetables into the desired size. The device does not mix the soup but only cooks it. The program lasts for 28 minutes. If you are not satisfied with the

consistency of your soup; you can use the pulse-function afterwards. Jam The jam-function is perfect for preparing a delicious jam. The programme takes 25 minutes. During this time, the machine regularly heats and blends so you achieve the correct structure for a delicious jam. Note: This function is not suitable for making soup, because the mixing and heating time is set differently.

Soy/nut milk: vegetable milk

With this function you can make vegetable milk such as almond milk, oat milk, hazelnut milk, macadamia milk, rice milk, spelt milk, soya milk, coconut milk,... The appliance will alternately heat up and mix. The program takes 32 minutes. Filter the milk with a fine sieve and allow to cool afterwards.

Smoothie CLEANING AND MAINTENANCE

The smoothie-function is ideal for preparing a smoothie, milkshake or other cold drinks. The programme takes 3 minutes. This programme mixes only and therefore does not heat up the ingredients. Attention: do not use ice cubes.

Pulse: mixing

If your soup does not have the desired consistency, you can continue to mix the soup with this function. Select the 'pulse' programme and confirm by pressing the start button. Press and hold the start button until you have the desired consistency. The blender does not heat with this programme. We advise you not to use the pulse-function for longer than 20 seconds at a time. This is also how you can clean the appliance after use.

CLEANING AND MAINTENANCE

- Do not place the appliance in the dishwasher.

 


- Do not immerse the appliance in water.
- Pull the plug out of the socket before cleaning the appliance.
- Allow the appliance to cool down for cleaning.
- Remove the lid and clean with a damp cloth.
- Be careful when cleaning the blade.
- Fill the jug with warm water and a little bit of soap. Clean your appliance with the pulse-function (see the section on use). Clean the inside of the jug with a soft sponge. Do not use a scouring pad as this will scratch the base.
- After cleaning, dry all parts thoroughly.

ENVIRONMENTAL GUIDELINES



- This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it must be brought to the applicable collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



ORDER the original DOMO accessories and parts on our webshop.



Documents / Resources



- www.ELEKTROKOLA.cz - Crussis, Ghost, Kellys, Leader Fox, Pells, Specialized - doprava zdarma
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.