

# **DOMO DO9173J Juicer with Handle Instruction Manual**

Home » DOMO » DOMO DO9173J Juicer with Handle Instruction Manual





#### **Contents**

- 1 SAFETY
- **INSTRUCTIONS**
- **2 COMPONENTS**
- **3 CLEANING**
- **4 PROBLEM SHOOTING**
- **5 WARRANTY**
- **6 WEBSHOP**
- 7 Documents / Resources
  - 7.1 References
- **8 Related Posts**

# **SAFETY INSTRUCTIONS**

This appliance may be used by children from the age of 16 and up, and also by persons with a physical or sensorly limitation, as well as mentally limited persons or persons with a lack of experience and knowledge. But only on the condition that these persons have received the necessary instructions on how to use this appliance in a safe way and know the dangers that can occur by using this appliance.

Children cannot be allowed to play with the appliance.

Maintenance and cleaning of the appliance may not be done by children unless they are older than 16 years old and are under supervision.

Keep the appliance out of reach of children younger than 16 years old.

This appliance is suitable to be used in a household environment and in similar surroundings such as

- · Kitchen for personnel of shops, offices, or other similar professional surroundings
- Farms
- · Hotel or motel rooms and other surroundings with a residential character
- · Guest rooms or similar

**Attention:** This appliance cannot be used with an external timer or a separate remote control.

- Read all instructions before use.
- Before use, check if the voltage stated on the appliance corresponds with the voltage of the power net at your home.
- Do not let the cord hang on a hot surface or on the edge of a table or countertop.
- Never use the appliance when the cord or plug is damaged, after a malfunction, or when the appliance itself is damaged. In that case, take the appliance to the nearest qualified service center for a check-up and repair.
- Close supervision is necessary when the appliance is used near or by children.
- The use of accessories that are not recommended or sold by the manufacturer can cause fire, electrical shock, or injuries.
- Unplug the appliance when it is not in use, before assembling or disassembling any parts, and before cleaning the appliance. Never unplug by pulling the cord.
- Do not leave a working appliance unattended.
- Never place this appliance near a gas stove or electrical stove or in a place where it may come into contact with a warm appliance.
- Do not use the appliance outdoors.
- Only use the appliance for its intended use.
- Always use the appliance on a steady, dry, and level surface.

- Only use the appliance for domestic use. The manufacturer can not be held responsible for accidents that result from improper use of the appliance or not following the instructions described in this manual.
- All repairs should be carried out by the manufacturer or its aftersales service.
- Never immerse the appliance, the cord, or the plug in water or any other liquid.
- Make sure that children do not touch the cord or appliance.
- Keep the cord away from sharp edges and hot parts or other heat sources.
- Before use, remove all packaging materials and any promotional stickers.

# **COMPONENTS**





- 1. Handle with a soft grip
- 2. Mould
- 3. Juice outlet with anti-drip system
- 4. Head
- 5. Sieve
- 6. Dish
- 7. Stainless steel body

#### **CLEANING PRIOR TO FIRST USE**

Prior to using the appliance, it is recommended that the parts be washed first in order to remove any residues from the production process

#### USE

- 1. Unwind the electrical cord and plug in the unit.
- 2. Place a glass or bowl under the juice outlet for the juice.
- 3. Cut the fruit in the center.
- 4. Press down the juice outlet for opening and the juice can flow out.

- 5. Raise the handle with the mold.
- 6. Place the fruit on the head and press it down.
- 7. Press for 15 sec. then let the unit rest for 15 sec.
- 8. Click the juice outlet up before removing the glass. Now the drips can't flow out anymore.

### **CLEANING**

- When the operation has finished, unplug the unit.
- Raise the handle and push the mold out of the handle via the recess provided.
  Remove the sieve and the press cone as well.
- Clean the parts under running water.
- · Remove the dish.
- Clean the mold, the sieve, and the dish in warm water with a mild detergent.
- Clean the outside of the unit with a soft dry cloth.
- · Never immerse the unit in water.

Follow the next steps to re-install the juicer:



- 1. Put the mold in the handle.
- 2. Put the head in the sieve and put them together in the dish.
- 3. Put these components completely in the juicer with a diagonal movement.

# **PROBLEM SHOOTING**

When problems occur with the unit check the below problems and their solutions. If the problem isn't solved, get in contact with the distributor or his after-sales service.

# PROBLEM:

The unit doesn't operate when pressing the head.

#### **PROBABLE CAUSES:**

- 1. The plug isn't properly plugged in.
- 2. The voltage of the unit doesn't correspond with the voltage at your home.
- 3. The unit isn't correctly assembled.

#### **SOLUTIONS**

- 1. Plug in the plug.
- 2. Check the voltage.
- 3. Disassemble and reassemble the unit.

Get in contact with the distributor or his after-sales service.

#### **WARRANTY**

This appliance has a two-year warranty period. During this period the manufacturer is responsible for any failures that are the direct result of construction failure. When these failures occur the appliance will be repaired or replaced if necessary. The warranty will not be valid when the damage to the appliance is caused by wrong use, not following the instructions, or repairs executed by a third party. The guarantee is issued with the original till receipt. All parts, which are subject to wear, are excluded from the warranty.

If your device breaks down within the 2-year warranty period, you can return the device together with your receipt to the shop where you purchased it.

#### DO9173J

Type nr. of appliance
Name:
Address:
Date of purchase:
Tel:

# RECYCLING INFORMATION





This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it must be brought to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service, or the shop where you purchased the product. The packaging is recyclable. Please treat the packaging ecologically.

# **WEBSHOP**

From now on, accessories and parts of Domo appliances can also be ordered online from the Domo webshop\*: <a href="http://webshop.domo-elektro.be">http://webshop.domo-elektro.be</a>

You can reach the webshop through the Domo website as well: <u>www.domo-elektro.be</u>. The accessories and parts can also still be obtained at the store where you bought the appliance.

\* Only in Belgium, the Netherlands, Luxemburg, France, and Germany



If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.

# **DOMO** Webshop

ORDER the original Domo accessories and parts online at: webshop.domo-elektro.be



#### or scan here:



http://webshop.domo-elektro.be

LINEA 2000 – Dompel 9

2200 Herentals Belgium

**Tel:** +32 14 21 71 91 **Fax:** +32 14 21 54 63

# **Documents / Resources**



**DOMO DO9173J Juicer with Handle** [pdf] Instruction Manual DO9173J, Juicer with Handle, DO9173J Juicer, DO9173J Juicer with Handle

# References

• © www.ELEKTROKO	LA.cz - Crussis, Ghost, I	Kellys, Leader Fox, Pells	s, Specialized - doprava zo	<u>larma</u>
<u>Manuals+</u> ,				