



## DOMO DO9200IB Ice Cube Maker Instructions


[Home](#) » [DOMO](#) » DOMO DO9200IB Ice Cube Maker Instructions 

### Contents

- [1 DOMO DO9200IB Ice Cube Maker](#)
- [2 WARRANTY](#)
- [3 RECYCLING INFORMATION](#)
- [4 WEBSHOP](#)
- [5 SAFETY INSTRUCTIONS](#)
- [6 PARTS](#)
- [7 CONTROL PANEL](#)
- [8 USE](#)
- [9 Descaling](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

# DOMO

## DOMO DO9200IB Ice Cube Maker

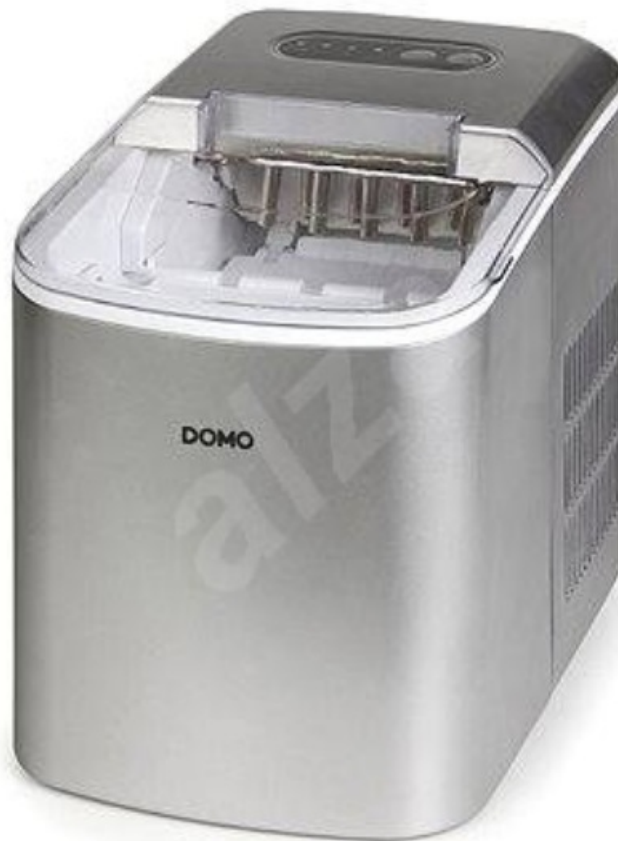

### WARRANTY

This appliance has a two year warranty period. During this period the manufacturer is responsible for any failures that are the direct result of construction failure. When these failures occur the appliance will be repaired or replaced if necessary. The warranty will not be valid when the damage to the appliance is caused by wrong use, not following the instructions or repairs executed by a third party. The guarantee is issued with the original till receipt. All parts, which are subject to wear, are excluded from the warranty. If your device breaks down within the 2-year warranty period, you can return the device together with your receipt to the shop where you purchased it.

### RECYCLING INFORMATION

This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it must be brought to the applicable collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. The packaging is recyclable. Please treat the packaging ecologically.

### WEBSHOP

From now on, accessories and parts of Domo appliances can also be ordered online from the Domo webshop\*: <http://webshop.domo-elektro.be>

You can reach the webshop through the Domo website as well: [www.domo-elektro.be](http://www.domo-elektro.be). The accessories and parts can also still be obtained at the store where you bought the appliance.

**Note:** Only in Belgium, the Netherlands, Luxemburg, France and Germany.

If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

## SAFETY INSTRUCTIONS

This appliance may be used by children from the age of 8 and up, and also by persons with a physical or sensorily limitation, as well as mentally limited persons or persons with a lack of experience and knowledge. But only on the condition that these persons have received the necessary instructions on how to use this appliance in a safe way and know the dangers that can occur by using this appliance.

Children cannot be allowed to play with the appliance. Maintenance and cleaning of the appliance may not be done by children, unless they are older than 8 years old and are under supervision. Keep the appliance out of reach of children younger than 8 years old.

This appliance is suitable to be used in a household environment and in similar surroundings such as:


- Kitchen for personnel of shops, offices or other similar professional surroundings
- Farms
- Hotel or motel rooms and other surroundings with a residential character
- Guest rooms or similar

**Attention:** This appliance cannot be used with an external timer or a separate remote control.

- Read all instructions before use.
- Before use, check if the voltage stated on the appliance corresponds with the voltage of the power net at your home.
- Do not let the cord hang on a hot surface or on the edge of a table or counter top.
- Never use the appliance when the cord or plug is damaged, after malfunction or when the appliance itself is damaged. In that case, take the appliance to the nearest qualified service center for check-up and repair.
- Close supervision is necessary when the appliance is used near or by children.
- The use of accessories that are not recommended or sold by the manufacturer can cause fire, electrical shock or injuries.
- Unplug the appliance when it is not in use, before assembling or disassembling any parts and before cleaning the appliance. Put all buttons and knobs into the 'off' position and unplug the appliance by grasping the plug. Never unplug by pulling the cord.
- Do not leave a working appliance unattended.
- Never place this appliance near a gas stove or electrical stove or in a place where it may come into contact with a warm appliance.
- Do not use the appliance outdoors.
- Only use the appliance for its intended use.
- Always use the appliance on a steady, dry and level surface.
- Only use the appliance for domestic use. The manufacturer can not be held responsible for accidents that result from improper use of the appliance or not following the instructions described in this manual.
- All repairs should be carried out by the manufacturer or its aftersales service.
- Never immerse the appliance, the cord or the plug in water or any other liquid.
- Make sure that children do not touch the cord or appliance.
- Keep the cord away from sharp edges and hot parts or other heat sources.
- Before use, remove all packaging materials and any promotional stickers.
- Do not tilt the appliance over 45°.
- Place the appliance at least 8 cm away from other objects to ensure a proper ventilation around the appliance.
- Do not switch the appliance on and off too frequently. Always wait for at least 5 minutes to prevent damage to

the compressor.

## PARTS

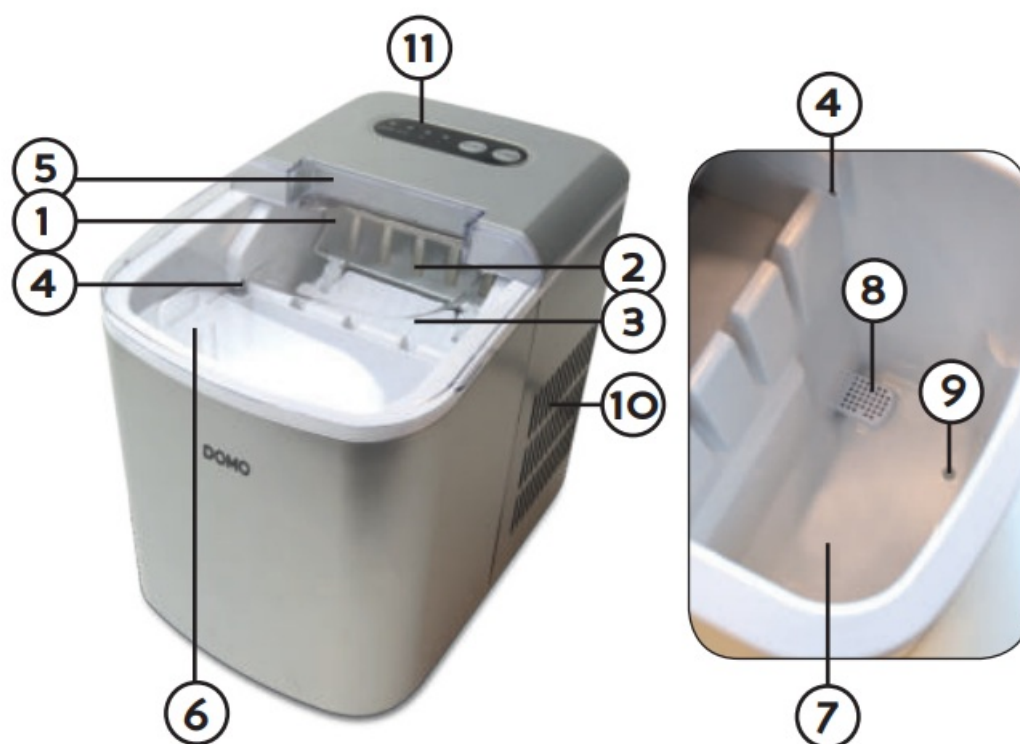

1. Water tray
2. Freeze fingers
3. Ice shovel
4. Full basket sensor
5. Transparent lid
6. Ice basket
7. Water tank
8. Filter
9. Drain hole with plug
10. Compressor
11. Control panel

## CONTROL PANEL



The indicator above the POWER button will start to blink when the plug is connected to the power outlet. The appliance is now in stand-by mode. You can switch on the appliance by pressing the POWER button. The indicator will then remain lit continuously. If during operation you press the POWER button again, the appliance will return to the stand-by state. Press the SELECT button to choose between small or large ice cubes. S is small, L is large. The indicator light of the selected size will light up. If the red ADD WATER light lights up, there is not enough water left in the water tank. Fill the water tank with water and press the POWER button to start the machine again. If the ICE FULL light starts blinking, this means that the ice basket is full. The appliance will stop its operation. Empty the ice basket. If there is no more ice in front of the sensor, the appliance will automatically continue its operation.

## USE

Before using the ice cube maker for the first time: wait 4 hours after putting the appliance in place and leave the lid open for at least 2 hours. It is recommended to use spring water in the appliance.

1. Place the ice cube maker on a flat and stable surface and make sure that the ventilation openings are not blocked.
2. Open the lid and take out the ice basket so you can pour water into the water tank.
3. Caution: Make sure that the water level is lower than the maximum indication. If the water tank is filled above the MAX indication, drain the excess water through the drain hole at the bottom of the ice cube maker.
4. Place the basket back into the appliance and close the transparent lid.
5. Insert the plug into the socket and press the POWER button to switch on the appliance.
6. Select the desired ice cube size with the SELECT button. S for small, L for large. The standard setting is L, large.
7. If the room temperature is lower than 15°C, it is best to select small ice cubes (S). If the room temperature is higher than 30°C, it is best to select large ice cubes (L).
8. During the first 3 cycles, the ice cubes may be smaller and more irregular in size.
9. When the ice basket is full, immediately remove the ice from the ice basket.



## CLEANING AND TIPS



- Switch off the appliance and unplug before cleaning. Also remove all ice cubes.
- Regularly clean the ice basket, the water tank, the water tray, the freeze fingers and the ice shovel. Use a damp cloth, maybe with a little mild detergent, to clean the inside and the outside of the ice cube maker. Rinse thoroughly before using the appliance again.
- Drain all water from the water tank through the drain hole at the bottom of the ice cube maker.
- Do not use any chemical products or products containing acids, gasoline or oil.
- Do not use any mechanical appliances or other aids to speed up the freezing process.
- If the appliance has not been operated for a long time, it might occur that the ADD WATER indicator light will remain lit. In that case, press the POWER button to return to the normal state of the appliance.
- Replace the water in the water tank at least once a day to guarantee clean ice cubes. When not using the appliance, always drain the water from the water tank. Always use clean water when using the ice cube maker.
- If the operation of the appliance is interrupted by for example a lack of water or a power cut, it will take 3 minutes for the appliance to restart.

## Descaling


Descale the appliance regularly to avoid calcification and to maintain a well operating appliance. Use a descaling product for for example coffee makers, or use a solution of 1/2 vinegar and 1/2 water. Fill the water tank with the product/solution (do not exceed the maximum level) and switch on the appliance. The appliance will now pump water into the ice tray. Wait until the tray is filled with water (the supply of water to the tray will stop) and immediately press the POWER button. The appliance switches off and will release the product/solution from the ice tray. Repeat this cycle a few times with the descaling product/solution. Afterwards, fill the water tank with clean water and repeat the procedure until the smell of the descaling product/solution has disappeared completely.

ORDER: the original Domo accessories and parts online at: [webshop.domo-elektro.be](http://webshop.domo-elektro.be)



2200 Herentals – Belgium  
Tel: +32 14 21 71 91  
Fax: +32 14 21 54 63

## Documents / Resources

 The image shows the front cover of a Domo DO9200IB Ice Cube Maker instruction manual. At the top, the brand name 'DOMO' is printed in large, bold, black capital letters. Below it, there is a block of text in multiple languages: 'FRANCOSE', 'NEDERLANDS', 'DEUTSCH', 'ENGLISH', 'ITALIANO', 'ESPAÑOL', 'PORTUGUÊS', 'JAPANESE', 'KOREAN', 'CHINESE', 'RUSSIAN', 'GREEK', 'TURKISH', 'POLISH', 'CZECH', 'SLOVAK', 'HUNGARIAN', 'ROMANIAN', 'BULGARIAN', 'CROATIAN', 'SERBIAN', 'MONTENEGRO', 'MACEDONIAN', 'SLOVENIAN', 'CROATIAN', 'SERBIAN', 'MONTENEGRO', 'MACEDONIAN', 'SLOVENIAN'. In the center, there is a small, square photograph of the white ice cube maker. At the bottom left, the model number 'DO9200IB' is printed. At the bottom right, there is a small logo for 'ELEKTRA'.	<p><a href="#">DOMO DO9200IB Ice Cube Maker</a> [pdf] Instructions DO9200IB, Ice Cube Maker, DO9200IB Ice Cube Maker</p>
--	--

## References

- [e Elektrozone.be](http://www.elektrozone.be) | We really love high tech
- [www.ELEKTROKOLA.cz](http://www.elektrokola.cz) - Crussis, Ghost, Kellys, Leader Fox, Pells, Specialized - doprava zdarma