



## DOMO DO9223W Rotating Waffle Maker Instruction Manual

[Home](#) » [DOMO](#) » DOMO DO9223W Rotating Waffle Maker Instruction Manual 

# DOMO



DO9223W  
Instruction booklet  
Rotating waffle maker

PRODUCT OF **LINEA** 2000

## Contents

- 1 DO9223W Rotating Waffle Maker
- 2 WARRANTY
- 3 SAFETY INSTRUCTIONS
- 4 PARTS
- 5 BEFORE THE FIRST USE
- 6 USE
- 7 CLEANING AND MAINTENANCE
- 8 ENVIRONMENTAL GUIDELINES
- 9 Documents / Resources
  - 9.1 References

## DO9223W Rotating Waffle Maker



Read all instructions carefully – save this instruction manual for future reference.

## WARRANTY

**Dear client ,**

All of our products are always submitted to a strict quality control before they are sold to you. Should you nevertheless experience problems with your device, we sincerely regret this. In that case, we kindly request you to contact our customer service. Our staff will gladly assist you.



+32 14 21 71 91



[info@linea2000.be](mailto:info@linea2000.be)

Monday – Thursday: 8.30 – 12.00 and 13.00 – 17.00

Friday: 8.30 – 12.00 and 13.00 – 16.30

This appliance has a two year warranty period. During this period the manufacturer is responsible for any failures that are the direct result of construction failure. When these failures occur the appliance will be repaired or replaced if necessary. The warranty will not be valid when the damage to the appliance is caused by wrong use, not following the instructions or repairs executed by a third party. The guarantee is issued with the original till receipt. All parts, which are subject to wear, are excluded from the warranty.

If your device breaks down within the 2-year warranty period, you can return the device together with your receipt to the shop where you purchased it.

The guarantee on accessories and components that are liable to wear-and-tear is only 6 months.

The guarantee and responsibility of the supplier and manufacturer lapse automatically in the following cases:

- If the instructions in this manual have not been followed.
- In case of incorrect connection, e.g., electrical voltage that is too high.
- In case of incorrect, rough or abnormal use.
- In case of insufficient or incorrect maintenance.
- In case of repairs or alterations to the device by the consumer or non-authorised third parties.
- If the customer used parts or accessories that are not recommended or provided by the supplier /manufacturer.

## SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken, including the following:

- Read all instructions carefully. Keep this manual for future reference.
- Make sure all packaging materials and promotional stickers have been removed before using the appliance for the first time. Make sure children cannot play with the packaging materials.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 16 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 16 and supervised.
- Keep the appliance and its cord out of reach of children younger than 16 years.
- **Attention:** This appliance cannot be used with an external timer or a separate remote control.



The appliance can become hot during use. Keep the power cord away from hot parts and don't cover the appliance.

- Do not touch any hot surfaces, use the handles.
- Do not put the appliance in water or any other liquid.
- Do not use the appliance near any inflammable materials or hot ovens.
- Make sure that the air can circulate freely around the appliance.
- Have the appliance repaired by a professional if it has been dropped and/or damaged.
- Do not use any sharp objects to remove any remains.
- Never use the appliance when the cord or plug is damaged.
- Do not use the appliance with wet hands.
- Place the appliance on a dry and flat surface.
- Always unplug the appliance when cleaning it. Also let the appliance cool down completely.
- Regularly check the cord for damage. Never let the cord hang over the edge of the table or never let it touch hot surfaces.
- Only use the appliance indoors.
- Only use the appliance for the purpose it was made for.
- This appliance is only suitable for household use.

## SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

## PARTS

1. Handle
2. Baking plates

3. 'On/off indicator light
4. 'Ready to use' indicator light
5. Collection tray



## BEFORE THE FIRST USE

- Remove all packaging materials and any promotional stickers.
- Wipe the inside and outside of the fryer clean with a soft cloth.
- When using the appliance for the first time there may be a slight smell and light smoke from the cooking plates. This is normal. For hygienic reasons, do not the first wafers made, throw them away.

## USE

1. Plug the power cord into a socket. The red indicator light means the appliance is switched on. The appliance will start to heat up.
2. The green indicator light means the appliance has reached the right temperature and is ready to bake waffles.



**Note:** The 'ready to use' indicator light will turn off and on regularly as the appliance continuously maintains its temperature.



3. Pour the waffle dough into the baking plates. Do this evenly so that the dough spreads well over the baking plates.
4. Close the waffle iron and use the handle to turn it 180°. This will ensure the batter is spread properly over the surface to create evenly cooked waffles. The rotating movement may cause a small amount of batter to leak

from the appliance, so always make sure to place the collection tray underneath the waffle iron before you start. This collection tray catches the excess batter.

5. After a few minutes, use the handle to turn the waffle iron back 180°.
6. Open the waffle iron. Remove the waffle when you are happy with the result. If you prefer to bake the waffle for longer, close the waffle iron again and turn it 180° again. Wait a moment and open the waffle iron once again as described above.
7. Carefully remove the waffles from the waffle iron with a wooden or heat-resistant plastic spatula. Never use metal objects, as these may damage the non-stick coating of the appliance.
8. To bake another waffle, wait for the green indicator light to indicate the appliance is ready to be used again.
9. We recommend switching the appliance off immediately after use by removing the plug from the socket. Allow the appliance to cool down before cleaning.



**Note:** the waffle iron is locked when turned 180°. This is when the side with only the green indicator light is turned upwards. It is not possible to open the waffle iron in this position. Turn the waffle iron back 180° to open the appliance. The side with the two indicator lights is now facing upwards.

## CLEANING AND MAINTENANCE

- Clean the appliance after each use. Unplug the electric lead and wait until the appliance has cooled sufficiently. It is easier to clean your waffle-maker if it's a bit warm.
- Clean the outside and the baking sheets with a damp clean cloth. Dry the appliance off well. Never use aggressive or abrasive cleaning agents.



- Clean the collection tray using warm water and a mild detergent and dry properly.
- Never submerge the appliance, the electric cord or the plug into water or another liquid.
- When not in use, store the appliance on a flat dry surface. Turn the waffle iron for compact storage.

## ENVIRONMENTAL GUIDELINES



This symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it must be brought to the applicable collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



## DOMO Webshop

or scan here:



<http://webshop.domo-elektro.be>

# DOMO


## LINEA 2000 BV – Dompel 9

## 2200 Herentals – Belgium

**Tel: +32 14 21 71 91**

**Fax: +32 14 21 54 63**

## Documents / Resources

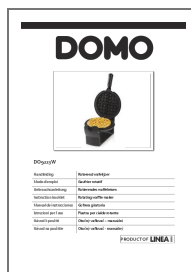

DOMO DO9223W Rotating Waffle Maker [pdf] Instruction Manual

DO9223W Rotating Waffle Maker, DO9223W, Rotating Waffle Maker, Waffle Maker, Maker

## References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.