

Dong Guan Shi Chang Jia Yuan Dian Zi Ke Ji You Xian Gong Si WiFi 30A Wireless Remote Switch Instruction Manual

Home » Dong Guan Shi Chang Jia Yuan Dian Zi Ke Ji You Xian Gong Si » Dong Guan Shi Chang Jia Yuan Dian Zi Ke Ji You Xian Gong Si WiFi 30A Wireless Remote Switch Instruction Manual [™]



WiFi 30A Operating instructions

If you want to control your water pump and dust collector by WiFi 30A, you need to pair the switch to your transmitter first.

- 1. How to clean code: press the pairing button 8 times, light flashes, cleaning code completely
- 2. How to set working mode:

Power on the switch first

- Momentary mode: Press the "pairing button" 4 times fast, red led light on, then press the transmitter button, red
 light blinks fast, then off.
 - (press remote button, switch on; release button, switch off)
- Toggle: Press the "pairing button" 2 times fast, red led light on, then press the transmitter button, The red light blinks fast, then off. (press remote button, switch on; press again, switch off)
- Latched mode: Press the "pairing button" 3 times fast, red led light on, then press the transmitter button A, red light blinks fast, then press button B, red light blinks fast, then off. (press remote button A, switch on; press button B, switch off)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices have been evaluated to meet general RF exposure requirements the device can be used in portable exposure conditions without restriction

Contents

1 Documents / Resources 2 Related Posts

Documents / Resources



<u>Dong Guan Shi Chang Jia Yuan Dian Zi Ke Ji You Xian Gong Si WiFi 30A Wireless Remote Switch</u> [pdf] Instruction Manual

WIFI30A, 2AZQ9-WIFI30A, 2AZQ9WIFI30A, WiFi 30A Wireless Remote Switch, Wireless Remote Switch, Switch

Manuals+,