

Dongguan Jin Wen Hua Digital Technology F21 Fool Floating Bluetooth Speaker User Guide

Home » Dongguan Jin Wen Hua Digital Technology » Dongguan Jin Wen Hua Digital Technology F21 Fool Floating Bluetooth Speaker User Guide [™]

Fool Floating
Bluetooth Speaker
Starry UFO
F21
User Guide

Contents

- 1 SPECIFICATIONS
- **2 WHAT'S IN THE BOX**
- **3 BUTTONS**
- **4 USING YOUR SPEAKER**
- 5 Recharge the Speaker
- 6 Wireless Hands-Free
- **Speakerphone**
- **7 Lighting Control**
- 8 Documents / Resources
- 9 Related Posts

SPECIFICATIONS

Bluetooth Version: VS.1

Bluetooth Range (above the water): 20m / 66 ft

Audio Output: 10W


Battery Capacity: 2000 mAh 3.7v

Waterproofing: IPX7


Input: SV/IA Wight: 12 oz

Size: 9.5 x 13.5 x 13.5 cm

WHAT'S IN THE BOX

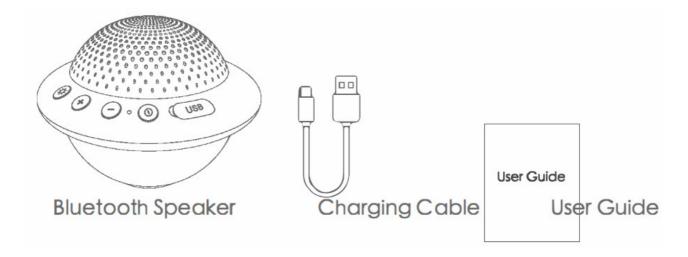


BUTTONS

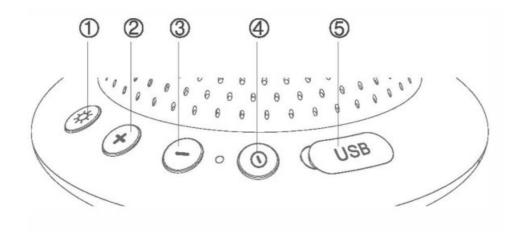

- 1. Light Button
- 2. Volume Up/ Next Track
- 3. Volume Down/ Last Track
- 4. Power Button
- 5. Charging Port

USING YOUR SPEAKER

 ① Tum on/off




Light Indicator	Status
Blue light flashing	Power on
O Light off	Power off

Press and hold the power button far 3s to power on your speaker. You 'Mai hear a voice prompt "Power on, Bluetooth mode" and the Speakers automatically enter pairing mode.



The speaker will nat automatically tum off if na device is connected



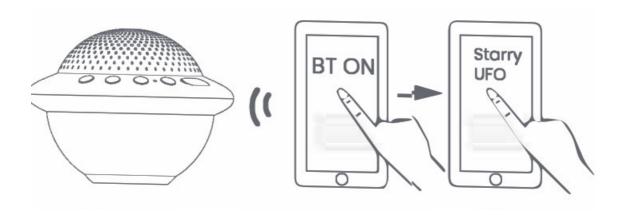

Light Indicator	Status
Blue light flashing quickly	Pairing mode
O Light off	Connected to a device


Navigate to your device's Blue tooth Settings. enable Bluetooth. and tap Starry UFO" and pair

The speaker will automatically connect to the last connected device if available not, the speaker will enter pairing mode.

Have a connection problem? Remove "Starry UFO" from your device's Bluetooth Devices list, and ensure it's less than 1 meter away. Then try pairing again.



Recharge the Speaker

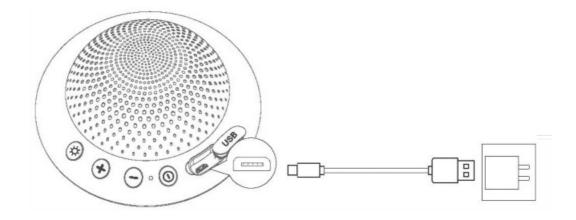

Light Indicator	Status
Steady red	Charging
O Light off	Fully charged



- When the speaker battery runs low, it will emit an alert tone.
- Use the included charging cable to charge the speaker.
 Make sure it is fully charged before first use.
- Disconnect your speaker from your charger when fully charged. Do not charge your speaker for extended periods.



Wireless Hands-Free Speakerphone

The hands-free speakerphone feature works over Bluetooth with Bluetooth-enabled smartphones only.

- 1. Short press the power button to answer an incoming call or to end a call
- 2. Long press the power button for 2 seconds to reject an incoming call



Please keep the speaker close in front of you so you may be heard clearly by the listener You can use your smartphone to switch between using a Hands-free speakerphone and your phone



Lighting Control

The Stany UFO Bluetooth speaker features 6 lighting settings.

Tum the speaker on and the RGB light will flash red, green, and blue slowly.

Short press to cycle through lighting settings or turn the light on or off:



Flash red, green, and blue slowly

Steady blue
 Flash red, green, blue, and colorful quickly

Flash blue, green, red, and colorful quickly

RGB light off Button Control

Steady redSteady green

O Long press	Power on/off	
O Double press	Disconnect device	
O Short press	Pause/Play	
- Short press	Volume down	
+ Short press	Volume up	
- long press	Last track	
+ Long press	Next track	
Short press	Changing light mode	
Shortpress	Answe< / End a call	
O Long press	Reject a call	

ATTENTION

Close the waterproof rubber cover completely before putting the speaker in to the water.

To preserve battery lifespan, fully charge it at least once every month.

Avoid extreme temperatures (such as high heat fire and direct sunlight). Excessive heat or extreme cold temperatures may damage the battery.

Do not charge near the water source or in the rain to avoid electric shock.

Keep the speaker away from heat sources (including all equipment that generates heat), such as stoves, engines. Do not use any corrosive cleaner/oil to clean.

Avoiding dropping.

"Do not disassemble

RESET THE SPEAKER

If the speaker is stuck, press and hold the power button for IO seconds, then release the button, the speaker now has been reset.

ONE YEAR WARRANTY

Our products are covered by a 12-month limited warranty. starting from the date of purchase. This warranty is not transferable and applies only to the original consumer purchaser.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can

radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources



<u>Dongguan Jin Wen Hua Digital Technology F21 Fool Floating Bluetooth Speaker</u> [pdf] Us er Guide

F21, 2AFSG-F21, 2AFSGF21, F21 Fool Floating Bluetooth Speaker, F21, Fool Floating Bluetoo th Speaker

Manuals+,