



Dongguan Jin Wen Hua Digital Technology L17 Patiobeat Bluetooth Speaker Instruction Manual

 
[Home](#) » [Dongguan Jin Wen Hua Digital Technology](#) » Dongguan Jin Wen Hua Digital Technology L17 Patiobeat Bluetooth Speaker Instruction Manual 

Contents

- 1 Dongguan Jin Wen Hua Digital Technology L17 Patiobeat Bluetooth Speaker
- 2 INTRODUCTION
- 3 WHAT'S INCLUDED
- 4 TECHNICAL SPECIFICATIONS
- 5 BUTTONS AND CONTROL
- 6 LED INDICATOR
- 7 OPERATION
- 8 Connect an External Device via the AUX Jack
- 9 MULTI-SYNC PAIRING
- 10 LIGHTING CONTROL
- 11 CHARGING YOUR SPEAKER
- 12 MAINTENANCE AND CARE
- 13 TROUBLESHOOTING
- 14 LIMITED ONE YEAR WARRANTY
- 15 FCC Statement
- 16 Documents / Resources
- 17 Related Posts

Dongguan


Dongguan Jin Wen Hua Digital Technology L17 Patiobeat Bluetooth Speaker

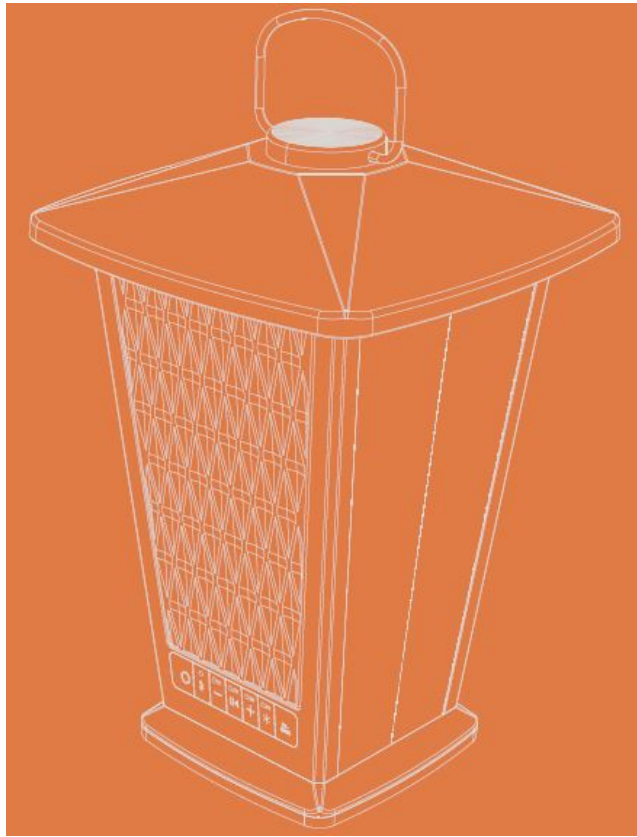

INTRODUCTION

Thank you for purchasing the PATIOBEAT Bluetooth Speaker. This Speaker with LED lights is designed as a multi-purpose speaker and will deliver accurate high fidelity sound and adds romance atmosphere at the same time in exterior or interior environments. Weather-resistant design and construction provide optimum durability for permanent or temporary outdoor use. Before first use, it is recommended to charge the speakers via the Type-C input port with the supplied Type-C cable. It takes approximately 6 hours to get a speaker charged from 0-100%.

 WHAT'S INCLUDED

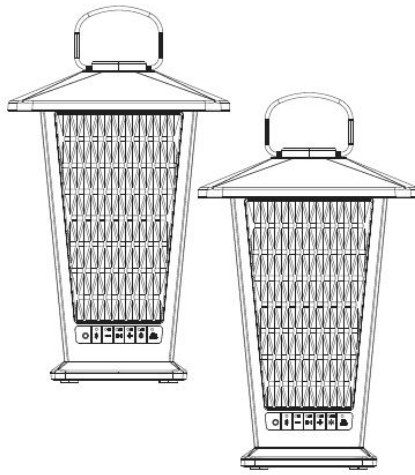

Speaker x 2



Stake x 2



Charge Cable x 2



3.5 mm Aux Cable x 2

TECHNICAL SPECIFICATIONS

Output Power	40W/unit
SNR	>80db
Bluetooth Version	5.3
Bluetooth Range	≥30 M (no barriers)
Bluetooth Name	PATIOBEAT
Waterproof	IPX5
Music Playtime	Up to 12Hrs (varies by volume level and audio content)
Lighting	4 Modes
Charging Time	6 Hrs, 5V 2000mAh

BUTTONS AND CONTROL



Button	Control	Function
	Short Press	Adjust the light brightness
	Press and hold	Power on/off
	Short Press	Multi-sync Mode
	Press and hold	Disconnect / Re-connect Bluetooth device
	Short Press	Volume Down
	Press and hold	Last track
	Short Press	Play/Pause
	Short Press	Volume Up
	Press and hold	Next track
	Short Press	Switch Lighting Mode
	Press and hold	Set Lighting Time (2H/4H/6H/8H)
	Short Press	Bass Enhanced

LED INDICATOR

	Status	Indication
	Quickly flashing Blue	Searching Bluetooth
	Solid Blue	Bluetooth Paired
	Solid Green	Multi-sync Mode
	Solid White	Light Setting Time

OPERATION

1. Turn on/ off

Press and hold the Power Button for 3 seconds until the unit turns ON.

2. Connect an External Device via Bluetooth


1. The speaker will automatically start searching for a Bluetooth-enabled device after it is powered on.
2. The speaker's Bluetooth indicator light will blink quickly.
3. Enable Bluetooth on your external device.
4. Tap 'PATIOBEAT' on your device to start pairing. When your device is paired and connected, you will hear an audible beep and the speakers Bluetooth indicator light will be solid blue.



Bluetooth	
Bluetooth	
Device	
PATIOBEAT	Connected

The speaker will automatically connect to the last Connected device if available. If not, the speaker will enter pairing mode.

 Connect an External Device via the AUX Jack

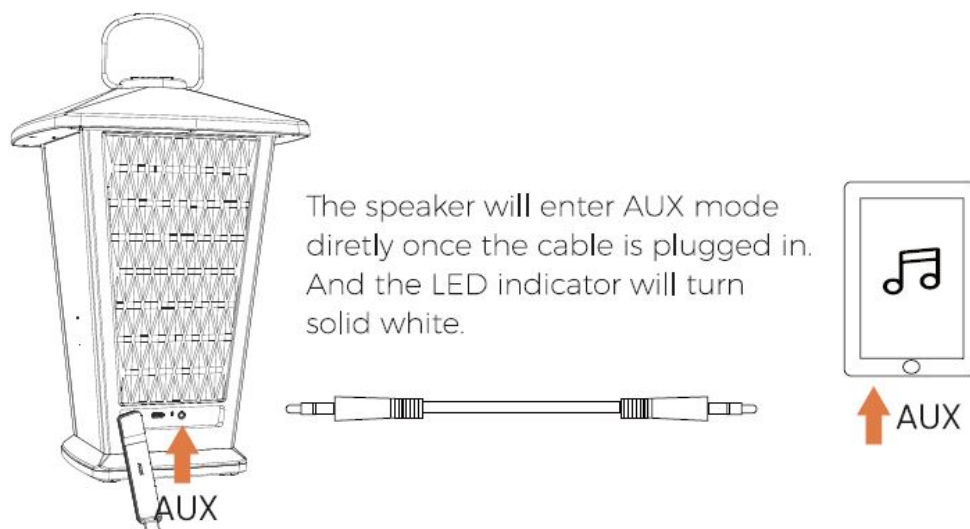


MULTI-SYNC PAIRING


To connect two or more PATIOBEAT speakers for 360 stereo Sound, please refer to the following instructions:

- Before synchronizing your speakers, please ensure all speakers are powered off. (Use your Bluetooth device's Bluetooth settings to remove all previously paired PATIOBEAT Bluetooth speakers if you have paired them)
- Turn on and operate your speakers in the following order. When Connecting the first speaker (Primary speaker), please ensure other speakers are powered off.

 
1. STEP 1 Long press the Power button of Primary speaker to turn it on and get it paired with your Bluetooth device.

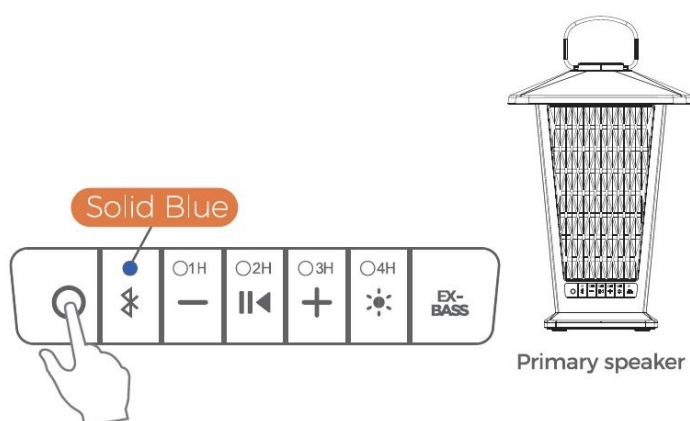

 
2. STEP 2 Short press the Bluetooth button to enter the multi-sync mode. You hear a tone and the LED indicator will change to green.

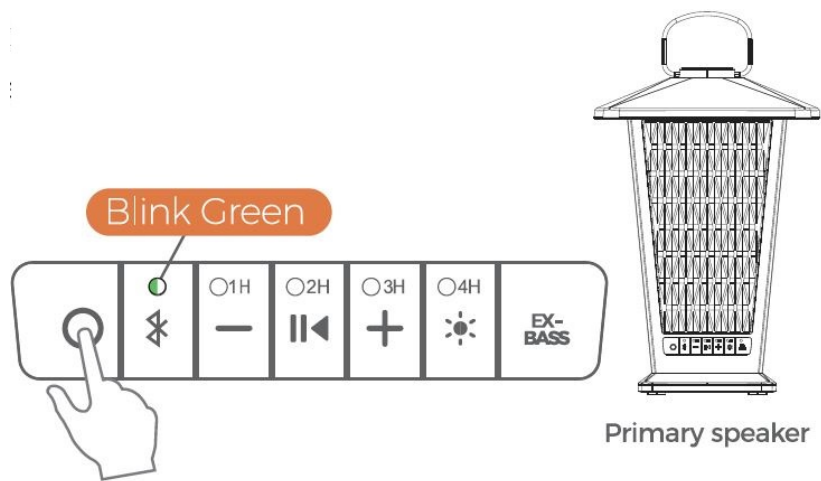

 3. STEP 3 Turn on your Secondary speaker, then short press the Bluetooth button to enter the multi-sync mode

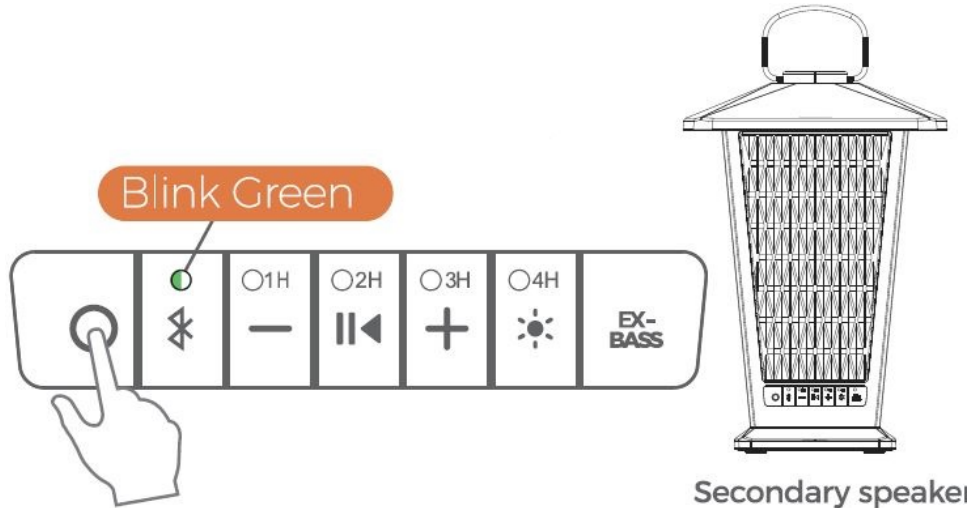

 4. STEP 4 Wait for seconds until the Secondary speaker emits a audio beep. Then your Primary speaker and Secondary speaker are synchronized and you can play music in perfect sync.

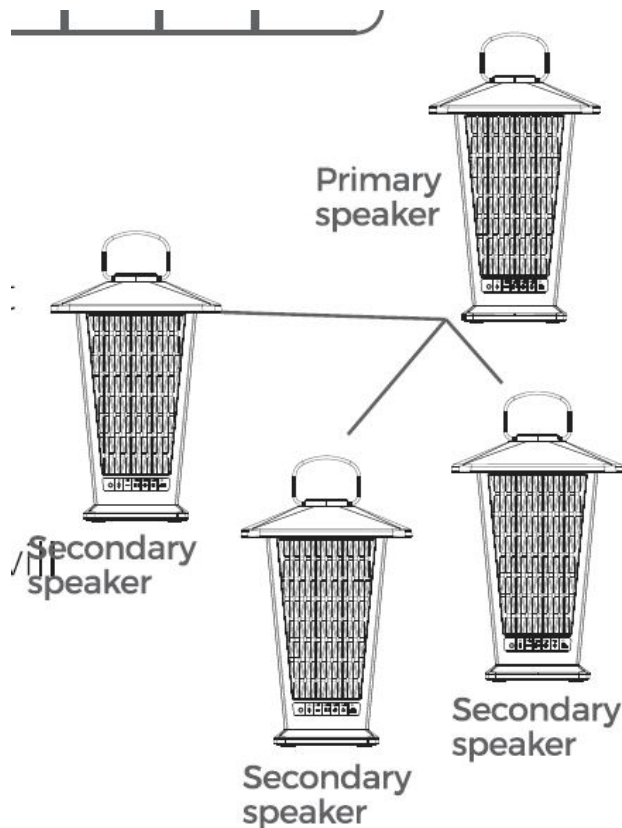

• NOTE

- If you want to SWITCH the primary speaker, you will need to long press the Bluetooth button to disconnect the





Bluetooth or delete all the paired Bluetooth speakers on the mobile phone and pair your neW primary speaker.

- IT is not recommended to switch the primary speaker.
- When watching a video, the sound in videos may be out of sync with the picture if you connect to the speaker via Bluetooth. In this case, it is recommended to use the included 3.5mm AUX audio cable to get the best experience.
- Any questions. please feel free to Contact us.

LIGHTING CONTROL

1. SWITCH LIGHTING MODE



Short Press the  Button	Operation	Mode
	Once	 Breathing White Light
	Twice	 Solid Colorful Light
	3 Times	 Flashing Colorful Light
	4 Times	 Beat-driven Light

2. SET LIGHTING TIME





Press and Hold the  Button	Operation	Timer Setting (When a timer is selected, its indicator will illuminate white.)
	Once	<input type="radio"/> 1H ( button)
	Twice	<input type="radio"/> 2H ( button)
	3 Times	<input type="radio"/> 3H ( button)
	4 Times	<input type="radio"/> 4H ( button)

3. ADJUST THE BRIGHTNESS OF THE LIGHT



Short Press the  Button	Operation	Brightness
	Once	 60%
	Twice	 80%
	3 Times	 100%

  CHARGING YOUR SPEAKER

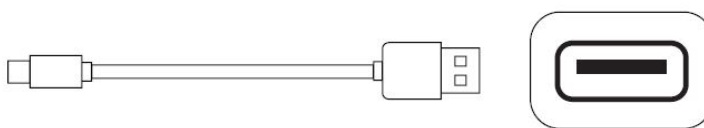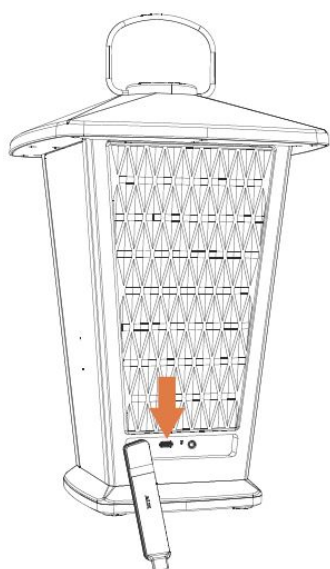

LED Indicator		Status
	Steady red	Being recharged
	Light off	Fully recharged

- You will hear a tone when the battery charge is low.
- Use the included Type-C charging cable to charge the speaker and make sure it is fully charged before first use.
- Disconnect your speaker from the charger when fully charged.
- Do not recharge your speaker for extended periods of time.

MAINTENANCE AND CARE

- Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging.
- Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
- Do not expose your speaker to high temperatures or extreme cold.
- The stakes should not be exposed to direct sunlight for lengthy periods of time as this may cause them to bend.
- Do not tug or yank on the USB charging cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

TROUBLESHOOTING

	Problem	Solution
Bluetooth	Cannot pair with Bluetooth devices	Press Bluetooth Button for 5 seconds, then have a try to pair it again
	Cannot play music after pairing	Please select "PATIOBEAT" as the default playback device
	The song cuts off during playback	Please check if the Bluetooth playback distance is more than 100 feet or the battery level is low
	There is noise during playback	Maybe caused by the interference of charging. Try to put it in another place and do not charge it during playback
	Only one speaker is connected	Long press the Bluetooth button on them for 5 seconds to disconnect them from your phone. Wait for a few seconds, short press the Bluetooth button on each secondary speaker to re-enter the multi-sync mode.
Sound	Distortion/ Intermittent breaks in sound/ Interference/overall sound is not clear	Move the devices closer so they are within the required Bluetooth range.

LIMITED ONE YEAR WARRANTY

1. Our products are covered by a 12-month limited warranty, starting from the date of purchase. This warranty is not transferable and applies only to the original consumer purchaser
2. For quality-related issues, we will, at its sole option, repair or replace any products that malfunction due to defective parts or workmanship at no charge to you.

Not Covered Under Warranty:

- Damage from outside sources
- Damage from misuse of products (including, but not limited to: falls, extreme temperatures, water, operating devices improperly, incorrect connections, incorrect battery use)
- Damage caused by accident, improper care, negligence, excessive wear and tear, or improper installation or assembly contrary to any written installation instruction
- Items that have expired their warranty period Non-quality-related issues (after 30 days of purchase Repairs through 3rd parties)

FCC Statement


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources

	Dongguan Jin Wen Hua Digital Technology L17 Patiobeat Bluetooth Speaker [pdf] Instruction Manual L17, 2AFSG-L17, 2AFSGL17, L17 Patiobeat Bluetooth Speaker, Patiobeat Bluetooth Speaker
-----------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------