

Contents [[hide](#)]

 
- [1 Dongguan X9 Wireless Game Controller](#)
- [2 Function diagram](#)
- [3 Applicable instructions](#)
- [4 Electrical parameters](#)
- [5 Product instructions](#)
- [6 Programming](#)
- [7 Operation mode](#)
- [8 List of products](#)
- [9 FCC Warning](#)
- [10 Frequently Asked Questions](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

Dongguan

Dongguan X9 Wireless Game Controller



Function diagram

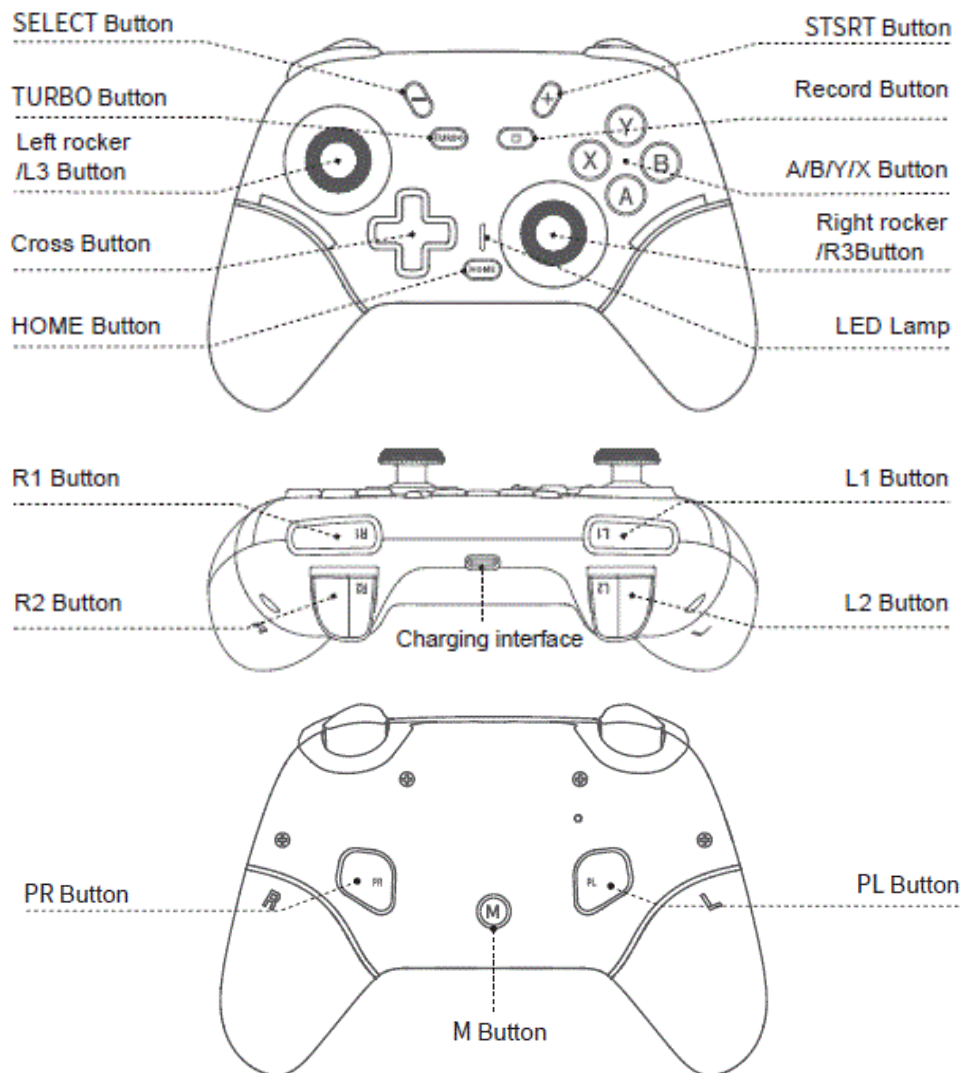

Applicable instructions

1. This product adopts ergonomic design and feels comfortable.
2. It adopts Bluetooth 5.0 edr/ble connection, and the controller is connected with N-S and other hosts through Bluetooth.
3. This handle is applicable to switch, ps3/ps4, Android, iOS mfi/apple arcade, PC Steam and other platforms.
4. It supports shooting plus V3 app, which can be downloaded through various mobile application markets.
5. Support Android and Hongmeng hid standard mode, and you can play all kinds of game hall games that support HID standard mode.
6. Support mfi/apple arcade games in iOS 13.0 and above systems, and MFI games can also be found in Shanwan MFI app download.
7. Support PS3 /ps4/switch game console to play games with Bluetooth connection.



8. Support Bluetooth connection of windows 10 system laptop and play X-input games.
 9. It supports USB cable and can play PC/PS3/Switch games.
- Due to the problem of mobile phone system, some mobile phones may not support this device.
 - Our company is not responsible for the inability of some games to connect with this product due to irresistible factors such as software upgrade or source code change of the official game platform. Our company reserves the right of final interpretation

 
Electrical parameters

1. **Working voltage:** DC3.7V
2. **Duration:** >20H The magic lights don't work
3. **Charging** voltage/current DC5V/400mA
4. **Working current** when the light is on: <110mA
5. **Working** current <25mA The magic lights don't work
6. **Sleep current:** <0uA
7. **Bluetooth transmission distance** =8M
8. **Standby time:** 30 days on full charge
9. **Battery capacity:** 800mAh

Product instructions


SWITCH Mode

- On the SWITCH host, select Controllers-> Change Grip/order, Enter into the SWITCH host pairing mode interface Press L+R on the controller.
- Press **R2+**  button at the same time for 2 seconds to enter SWITCH mode pairing, the LED light of the handle will flash green quickly, and the corresponding LED light will be green and long-lighted for successful pairing.
- If you have successfully connected, you can directly press the  button, the LED light will flash green slowly and connect back automatically.

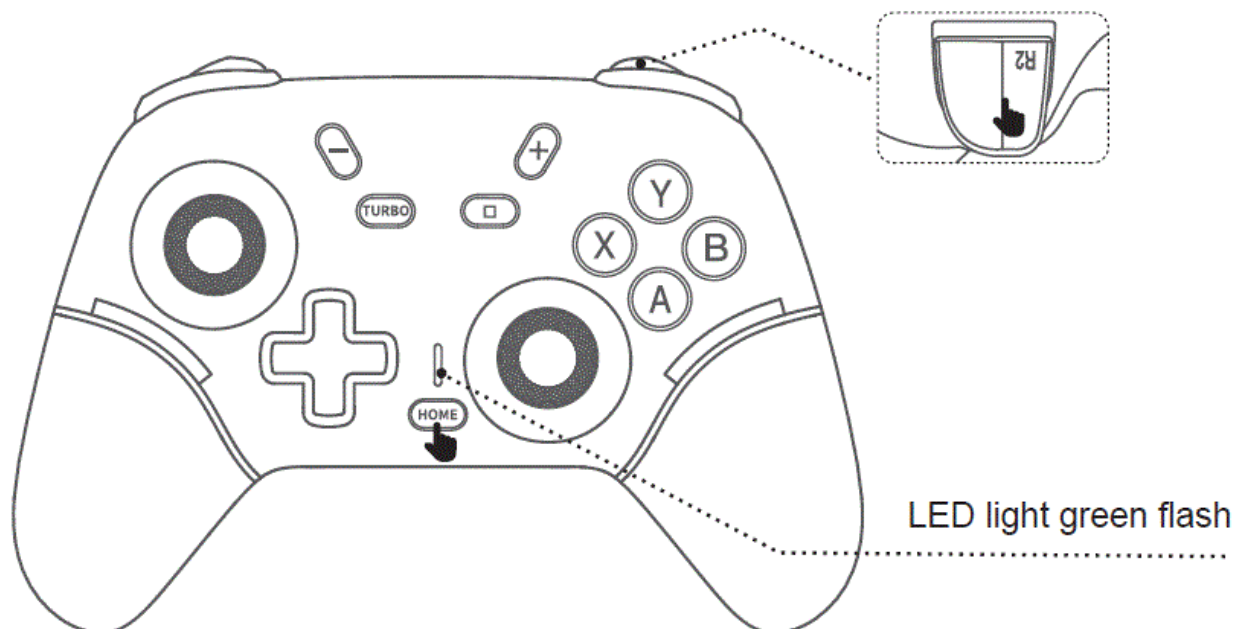

PS3/PS4 Mode:

 
- Connect the controller directly to the PS3/PS4 host with the USB data cable, press **HOME** button for code alignment, and the LED indicator blinks red slowly after code alignment is successful.
- Has been successfully connected, you can directly press **HOME**, LED light red long bright, automatic back connection.

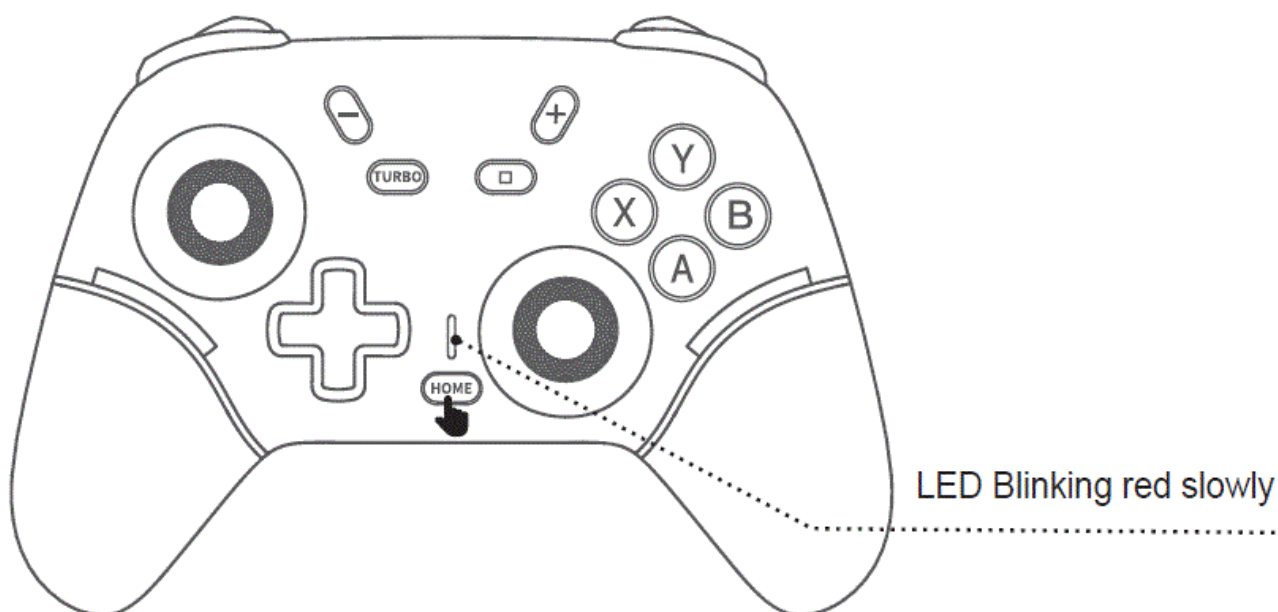

Android ShootingPlus V3 Mode (Hongmeng system is the same as Android


ShootingPlus V3 Mode):

 - At the same time, press A + **HOME** for 2 seconds to enter the V3 Android mode. The LED light of the controller blinks purple quickly. When the Android phone searches for “Gamepad”, select Connect. After the connection is successful, the LED light of the handle will brighten in purple.
- Have successfully connected, you can directly press **HOME** key, LED light purple light slowly flashing, automatic back connection.

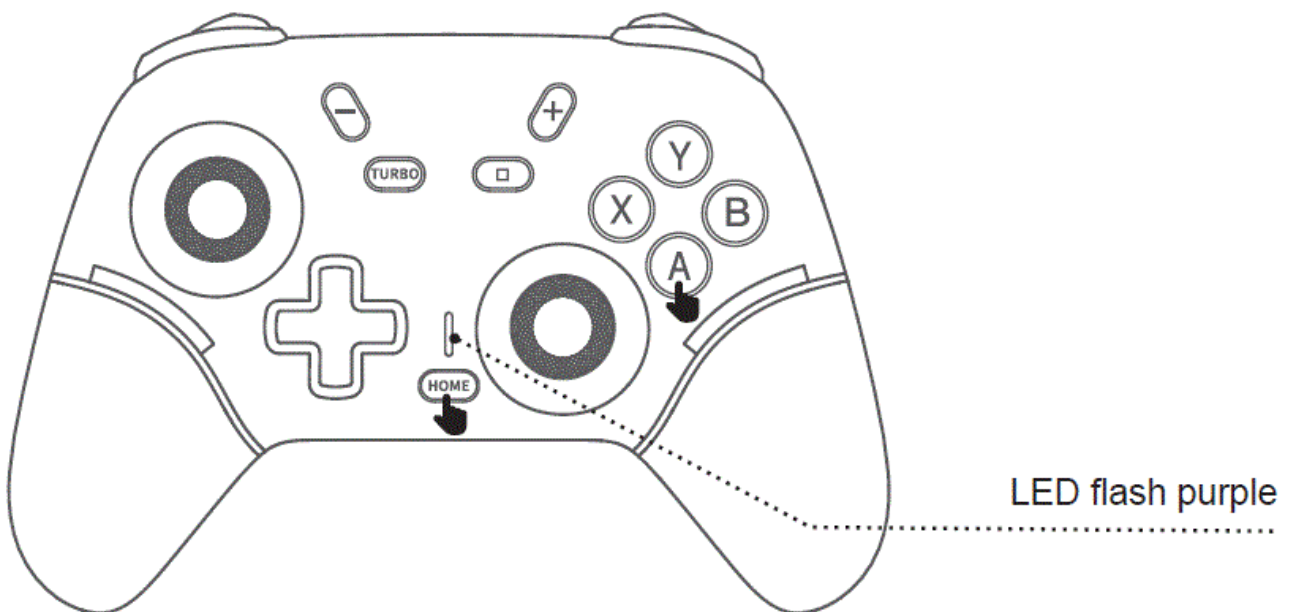


iOS ShootingPlus V3 mode

 - At the same time, press Y + **HOME** for 2 seconds to enter the V3 iOS mode. The LED light of the controller blinks purple quickly. When the iPhone searches for Gamepad, select Connect. After the connection is successful, the LED light of the handle will brighten in purple.
- Have successfully connected, you can directly press **HOME** key, LED light purple slow flash, automatic back connection.

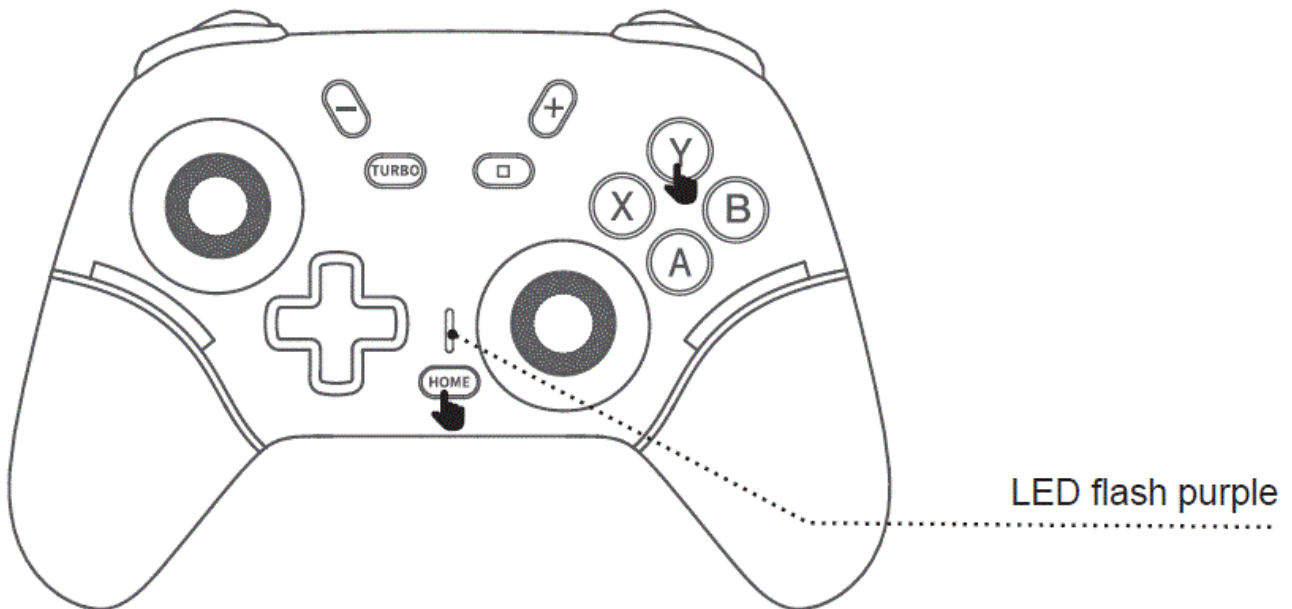


Android Standard Mode

 1. At the same time, press the **[X + HOME]** key to enter the standard Android mode, and the LED light of the handle flashes yellow quickly, when the Android/Hongmon When the device name Gamepad is found, select Connect. After the connection is successful, the LED light of the handle will be bright yellow. Have successfully connected, you can directly press **HOME** key, LED light yellow slow flash, automatic back connection.
2. Android/Hongmeng standard mode game download, you can download a variety of game halls, enter the platform to download the required games.

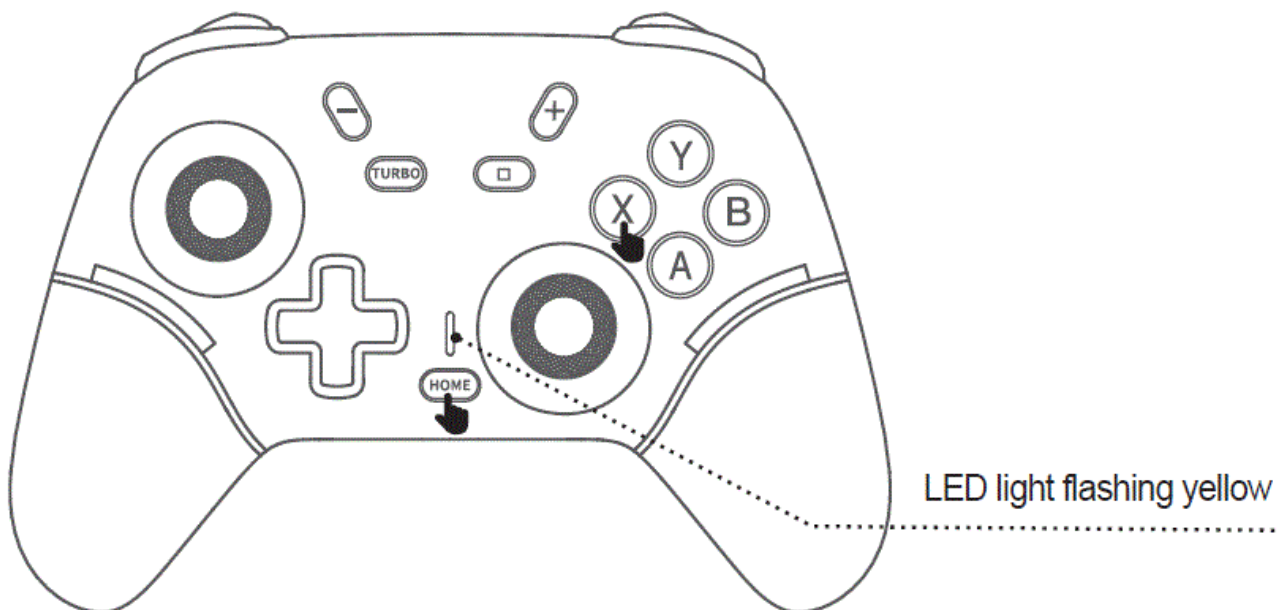


iOS MFi / Apple Arcade mode (iOS 13.0 or later):

 - Simultaneously press the **[B+HOME]** key for 2 seconds to enter iOS MFi mode, and the LED light on the controller will flash green. When the Apple phone searches for the device name “DUALSHOCK 4 Wireless Controller”, select Connect. After successful connection, the LED light on the handle will remain green for a long time.
- Successfully connected, you can directly press the **HOME** key, the LED light will flash slowly in green, and it will automatically reconnect.
- MFi games can also be downloaded from the ShanWan MFi app.

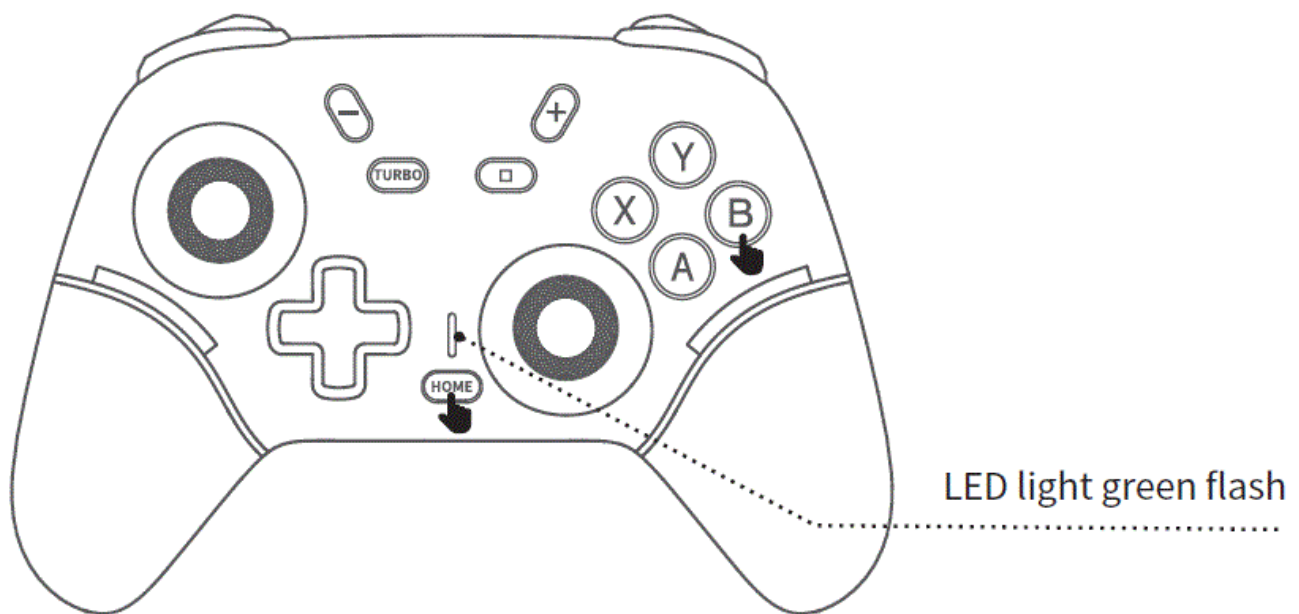

PCX-input Bluetooth mode

 - Simultaneously press the **[R1+ HOME]** key for 2 seconds to enter X-input Bluetooth mode. The LED light on the controller will flash blue. When the PC searches for the device name “Xbox Wireless Controller”, select Connect. After successful connection, the LED light on the handle will remain on in blue.
- Successfully connected, you can directly press the **HOME** key, the LED light will slowly flash blue and automatically reconnect.

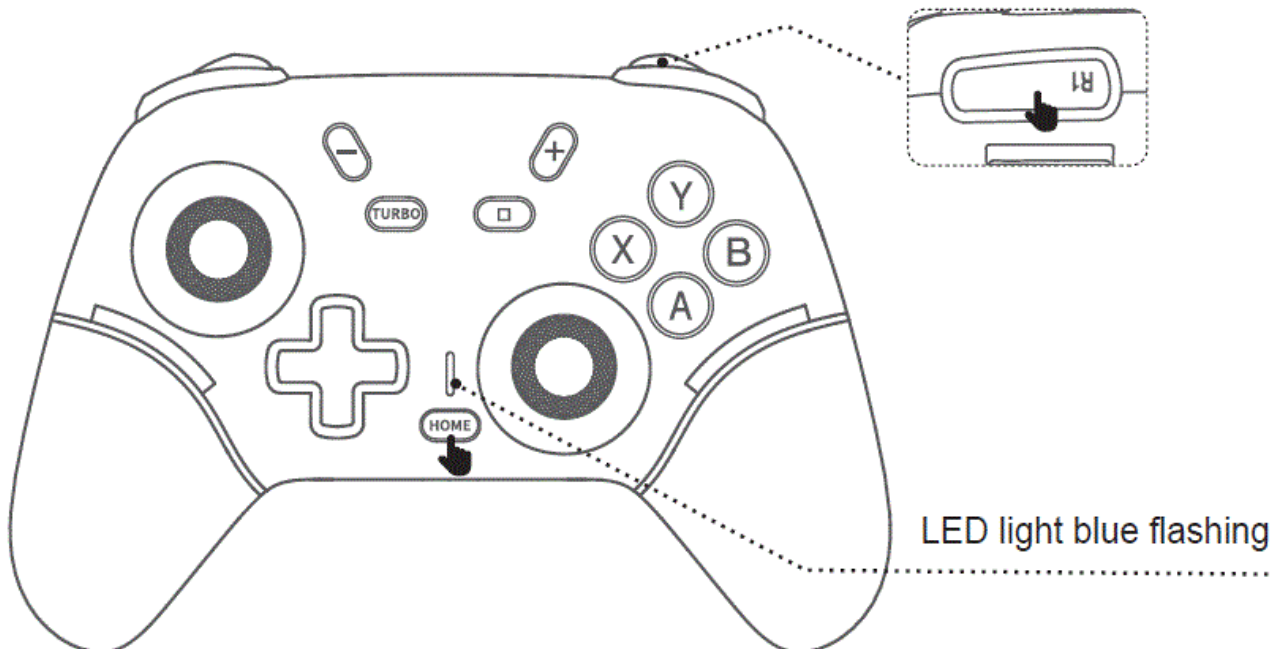

Programming

1. When the gamepad is enabled, the default programming key PL/PR is null
2. Press and hold the “M” button and the programming button (PL/PR), which need to be set at the same time, and then pair the LED indicator The light flashes slowly,the motor shakes a hint, and the key is released to enter the programming mode.
3. Press one or more regular function keys to copy (for example, press “A/B/X/Y /R1 /R2 / L 1/ L2 / L3 / R3 and arrow keys and left and right joysticks [joysticks count as eight keys]”, When you press the copy key, the LED flashes [can recognize and record two or more consecutive entries of the same key, for example, the A key is pressed twice continuously during the input, and the A key is also pressed twice continuously during the output], press the corresponding programming “PL/PR” button again to confirm and automatically exit [if you do not press the M key for 60 seconds to automatically save the exit], and the motor vibrates when exiting. When the programming setting is complete, the mode indicator returns to the display state before the setting.
4. Cancel the programming function: After entering the programming setting mode,directly press the PL/PR Key to exit, without setting any Key [This PL/PR Key is empty without any key value].

2.4G mode (optional)

PC device / smart TV / TV box [PS3 host 2.4G wireless connection operation method

1. Insert the 2.4G wireless receiver into the USB port of the PC device/smart TV/TV box.
2. After pressing the **L1 + HOME** Button at the same time, the controller enters wireless pairing mode, and the LED light flashes white.
3. After the wireless connection is OK, the LED light will remain white for a long time.
4. You can start operating PC devices/smart TVs/TV boxes/PS3 consoles to download and install games.

Controller charge / sleep / wake-up function

1. When the controller is charged in the off state (press the **HOME** Button to turn on / off), the corresponding mode indicator flashes slowly and remains on after full charge. When charging in the Bluetooth connection state, the corresponding mode indicator light flashes slowly and stays on after being fully charged.
2. Sleep/wake function: The game controller will enter sleep mode if not used within 5 minutes. Pairing and Connecting In state: If the controller cannot be connected for 1 minute, it will enter sleep mode. When it needs to be reused, press Press the **HOME** key to wake up and reconnect.
3. When the battery is low, the corresponding mode indicator flashes.
4. In wired mode, the corresponding mode does not make charging instructions.

Wired USB mode operation method and precautions

1. Insert the USB cable, and the controller will automatically recognize the currently inserted device (there is no need to press the **HOME** Button to power on in wired mode);
2. The LED in Xinput mode lights up blue, while the LED in D input mode lights up red.


 


Matters needing attention

1. Please do not store this product in a damp or hot place.
2. Do not knock, beat, stick, puncture, or try to disassemble this product, so as to avoid unnecessary damage to the product.
3. The built-in battery of the product should not be discarded with garbage.

 

4. Do not charge the handle near fire or other heat sources.
5. Non professionals are not allowed to disassemble this product, otherwise it will not be included in the after-sales warranty service.

Operation mode

Bluetooth profile


 
 
Applicable system	Android system		iOS system	
Working mode	Android V3 games mode	Android standard HID mode	iOS MFi mode	iOS V3 mode
Mode pairing (long press for 2 seconds)	A Button +  Button	X Button +  Button	B Button +  Button	Y Button +  Button
Indicator light	Purple	Yellow	Cyan	Purple
Remarks	Play Android Market Downloaded games	Play games in the game hall	Play ShanWan MFi App in game	Play App Store in game

Other Bluetooth profiles

Working mode	PS3 host	PS4 host	Switch host	PC Bluetooth mode
Mode pairing (long press for 2 seconds)	Plug in USB for pairing	Plug in USB for pairing	R2 Button +  Button	R1 Button +  Button
Indicator light	Red	Red	Green	blue
Remarks	Play PS3 games	Play PS4 games	Play Switch games	Play PC X-input game

PS4 Bluetooth mode has no function in Android version

2.4G mode

Applicable system	Windows system	PS3 Game Console	Switch game console
Working mode	2.4G wireless mode	2.4G wireless mode	2.4G wireless mode
Mode pairing (long press for 2 seconds)	L1 Button +  Button	L1 Button +  Button	L1 Button +  Button
Indicator light	White	White	White
Remarks	Wireless receiver is required. Power on the default bit X-input 360 mode, press Select + start key for 2 seconds to switch to D-input mode	Wireless receiver required	Wireless receiver required


Wired mode

Applicable system	Windows system	PS3 Game Console	Switch game console
Working mode	USB Wired mode	USB Wired mode	USB Wired mode
Mode pairing	Plug in USB automatic recognition	Plug in USB automatic recognition	Plug in USB automatic recognition
Unrecognized status	LED light flashes blue	LED light flashing red	LED light flashing red
Identification status	X -INPUT: LED Blue D-INPUT :LED Green	The corresponding channel light is always on	The corresponding channel light is always on
Remarks	Long press MODE for 5 seconds to switch X & D INPUT to each other	—	—


List of products



 Wireless controller x1

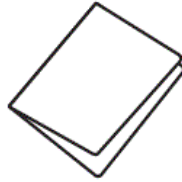

Manual X1

 

TYPE-C USB cable X1

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

Frequently Asked Questions



- **Q: What is the working voltage of the X9 Wireless game controller?**
 - A: The working voltage is DC3.7V.
- **Q: How far is the Bluetooth transmission distance of the controller?**
 - A: The Bluetooth transmission distance is 8 meters.
- **Q: Can I connect the controller to Windows 10 laptops for gaming?**
 - A: Yes, the controller supports Bluetooth connection with Windows 10 laptops for playing X-input games.

Documents / Resources

	Dongguan X9 Wireless Game Controller [pdf] User Manual X9, X9 Wireless Game Controller, Wireless Game Controller, Game Controller, Controller
---	--

References

- [User Manual](#)

 controller, Dongguan, Game Controller, Wireless Game Controller, X9, X9 Wireless Game
 Dongguan Controller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.