

**Contents** [ [hide](#) ]

- [1 DoorBird 50 Fingerprint Reader](#)
- [2 INSTALLATION DOORBIRD](#)
- [3 HOW TO REGISTER A NEW FINGERPRINT](#)
- [4 GENERAL INSTRUCTIONS](#)
- [5 HOW TO SOLVE RECOGNITION ISSUES](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



## DoorBird 50 Fingerprint Reader




# INSTALLATION DOORBIRD

## FINGERPRINT READER MODULE 50

Select the rubber gasket according to the material thickness at the module recess:


- 3 mm = Black gasket
- 2 mm = Transparent gasket

Attention! Remove the protective film on both sides before attachment.

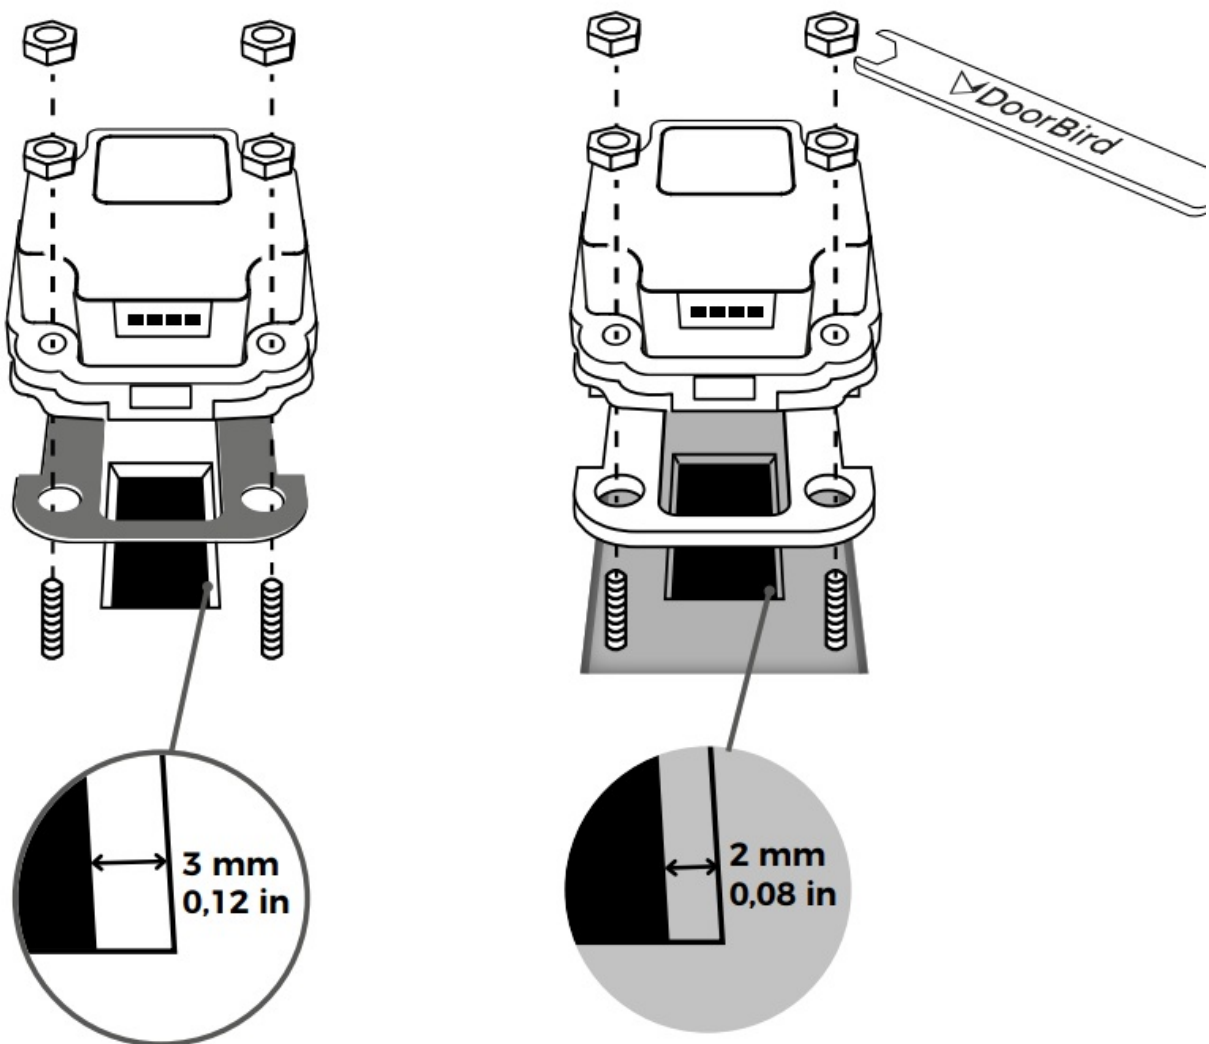


### Fingerprint Reader Module 50 as a single input module

Connect the red cable of the main unit to the Fingerprint Reader Module.





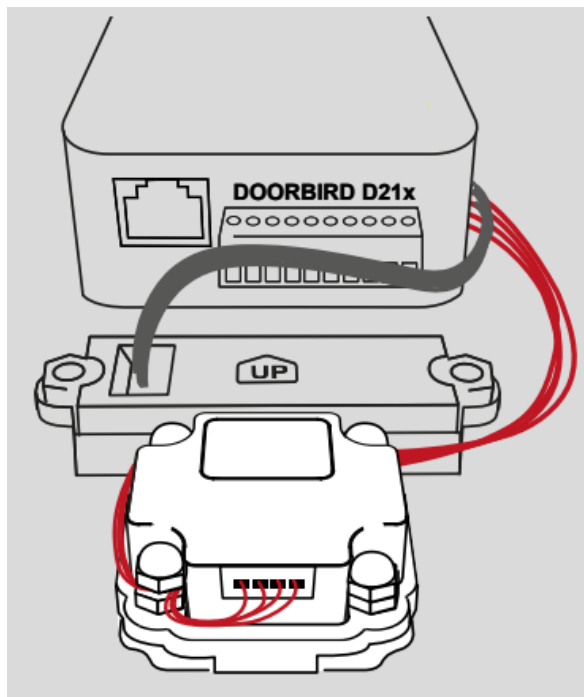


### **Fingerprint Reader Module 50 + additional input module**

Connect the green cable of the main unit to the Module Port Converter MPCOID21X. Then, connect the Fingerprint Reader Module to the red cable of the Module Port Converter MPCOID21X.

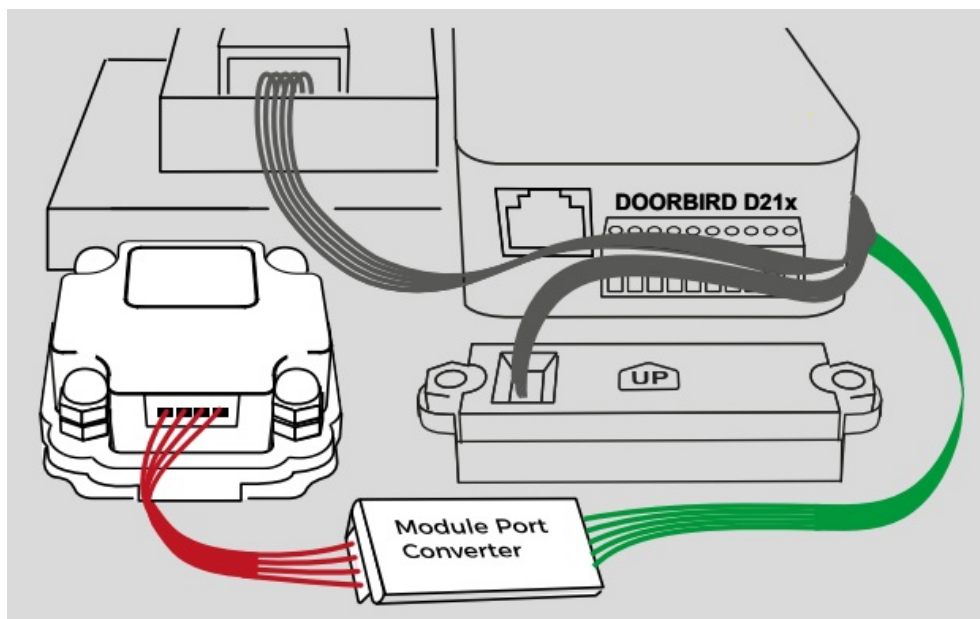

### **HOW TO REGISTER A NEW FINGERPRINT**

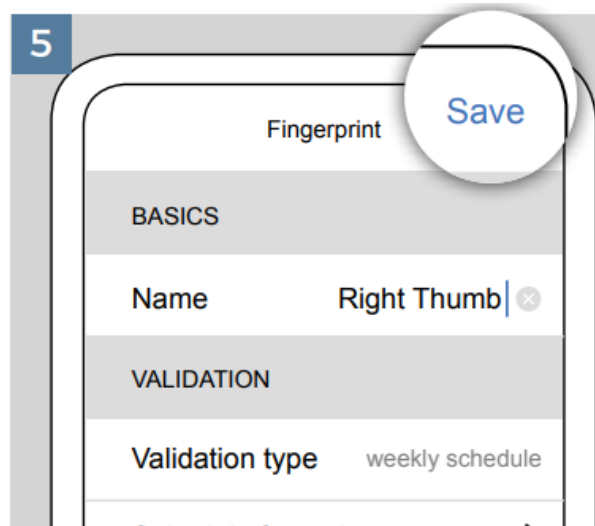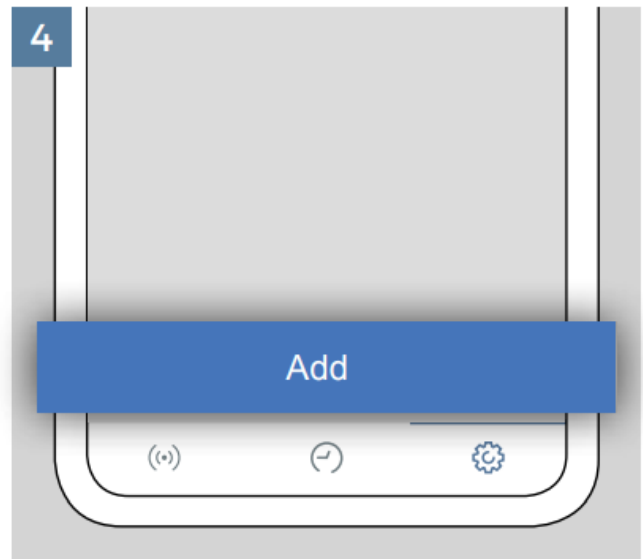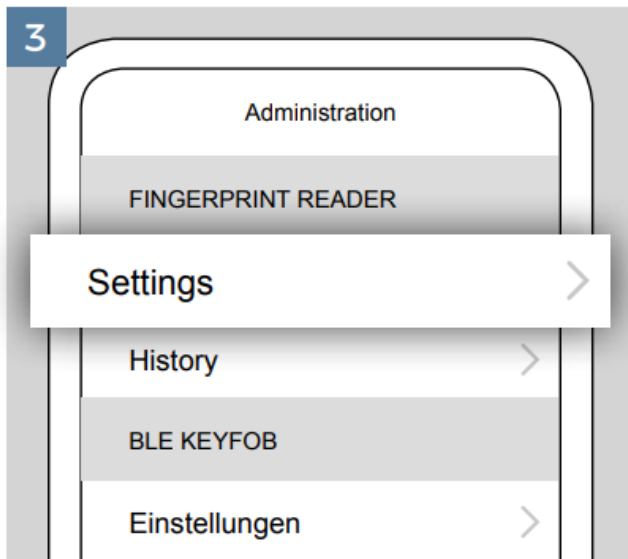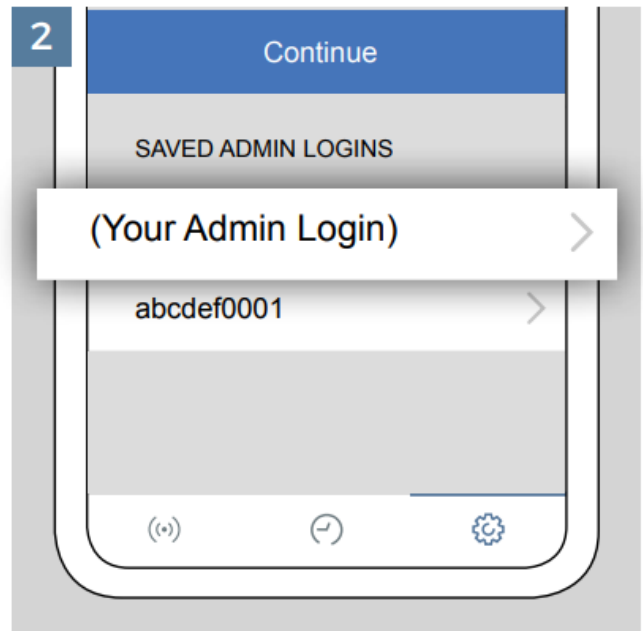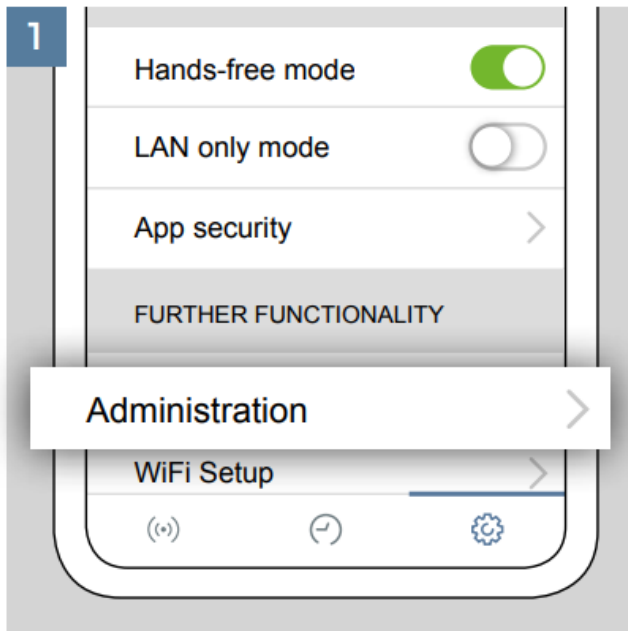



Enter a name for the fingerprint and configure the schedule for actions. This can be edited later if needed. Press „Save“ to start the enrollment process.



Follow the instructions in the DoorBird App until the enrollment process is finished.


## GENERAL INSTRUCTIONS

- Do not roll or swipe the finger over the sensor. Try to touch the sensor with as much fingerprint pattern as possible.
- Try to position the finger in the same way as its position will be when using the sensor later for finger recognition.
- If a previously registered finger is not recognized, save it as an additional new finger (e.g. “right forefinger 1” and “right forefinger 2”).
- Fingerprint templates are only stored locally within the Fingerprint reader module and are not transferred into the main electrical unit or into the Cloud.

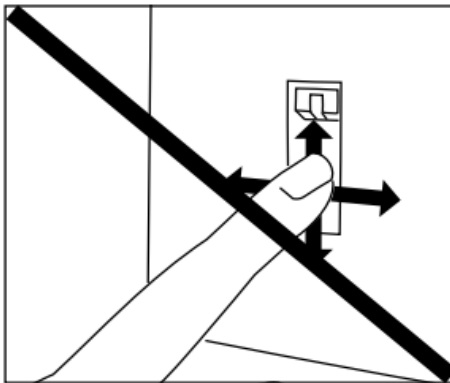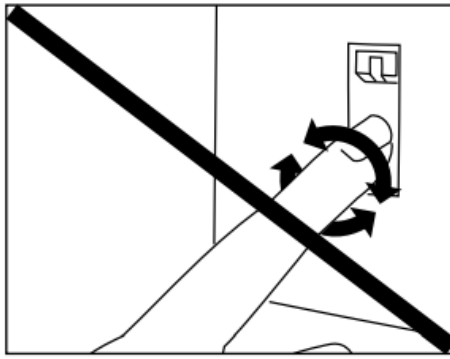

## HOW TO SOLVE RECOGNITION ISSUES

- Use the finger with the greatest possible contact (e.g. thumb) and clearest fingerprint pattern. Small fingers (e.g. children), fingers without structure or with scars and other injuries make recognition difficult.

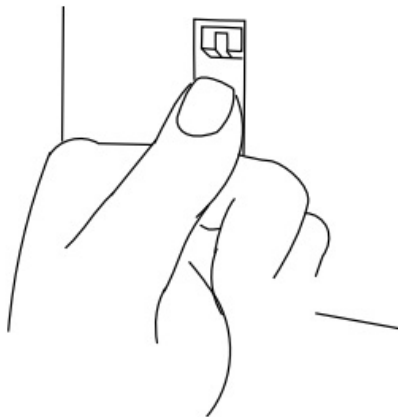


- Clean/Dry the finger before using the reader. Dirt, wetness or skin folds on the fingertips reduce the recognition rate.



- Register several fingers per person. Injuries to the fingerprint could prevent the detection (e.g. torn skin, scars). Register the same finger for summer and winter.



- Various weather conditions (summer, winter, heat, cold ...) could change the fingerprint and lead to nonrecognition. If a previously registered finger is not recognized, save it as an additional new finger (e.g. “right forefinger winter” and “right forefinger summer”).

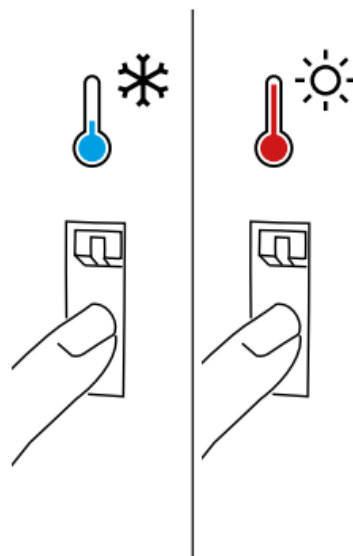


**Q: How can I troubleshoot recognition issues with the Fingerprint Reader Module 50?**

**A:** To solve recognition issues:

- Use fingers with clear patterns and maximum contact.
- Ensure fingers are clean and dry before use.
- Register multiple fingers per person.
- Register the same finger for summer and winter.
- If a finger is not recognized, save it as a new finger.

**Documents / Resources**

	<p><a href="#">DoorBird 50 Fingerprint Reader [pdf]</a> Instruction Manual</p> <p>D21x, MPCOID21X, 50 Fingerprint Reader, 50, Fingerprint Reader, Reader</p>
--	--

**References**

- [User Manual](#)

50, 50 Fingerprint Reader, D21x, DoorBird, Fingerprint Reader, MPCOID21X, DoorBird Reader

**Leave a comment**

Your email address will not be published. Required fields are marked \*

Comment \*



Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.