

DOORTEC PB04 Wireless Push Button for Automatic Door User Manual

Home » DOORTEC » DOORTEC PB04 Wireless Push Button for Automatic Door User Manual





Product Name: Wireless push button for automatic door

Model Name: PB04 Working Voltage: DC 3V


Transmitting Frequency:433.92M Hz

Add remote:

- 1. Keep pressing the learning button LEARN, release the button a till the LED becomes yellow, then press any button on the remote, remote will be added after the led flash and buzzer rings.
- 2. Keep pressing any button on the remote, and keep pressing button LEARN on remote at the same time, release button LEARN till LED become yellow, remote will been added after the led flash and buzzer rings


Delete remote: Keep pressing the learning button A 5 seconds, all remote memory will delete after the LED flashes 3 times (Tip: Ensure to keep pressing the learning button when deleting remote memory)

Wireless push-button learning and delete methods same as remotes

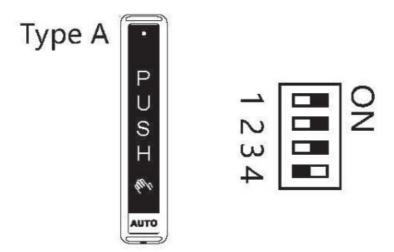

Please check the DIP switch if it's the same as the image is shown (during setting process) DIP 1, 2, 3 on the left, DIP 4 on the right

Function selection of wireless push button (work with swing door)

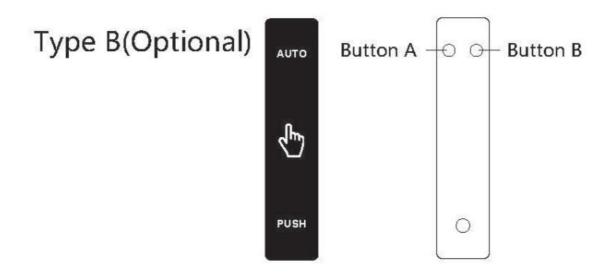

- 1. Remove battery
- 2. Keep pressing the "Reset" button
- 3. insert the battery at the same time, the red led to flash
- 4. Keep pressing button A, red led off about 5 second, Then flash again
- 5. Release the Reset button and A button, Setting is done

Notes:

- The receiver has been built-in. It can be connected to wireless accessories directly.
 Tip: Wireless push button can't be locked, If needs to lock, it needs to connect to an external receiver
- 2. Exit only function: Connect outside sensor or button to terminal "Open-B", connect inside sensor or button to terminal "Open A". Then press the "full lock" button on remote
- 3. When double open, a Synchronous cable must be connected referring to the manual. Power on, Ensure the setting on both controllers is the same. If speed is different during operation, Pls slightly adjust the open /close speed, open/close barking speed, opening time
- 4. When double opening, the remote control must learn both controllers, in order to control two-door at the same

time

5. In double open mode, accessories should connect to both controllers (parallel connection)

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Contents

1 Documents / Resources 2 Related Posts

Documents / Resources



DOORTEC PB04 Wireless Push Button for Automatic Door [pdf] User Manual PB04, 2A44Q-PB04, 2A44QPB04, PB04 Wireless Push Button for Automatic Door, PB04, Wireless Push Button for Automatic Door

Manuals+,