

# **DOREL JUVENILE MO183DTX Parent Display Instructions**

Home » Dorel Juvenile » DOREL JUVENILE MO183DTX Parent Display Instructions The Control of the C





See Pro 360° Baby Monitor

# **Contents**

- 1 MO183DTX Parent Display
- 2 Cleaning
- 3 Disposal
- **4 FCC Compliance**

**Statement** 

- **5 IC Information**
- **6 Warranty**
- 7 Documents / Resources
  - 7.1 References
- **8 Related Posts**

# **MO183DTX Parent Display**



#### STRANGULATION HAZARD -

Children have STRANGLED in cords. Keep this cord out of reach of children (more than 3 feet (0.9 m) away). Use wall clips provided to secure cord away from baby's reach.

Only use the AC adapter provided by the manufacturer. NEVER use an extension cord with the AC adapter.



For indoor use only. To reduce the risk of fire or electrical shock, DO NOT expose this product to water or moisture.

DO NOT use monitor near water (such as bath tub, sink, etc.) or submerge in water.

- This monitor is not intended to be used as a medical monitor and its use should not replace proper adult/parental supervision.
  - You should check your child's activity at regular intervals as this monitor will not alert parents to the silent activities of a child.
- NEVER attempt to disassemble the product. This is dangerous and will void the warranty.
- Test monitor periodically when in use and changing locations.
- Use only the adapter supplied with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- To prevent entanglement and overheating, DO NOT use extension cords.
- The adapter and device may become slightly warm to the touch during operation. This is normal.
- ALWAYS unplug the AC adapter from the wall during extended periods of non-use.
- Check to make sure wall outlet plates are not unusually hot to the touch. If they are, immediately unplug cords from these outlets.
  - Check that all outlet connections are in good condition so that adapter is not loose or that no wiring is exposed. Have a qualified, licensed electrician check the wiring as soon as possible.
- This baby monitor allows internet users to hear or view activity. Use the security feature included with this device to restrict internet viewership.
- DO NOT place adapter/wall plug under a window where a child might use it to step on and/or to reach something that might be dangerous.
- Adult assembly is required. Keep small parts away from children when assembling. Exercise care when unpacking the product.
- This product is not a toy. DO NOT allow children to play with it.

THE USER SHOULD NOT ATTEMPT TO SERVICE OR REPAIR THE MONITOR. ALL SERVICING SHOULD BE REFERRED TO CONSUMER CARE.

It is essential to check reception regularly. Monitor uses encrypted transmission over FCC managed frequencies. Always remember to secure your Wi-Fi router with a password.

## **IMPORTANT SAFETY INSTRUCTIONS**

- VENTILATION: DO NOT block ventilation openings.
  - DO NOT place on a bed, sofa, rug or similar surface.
  - DO NOT place in a book case or cabinet that may restrict air flow.
- HEAT: The monitor should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- Also keep these components out of direct sunlight.
- POWER CORD PROTECTION: The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it.
  - Pay particular attention to the cord at the plug, convenience receptacle, and at the point it exits from the

monitor.

# Cleaning

Clean product with a slightly damp cloth or with an anti-static cloth. ALWAYS unplug from electrical outle before cleaning. NEVER USE cleaning agents or abrasive solvents. DO NOT clean any part of the produc with thinners or other solvents and chemicals— this may cause permanent damage to the product, which is not covered by the warranty. Keep product away from hot, humid areas or strong sunlight, and do not let it get wet. Every effort has been made to ensure high standards of reliability of your product. However, if something does go wrong, please do not try to repair it yourself—contact Consumer Care for assistance.

## Disposal

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electronic equipment in accordance with your local laws. Some of the product materials can be reused if you take them to a recycling poinBy reusing some parts or raw materials from used products, you make an important contribution to the protection of the environment. Please contact your recycling center for need more information on the collection points in your area.

# **FCC Compliance Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning this equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by Dorel Juvenile Group can void your authority to operate this equipment under Federal Communications Commission's rules.

Use of other accessories may not ensure compliance with the FCC exposure guidelines.

**CAUTION:** This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Restrictions declaration in the 5 GHz band: the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

## **IC** Information

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the

transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This Class B digital apparatus complies with Canadian ICES-003.

BATTERY WARNINGS Failure to follow these warnings could result in fire, electric shock, injury, or damage to the product or other property.

- DO NOT attempt to remove or replace this battery from the product. Risk of explosion or injury, if battery is replaced or removed.
- Dispose of used batteries according to the instruction.
- Do not dispose of a battery into fire or a hot oven, or by mechanically crushing or cutting the battery, which can result in an explosion.
- Keep product away from heat and fire as it may get damaged, catch fire, or explode.
- NEVER charge battery with unit unattended. Keep away from flammable surfaces during charging.
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Battery should only get slightly warm during charging. If the battery becomes hot, smokes, or gives off an odor during charging, STOP charging immediately.
- DO NOT use in portable mode when battery is low.
- If the battery is not used for a long time, the product may discharge, and it will need to be recharged before use.
- When environment temperature is lower than 0°C or 5°C and more than 40°C or 45°C the battery will stop charging and into protection mode.

### Warranty

Dorel Juvenile Group warrants this product against defective materials or workmanship for one year from the date of original purchase. For more information or to make a claim, visit <a href="https://www.maxicosi.com/warranty">https://www.maxicosi.com/warranty</a>.



## **Documents / Resources**



**DOREL JUVENILE MO183DTX Parent Display** [pdf] Instructions MO183DTX, MO183DTX Parent Display, Parent Display, Display

#### References

- Maxi Cosi™ Car Seats, Pushchairs & Home equipment
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.