

DORMAN 13715 Keyless Entry Remote 4 Button



## DORMAN 13715 Keyless Entry Remote 4 Button Instructions

[Home](#) » [DORMAN](#) » DORMAN 13715 Keyless Entry Remote 4 Button Instructions 

### Contents

- [1 DORMAN 13715 Keyless Entry Remote 4 Button](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Usage Instructions](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



### DORMAN 13715 Keyless Entry Remote 4 Button



### Product Information

## Specifications

- **Product Name:** Vehicle Information Center
- **Compatibility:** Vehicles without Drivers Information Center Buttons
- **Usage:** Provides essential vehicle information

## Product Usage Instructions

### Step 1: Installation

- Ensure the Vehicle Information Center is compatible with your vehicle model. Install the center following the manufacturer's instructions.

### Step 2: Power On

- Turn on the vehicle ignition to power up the Vehicle Information Center.

### Step 3: Navigation

- Use the buttons on the center to navigate through different information screens such as fuel level, temperature, and more.

### Step 4: Interpret Data

- Interpret the displayed data to understand your vehicle's status and performance.

## Frequently Asked Questions (FAQ)

### **Q: How do I know if my vehicle is compatible with the Vehicle Information Center?**

**A:** Check the user manual of your vehicle or consult with the manufacturer to verify compatibility.

### **Q: Can I install the center myself?**

**A:** It is recommended to have the center installed by a professional to ensure proper setup and functionality.

### **Q: What should I do if the information displayed seems inaccurate?**

**A:** If you notice any discrepancies in the displayed information, consider recalibrating or contacting customer support for assistance.

## Usage Instructions



### **Use this Procedure for Vehicles without Drivers Information Center Buttons**

To access this display, the vehicle must be in Park (P) with a key in the ON position (as far as you can go without cranking the engine)

1. Press the trip odometer reset stem until the RELEARN REMOTE KEY displays.
2. Press and hold the trip odometer reset stem for three seconds. The message REMOTE KEY LEARNING ACTIVE will be displayed.
3. Press and hold the lock and unlock buttons on the first keyless remote at the same time for approximately 15 seconds. A chime will sound indicating that the remote is programmed.
4. To program additional remotes at this time repeat step 3. This vehicle can have a maximum of eight remotes programmed.
5. To exit programming mode turn the key off and remove the key. Test remote(s).



Documents / Resources

|   |  |
|---|--|
|   | <p><a href="#">DORMAN 13715 Keyless Entry Remote 4 Button</a> [pdf] Instructions<br/>13715 Keyless Entry Remote 4 Button, 13715, Keyless Entry Remote 4 Button, Entry Remote 4 Button, Remote 4 Button, Button</p> |
|  | <p><a href="#">DORMAN 13715 Keyless Entry Remote 4 Button</a> [pdf] User Manual<br/>13715 Keyless Entry Remote 4 Button, 13715, Keyless Entry Remote 4 Button, Entry Remote 4 Button, Remote 4 Button, Button</p>  |

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.