



DORMAN 13722 Keyless Entry Remote 4 Button Owner's Manual

[Home](#) » [DORMAN](#) » DORMAN 13722 Keyless Entry Remote 4 Button Owner's Manual 

Contents

- [1 DORMAN 13722 Keyless Entry Remote 4 Button](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

DORMAN 13722 Keyless Entry Remote 4 Button

OWNER'S MANUAL

Use this Procedure for Vehicles with Driver Information Center Buttons

This procedure will erase all previously learned transmitters. Therefore, they must be relearned as additional transmitters (STEP 5)

This information is in your Owner's Manual in the Drivers Information Center Section

1. Insert Key and turn to ON position so you can access Drivers Information Center
2. Press the vehicles information button until PRESS TO RELEARN REMOTE KEY displays
3. Press the set/reset button until REMOTE KEY LEARNING ACTIVE displays
4. Press and hold the lock and unlock buttons on the first keyless remote at the same time for approximately 15 seconds. A chime will sound indicating that the remote is programmed.
5. To program additional remotes at this time repeat step 3. This vehicle can have a maximum of eight remotes programmed.
6. To exit programming mode turn key off and remove key. Test remote(s)

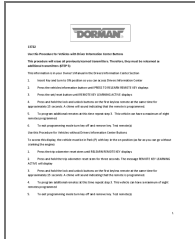
Use this Procedure for Vehicles without Drivers Information Center Buttons

To access this display, the vehicle must be in Park (P) with key in the on position (as far as you can go without cranking the engine)

1. Press the trip odometer reset stem until RELEARN REMOTE KEY displays.
2. Press and hold the trip odometer reset stem for three seconds. The message REMOTE KEY LEARNING ACTIVE will display
3. Press and hold the lock and unlock buttons on the first keyless remote at the same time for approximately 15 seconds. A chime will sound indicating that the remote is programmed.
4. To program additional remotes at this time repeat step 3. This vehicle can have a maximum of eight remotes programmed
5. To exit programming mode turn key off and remove key. Test remote(s)



Documents / Resources

	<p>DORMAN 13722 Keyless Entry Remote 4 Button [pdf] Owner's Manual 13722 Keyless Entry Remote 4 Button, 13722, Keyless Entry Remote 4 Button, Remote 4 Button, 4 Button, Button</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.