

Dorman 13733 Keyless Entry Remote 3 Button



## Dorman 13733 Keyless Entry Remote 3 Button Instruction Manual

[Home](#) » [DORMAN](#) » Dorman 13733 Keyless Entry Remote 3 Button Instruction Manual 

### Contents

- [1 Dorman 13733 Keyless Entry Remote 3 Button](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 Programming Instructions](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)



Dorman 13733 Keyless Entry Remote 3 Button



## Product Information

### Specifications:

- Model: 13733
- Type: Remote Programming Device
- Compatibility: Vehicle Remotes

## Product Usage Instructions

### Programming Instructions:

Before programming the remote, ensure that all currently programmed and new remotes must be reprogrammed to the vehicle. It is essential to have all remotes on hand at the time of programming.

1. Start by locating the vehicle's programming button.
2. Press and hold the programming button until the vehicle's lights flash.
3. Within 30 seconds, press any button on the remote you wish to program.
4. Repeat the previous step for each additional remote you want to program.
5. Once all remotes are programmed, release the programming button to exit programming mode.

## Frequently Asked Questions

- **Q: Do I need any special tools to use the remote programming device?**
  - A: No, the remote programming device is designed to be user-friendly and does not require any special tools for programming.
- **Q: How often do I need to reprogram the remotes to the vehicle?**
  - A: It is recommended to reprogram all remotes to the vehicle whenever a new remote is added or if there

are any issues with the current programming.

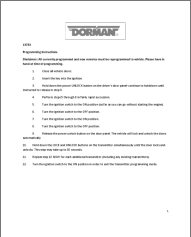
## Programming Instructions

Disclaimer: All currently programmed and new remotes must be reprogrammed to vehicle. Please have in hand at time of programming.

1. Close all vehicle doors.
2. Insert the key into the ignition.
3. Hold down the power UNLOCK button on the driver's door Continue to hold down until instructed to release in step 9.
4. Perform steps 5 through 8 in fairly rapid succession.
5. Turn the ignition switch to the ON position (as far as you can go without starting the engine).
6. Turn the ignition switch to the OFF position.
7. Turn the ignition switch to the ON position.
8. Turn the ignition switch to the OFF position.
9. Release the power unlock button on the door panel. The vehicle will lock and unlock the doors automatically.
10. Hold down the LOCK and UNLOCK buttons on the transmitter simultaneously until the door locks and unlocks.  
This step may take up to 30 seconds.
11. Repeat step 10 NOW for each additional transmitter (including any existing transmitters).
12. Turn the ignition switch to the ON position in order to exit the transmitter programming mode

---

## Documents / Resources

	<a href="#">Dorman 13733 Keyless Entry Remote 3 Button [pdf]</a> Instruction Manual 13733 Keyless Entry Remote 3 Button, 13733, Keyless Entry Remote 3 Button, Entry Remote 3 Button, Remote 3 Button
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.