

DORMAN 13734 Keyless Entry Remote 3 Button



# DORMAN 13734 Keyless Entry Remote 3 Button Instructions

[Home](#) » [DORMAN](#) » DORMAN 13734 Keyless Entry Remote 3 Button Instructions 

## Contents

- [1 DORMAN 13734 Keyless Entry Remote 3 Button](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Programming Instructions](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



**DORMAN 13734 Keyless Entry Remote 3 Button**



## Product Information

### Specifications

- **Model Number:** 13734
- **Type:** Remote Programming Device
- **Compatibility:** Vehicle Remote Programming
- **Manufacturer:** [Manufacturer Name]

## Product Usage Instructions

### Programming Instructions

**Disclaimer:** All currently programmed and new remotes must be reprogrammed to the vehicle. Please have it in hand at the time of programming.

1. **Step 1:** Gather all remotes that need to be programmed.
2. **Step 2:** Ensure the vehicle is accessible and in a suitable programming environment.
3. **Step 3:** Follow the specific programming instructions provided by the manufacturer.
4. **Step 4:** Test each remote after programming to ensure successful synchronization.

### Frequently Asked Questions (FAQ)

**Q: Do I need to reprogram all remotes every time?**

**A:** Yes, both currently programmed and new remotes must be reprogrammed to the vehicle each time.

## Q: What should I do if a remote fails to program successfully?

**A:** If a remote fails to program successfully, ensure you are following the correct programming steps and try again. If issues persist, contact customer support for assistance.

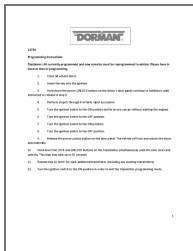
## Programming Instructions

**Disclaimer:** All currently programmed and new remotes must be reprogrammed to the vehicle. Please have it in hand at the time of programming.

1. Close all vehicle doors.
2. Insert the key into the ignition.
3. Hold down the power UNLOCK button on the driver's door. Continue to hold it down until instructed to release it in step 9.
4. Perform steps 5 through 8 in fairly rapid succession.
5. Turn the ignition switch to the ON position (as far as you can go without starting the engine).
6. Turn the ignition switch to the OFF position.
7. Turn the ignition switch to the ON position.
8. Turn the ignition switch to the OFF position.
9. Release the power unlock button on the door panel. The vehicle will lock and unlock the doors automatically.
10. Hold down the LOCK and UNLOCK buttons on the transmitter simultaneously until the door locks and unlocks. This step may take up to 30 seconds.
11. Repeat step 10 NOW for each additional transmitter (including any existing transmitters).
12. Turn the ignition switch to the ON position to exit the transmitter programming mode.

---

## Documents / Resources

	<p><a href="#">DORMAN 13734 Keyless Entry Remote 3 Button</a> [pdf] Instructions 13734, 13734 Keyless Entry Remote 3 Button, Keyless Entry Remote 3 Button, Entry Remote 3 Button, Remote 3 Button</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.