

DORMAN 13737 Entry Remote 3 Button Keyless Instructions

Home » DORMAN » DORMAN 13737 Entry Remote 3 Button Keyless Instructions



Contents

- 1 Programming Instructions
- 2 Documents / Resources
 - 2.1 References

Programming Instructions

Disclaimer: All currently programmed and new remotes must be reprogrammed to vehicle. Please have in hand at time of programming.

Once plugging in the programmer you will have 2 minutes to program all new and existing remotes to vehicle. After 1 minute your session will time out and your vehicle will no longer be in programming mode. Programmer will work for no more than 3 sessions.

- 1. Insert Key into ignition and turn to IGN ON. (Do not crank)
- 2. Insert Programmer into your vehicle's OBD2 Port. This port is typically located underneath the dashboard below the steering wheel. It may be covered by a faceplate that will easily pop off.
- 3. Once the Programmer is inserted, wait for a chime or orange light on the Programmer to come on. This will indicate that the unit is ready to program first remote.
- 4. Press and hold the lock and unlock button on the remote simultaneously until you hear a chime, buzzer, or the door locks cycle (approximately 10-15 seconds).
- 5. To program additional remotes, repeat step 4.
- 6. Remove Programmer when all remotes have been programmed.



Documents / Resources



DORMAN 13737 Entry Remote 3 Button Keyless [pdf] Instructions

13737 Entry Remote 3 Button Keyless, 13737, Entry Remote 3 Button Keyless, Remote 3 Button Keyless, Button Keyless, Keyless

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.