



DORMAN 13776 Keyless Entry Remote 4 Button Instruction Manual

[Home](#) » [DORMAN](#) » DORMAN 13776 Keyless Entry Remote 4 Button Instruction Manual 

DORMAN 13776 Keyless Entry Remote 4 Button Instruction Manual



ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

REMOVAL/INSTALL OF KEYLESS ENTRY REMOTE (13776).
Chrysler 2006–01, Dodge 2010–08, Dodge 2006–01, Jeep 2004–0.

Contents

1 GENERAL TECH TIPS

2 Programming Instructions

3 Documents / Resources

3.1 References


GENERAL TECH TIPS

- **DISCLAIMER:** All currently programmed and new remotes must be reprogrammed to your vehicle. Please have all remotes in hand at time of programming.
- Due to the programming process being sensitive to voltage drops, it is recommended that a battery charger is hooked up to the vehicle before beginning the programming process.

Programming Instructions

STEP 1: Turn vehicle ignition key to **ON** position, without starting engine (Key-On Engine-Off—Position “1”).

STEP 2: Insert programmer into **OBD II** port, located under steering column, near pedals.

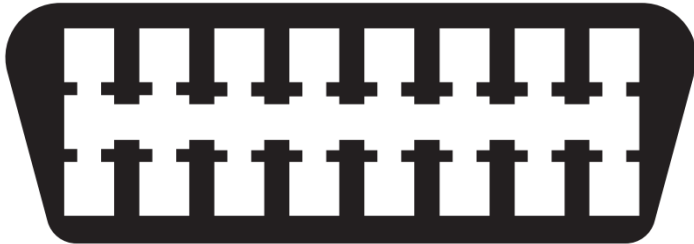

STEP 3: Wait 10 seconds then press the **LOCK** and **UNLOCK** buttons on the key fob simultaneously for three seconds. Press the **LOCK** button for two seconds.

STEP 4: Repeat Step 3 for all additional remotes.

STEP 5: When all key fobs have been programmed, turn ignition key off and remove programmer from the OBD II port.

STEP 6: Wait two minutes and verify each key fob functions properly. If programming was unsuccessful, restart the procedure.

Still need help?

Please call our Technical Support team for assistance from our team of certified automotive experts.

1-800-523-2492


Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

Dorman Products, Inc. Corporate Office and Customer Service: 1-800-523-2492 ©2021 No reproduction in whole or in part without prior written approval.



Documents / Resources

	<p>DORMAN 13776 Keyless Entry Remote 4 Button [pdf] Instruction Manual</p> <p>13776 Keyless Entry Remote 4 Button, 13776, Keyless Entry Remote 4 Button, Entry Remote 4 Button, Remote 4 Button</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.