

DORMAN 13798 Keyless Entry Remote 3 Button Instructions



Contents

- [1 13798](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

13798

ALL KEY FOBS MUST BE PRESENT AND REPROGRAMMED WHEN PROGRAMMING NEW FOBS

Use this procedure for the following applications.

Crown Victoria	1998-2005
Grand Marquis	1998-2005
Marauder	2003-2004

1. Turn ignition from OFF to RUN 4 times within 3 seconds, with the 4th time ending in RUN. Door locks will cycle to confirm programming mode.
2. Within 20 seconds, press any button on first keyless remote. Door locks will cycle to confirm programming.
3. Within 20 seconds, press any button on second keyless remote. Door locks will cycle again to confirm programming.
4. Turn ignition to OFF. Locks will again cycle to indicate end of programming mode.

Use this procedure for the following applications.

Focus 2000-2007

1. Fasten seat belt and close all doors.
2. Turn ignition from OFF to RUN 4 times within 6 seconds, with the 4th time ending in RUN.
3. Turn ignition to OFF. Chime will sound to confirm programming mode.
4. Within 10 seconds, press and hold any button on the first keyless remote. Wait for chime and warning lamp to flash then release button on remote.
5. Within 10 seconds, repeat step 4 to program additional remotes.
6. Turn ignition to RUN and wait 10 seconds to end programming mode. System will chime once to confirm programming.

Use this procedure for the following applications.

All other applications not specified.

1. Turn ignition from OFF to RUN 8 times within 10 seconds, with the 8th time ending in RUN. Door locks will cycle to confirm programming mode.
2. Within 20 seconds, press any button on first keyless remote. Door locks will cycle to confirm programming.
3. Within 20 seconds, press any button on second keyless remote. Door locks will cycle again to confirm programming.
4. Turn ignition to OFF. Locks will again cycle to indicate end of programming mode.

Documents / Resources

	<p>DORMAN 13798 Keyless Entry Remote 3 Button [pdf] Instructions 13798, 13798, 13798 Keyless Entry Remote 3 Button, 13798, Keyless Entry Remote 3 Button, Entry Remote 3 Button, Remote 3 Button</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.