



DORMAN 99132 Keyless Entry Remote 4 Button Instruction Manual

[Home](#) » [DORMAN](#) » DORMAN 99132 Keyless Entry Remote 4 Button Instruction Manual 



99132

REMOVAL/INSTALL INSTRUCTIONS: KEYLESS ENTRY REMOTE

Contents

- [1 99132 Keyless Entry Remote 4 Button](#)
- [2 Programming Instructions:](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

99132 Keyless Entry Remote 4 Button

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

REMOVAL/INSTALL OF KEYLESS ENTRY REMOTE (99132)
Subaru 2007–97

To program a new transmitter, it is necessary to program the transmitter's 8 digit code into the vehicle. A label with an eight-digit number is located on the outside of our remote.

(Original remotes will have this code on the circuit board).

STEP 1: Locate 8-digit remote code of new remote to be programmed. Code is located on the outside of our remote. (Original remotes will have code on circuit board.)

STEP 2: Unlock vehicle using existing remote.

STEP 3: Open and close door ONE time. The next step must be completed within 45 seconds.

STEP 4: Within 45 seconds, insert key into ignition and without starting vehicle turn from LOCK to ON 11 times ending in the ON position. (Instrument panel will light up in the ON position.)

STEP 5: Open and close driver door ONE time. A constant faint chime will sound indicating your vehicle is in programming mode and is ready to accept a new remote. The next step must be completed within 45 seconds.

STEP 6: Within 45 second of your vehicle entering programming mode, begin registering your 8-digit code of the remote to be programmed.

STEP 7: Press power door lock button to LOCK the same number of times as the first digit of your remote code found in step 1.

STEP 8: Within 5 seconds press the power door UNLOCK button.

STEP 9: Repeat steps 7 and 8 for all remaining digits of remote code.

STEP 10: When you are finished with step 9, press the power door UNLOCK button on the car door once.

STEP 11: Repeat steps 7 through 9 a second time to confirm the 8-digit remote code.

STEP 12: When the 8-digit code has been entered a second time a faint chime will sound for 30 seconds.

STEP 13: Remove key, open/close door and test remote.

STEP 14: Repeat steps 1 through 13 for each additional remote needing to be programmed or re-programmed.

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully. This product is only designed to function properly on specific vehicle applications. Please verify that the vehicle requirements match the product specifications and application notes for this part.

IF YOUR REMOTE LOOKS LIKE THIS ONE



Programming Instructions:

STEP 1: Sit in the driver's seat and close all doors.
STEP 2: Open the driver's door.
STEP 3: Close the door.
STEP 4: Insert the key into the ignition. Turn ignition switch from Lock to ON (as far as you can go without cranking) 10 times in rapid succession ending in Lock (within 15 seconds). The horn will chirp to indicate the vehicle has entered key fob learn mode.
Do not remove the key.
STEP 5: Open the driver's door.
STEP 6: Close the driver's door.
STEP 7: Press any button on the remote that you are programming. The horn will chirp 2 times to indicate that the remote has been programmed.
STEP 8: Repeat steps 5 through 7 for any additional remotes (including original remotes originally programmed to the vehicle).
STEP 9: Remove the ignition key from the ignition switch. The horn will chirp 3 times to indicate the system has exited learn mode.

Still need help?

Please call our Technical Support team for assistance from our team of certified automotive experts.

1-[800-523-2492](tel:800-523-2492)

Disclaimer:

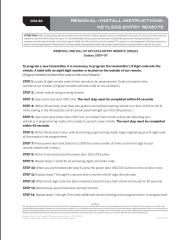
Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.

Dorman Products, Inc. | Corporate Office and Customer Service: 1-[800-523-2492](tel:800-523-2492)

©2021 No reproduction in whole or in part without prior written approval.

99132_Instructions

Documents / Resources

	<p>DORMAN 99132 Keyless Entry Remote 4 Button [pdf] Instruction Manual</p> <p>99132 Keyless Entry Remote 4 Button, 99132, Keyless Entry Remote 4 Button, Remote 4 Button, Button</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.