

DORMAN 99137 Keyless Entry Remote 3 Button



## DORMAN 99137 Keyless Entry Remote 3 Button Instructions

[Home](#) » [DORMAN](#) » DORMAN 99137 Keyless Entry Remote 3 Button Instructions 

### Contents

- [1 DORMAN 99137 Keyless Entry Remote 3 Button](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Programming Steps](#)
- [5 FAQ](#)
- [6 MODELS](#)
- [7 Use this procedure for the following applications](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)



**DORMAN 99137 Keyless Entry Remote 3 Button**



## Product Information

### Specifications

- **Model:** 99137
- **Applications:** 4Runner 1999-2002, 4Runner 2003-2009, Celica 2000-2005, Echo 2000-2005, FJ Cruiser 2006-2008, Highlander 2001-2007, Prius 2000-2003, Rav4 2001-2005
- **Programming Time:** Varies based on the model and year of the vehicle
- **Compatibility:** Works with specific Toyota vehicle models and years

### Product Usage Instructions

#### Programming Instructions for Toyota Vehicles

1. Ensure the key is out of the ignition, the driver's door is open, and all other doors are closed and unlocked.
2. Follow the specific steps based on your vehicle's model and year within the specified timeframes.
3. Perform the programming steps accurately to ensure successful remote programming.

### Programming Steps

#### 1. Initial Steps:

- Insert and remove the key from the ignition without turning it.
- Perform lock/unlock cycles using the power lock switch on the driver's door.
- Close and open the driver's door as instructed.

#### 2. Main Programming:

- Follow the sequence of actions within the specified timeframes.

- Use the remote control to synchronize with the vehicle's programming mode.
- Ensure the door locks cycle as indicated for successful programming.

## FAQ

- **Q:** Can I use this product for vehicles other than the Toyota models mentioned?
- **A:** No, this product is specifically designed for Toyota vehicles listed in the user manual. Using it with other models may not yield the desired results.
- **Q:** What should I do if the door locks do not cycle after following the programming steps?
- **A:** If the door locks do not cycle as expected, return to step 1 and ensure all conditions are met. Repeat the programming steps carefully within the specified timeframes.

## MODELS

- 4Runner 1999-2002
- 4Runner 2003-2009
- Celica 2000-2005
- Echo 2000-2005
- FJ Cruiser 2006-2008
- Highlander 2001-2007
- Prius 2000-2003
- Highlander 2001-2007
- Prius 2000-2003
- Rav4 2001-2005

## Use this procedure for the following applications

### 4Runner 1999-2002

1. Start with the key out of the ignition, the driver's door is open all others closed and the driver's door is unlocked.
2. Insert the key into the ignition (Do NOT Turn) and Pull the key out.
3. Perform these steps within 40 seconds.
  - **A.** Using the power lock switch on the driver's door, perform 5 lock/unlock cycles starting with lock. Use an even pace and try to go about one cycle per second. (1 Cycle = 1 lock and 1 unlock).
  - **B.** Close, then open the driver's door.
4. Perform these steps within 40 seconds.
  - **A.** Using the power lock switch on the driver's door, perform 5 lock/unlock cycles starting with lock. Use an even pace and try to go about one cycle per second. (1 Cycle = 1 lock and 1 unlock).
  - **B.** Insert the key in the ignition cylinder.
  - **C.** Turn the ignition to ON (Do NOT Start) and then back to OFF once to program the remote while retaining the original remote codes. Twice to erase all original codes and add a new remote. Three times to check how many remotes are programmed or five times to erase all original codes.
  - **D.** Remove the key from the ignition.
5. Within 3 seconds the power door locks should cycle automatically indicating successful entry into programming

mode. Return to step 1 if the locks do not cycle at this point.

6. Perform these steps within 40 seconds.

- **A.** Press the lock and unlock buttons on the remote simultaneously for 1 second.
- **B.** Immediately after letting go of the lock and unlock buttons, press the lock button itself and hold for 2 seconds. Within 3 seconds, the door locks should cycle once indicating successful programming. If the door locks do not cycle, or cycle twice. Repeat steps A and B in step 6 as your remote has not been accepted.
- **C.** Repeat steps A and B in step 6 for each new remote.

7. Close the driver's door.

## MODELS

- 4Runner 2003-2009
- Celica 2000-2005
- Echo 2000-2005
- FJ Cruiser 2006-2008
- Highlander 2001-2007
- Prius 2000-2003
- Highlander 2001-2007
- Prius 2000-2003
- Rav4 2001-2005

1. Start with the key out of the ignition, the driver's door is open all others closed and the driver's door is unlocked.

2. Perform these steps within 5 seconds.

- **A.** Insert the key into the ignition (Do NOT Turn) Pull the key out.
- **B.** Insert the key into the ignition (Do NOT Turn) Pull the key out.

3. Perform these steps within 40 seconds.

- **A.** Close then open the driver's door.
- **B.** Close then open the driver's door.
- **C.** Insert the key into the ignition (Do NOT Turn). Pull the key out.

4. Perform these steps within 40 seconds.

- **A.** Close then open the driver's door.
- **B.** Close then open the driver's door.
- **C.** Insert the key into the ignition and leave it in the ignition.
- **D.** Close the driver's door.
- **E.** Turn the ignition to ON (Do NOT Start) then back to OFF.
- **F.** Remove the key from the ignition.

5. Within 3 seconds, the power door locks should lock and then unlock automatically indicating successful entry into programming mode. Return to step 1 if the locks do not cycle at this point.

6. Perform these steps within 40 seconds.


- **A.** Press the lock and unlock buttons on the remote simultaneously for 1.5 seconds.
- **B.** Immediately after letting go of the lock and unlock buttons, Press the lock button by itself and hold for 2 seconds. Within 3 seconds, the door locks should lock and then unlock once indicating successful programming. If the door locks cycle twice, repeat steps A and B in step 6 as the remote was not

accepted.

- C. Repeat steps A and B in step 6 for each new remote.

7. Open the driver's door.

## Documents / Resources

	<p><a href="#">DORMAN 99137 Keyless Entry Remote 3 Button</a> [pdf] Instructions 99137 Keyless Entry Remote 3 Button, 99137, Keyless Entry Remote 3 Button, Entry Remote 3 Button, Remote 3 Button, Button</p>
---	--

## References

- [User Manual](#)

### Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.