

DORMAN 99139 3 Button Keyless Entry Remote



DORMAN 99139 3 Button Keyless Entry Remote Instructions

[Home](#) » [DORMAN](#) » DORMAN 99139 3 Button Keyless Entry Remote Instructions 

Contents

- [1 DORMAN 99139 3 Button Keyless Entry Remote](#)
- [2 Product Information](#)
- [3 FAQ](#)
- [4 Models](#)
 - [4.1 Part 1](#)
- [5 Using Instructions](#)
 - [5.1 Part 2](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



DORMAN 99139 3 Button Keyless Entry Remote



Product Information

Specifications:

- **Model Number:** 99139
- **Compatible Applications:** Camry 2000-2001, Sienna 1999-2003, Solara 1999-2003, Corolla 2003-2008, Matrix 2003-2008, Pontiac Vibe 2003-2008
- **Usage:** Remote key programming

FAQ

- **Q: How long does the remote programming process take?**
 - **A:** The remote programming process typically takes around 5-10 minutes to complete successfully.
- **Q: What should I do if the door locks do not cycle during programming?**
 - **A:** If the door locks do not cycle as expected during programming, return to step 1 and ensure all conditions are met before proceeding with the steps again.

Models

Part 1

99139

- **Camry** 2000-2001
- **Sienna** 1999-2003
- **Solara** 1999-2003
- **Camry** 2002-2006
- **Corolla** 2003-2008
- **Matrix** 2003-2008
- **Pontiac Vibe** 2003-2008

Using Instructions

Use this procedure for the following applications

1. Start with the key out of the ignition, the driver's door is open all others closed and the driver's door is unlocked.
2. Perform these steps within 5 seconds.
 - **A.** Insert the key into the ignition (Do NOT Turn) Pull the key out.
 - **B.** Insert the key into the ignition (Do NOT Turn) Pull the key out.
3. Perform these steps within 40 seconds.
 - **A.** Close then open the driver's door.
 - **B.** Close then open the driver's door.
 - **C.** Insert the key into the ignition (Do NOT Turn). Pull key out.
4. Perform these steps within 40 seconds.
 - **A.** Close then open the driver's door.
 - **B.** Close then open the driver's door.
 - **C.** Insert the key into the ignition and leave it in ignition.

- **D.** Close the driver's door.
 - **E.** Turn the ignition to ON (Do NOT Start) then back to OFF.
 - **F.** Remove the key from the ignition.
5. Within 3 seconds, the power door locks should lock then unlock automatically indicating successful entry into programming mode. Return to step 1 if the locks do not cycle at this point.
 6. Perform these steps within 40 seconds.
 - **A.** Press the lock and unlock buttons on the remote simultaneously for 1.5 seconds.
 - **B.** Immediately after letting go of the lock and unlock buttons, Press the lock button by itself and hold for 2 seconds. Within 3 seconds, the door locks should lock and then unlock once indicating successful programming. If the door locks cycle twice, repeat steps A and B in step 6 as the remote was not accepted.
 - **C.** Repeat steps A and B in step 6 for each new remote.
 7. Open the driver's door.

Part 2

Models

- **Camry** 2002-2006
- **Corolla** 2003-2008
- **Matrix** 2003-2008
- **Pontiac Vibe** 2003-2008

Using Instructions

Use this procedure for the following applications:

1. Start with the key out of the ignition, driver's door is open all others closed and driver's door is unlocked.
2. Perform these steps within 5 seconds.
 - Insert the key into the ignition (Do NOT Turn) Pull key out.
 - Insert the key into the ignition (Do NOT Turn) Pull key out.
3. Perform these steps within 40 seconds.
 - Close then open the driver's door.
 - Close then open the driver's door.
 - Insert the key into the ignition (Do NOT Turn). Pull key out.
4. Perform these steps within 40 seconds.
 - Close then open the driver's door.
 - Close then open the driver's door.
 - Insert the key into ignition and leave it in ignition.
 - Close the driver's door.
 - Turn the ignition to ON (Do NOT Start) then back to OFF.
 - Remove the key from the ignition.
5. Within 3 seconds, the power door locks should lock then unlock automatically indicating successful entry into programming mode. Return to step 1 if the locks do not cycle at this point.

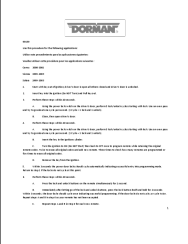
6. Perform these steps within 40 seconds.

- Press the lock and unlock buttons on the remote simultaneously for 1.5 seconds.
- Immediately after letting go of the lock and unlock buttons, Press the lock button by itself and hold for 2 seconds.
 - Within 3 seconds, the door locks should lock and then unlock once indicating successful programming. If the door locks cycle twice, repeat steps A and B in step 6 as the remote was not accepted.

7. Repeat steps A and B in step 6 for each new remote.

8. Open driver's door.

Documents / Resources

	<p>DORMAN 99139 3 Button Keyless Entry Remote [pdf] Instructions 99139 3 Button Keyless Entry Remote, 99139, 3 Button Keyless Entry Remote, Keyless Entry Remote, Entry Remote, Remote</p>
---	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.