

DOSATRON D25F-11GPM Maintenance Kit Instructions

Home » DOSATRON » DOSATRON D25F-11GPM Maintenance Kit Instructions

DOSATRON D25F-11GPM Maintenance Kit



Contents

- 1 This kit contains:
- 2 MKD25F Instructions
 - 2.1 Part 1 Seal Kit
 - 2.2 D25F Injection Stem Legend
 - 2.3 Part 2 Piston Kit
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

This kit contains:


(1) J009	Plunger Seal
(1) J024	Injection Sleeve O-ring
(1) J051	Check Valve Seal
(2) M238	Actuator Springs
(1) P421	Piston Shell
(1) MPDI122	Check Valve Assembly

MKD25F Instructions

Part 1 - Seal Kit


(Parts included in kit noted in blue)

- 1. Remove the 4 screws at base of unit and pull dosing stem down to remove.
- 2. Remove old Plunger Seal (J009) and replace.
- 3. Unscrew check valve barb to remove Check Valve Assembly (MPDI122) and Check Valve Seal (J051).
- 4. Replace injection sleeve o-ring (J024).
- 5. Insert Check Valve Assembly (MPDI122) and Check Valve Seal (J051), and screw on the check valve barb.
- 6. Replace the injection stem into lower housing and attach the 4 screws to the base of the lower housing.

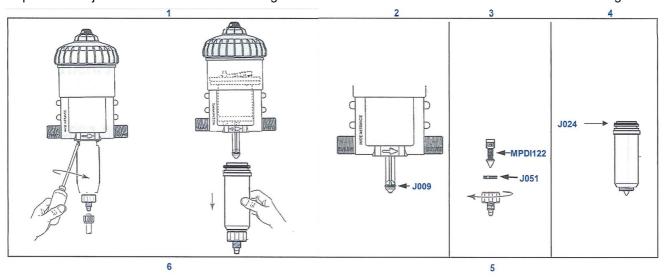

D25F Injection Stem Legend


For Technical Support call 1-800-523-8499 or 1-727-443-5404

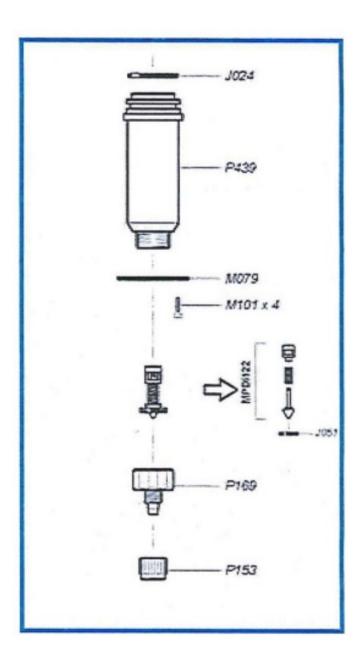

Part 2 - Piston Kit

(Parts included in kit noted in blue)

- 1. Remove the top lid.
- 2. Lift piston from unit.
- 3. Remove screw from wishbone assembly (at the top of the piston) and slide actuator valve out from the wishbone.
- 4. Remove the 4 screws from the middle of the shell. The mechanism will drop out.
- 5. Remove the Actuator Springs (M238) and replace.
- Replace the mechanism into the new Piston Shell (P421).Make sure to tighten the screws holding the mechanism properly

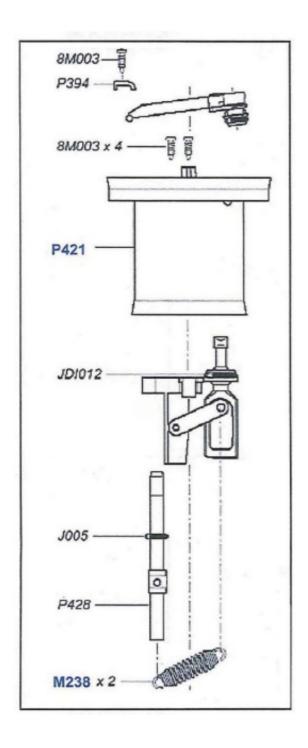



Documents / Resources



DOSATRON D25F-11GPM Maintenance Kit [pdf] Instructions D25F-11GPM Maintenance Kit, D25F-11GPM, Maintenance Kit, Kit

References

Manuals+,