



Dosmix HM11 Retro Bluetooth Speaker Instruction Manual

[Home](#) » [Dosmix](#) » Dosmix HM11 Retro Bluetooth Speaker Instruction Manual 

Dosmix

HM11
POETABLE WIPELESS SPEAKER
Instruction Manual

Thanks for choosing our product. We hope you will enjoy music.

Contents

- [1 SECURITY GUIDANCE](#)
- [2 PACKAGING ACCESSORIES](#)
- [3 BUILT-IN BATTERY](#)
- [4 CHARGING ADAPTATION](#)
- [5 CHARGING FUNCTION](#)
- [6 PAIRING CONNECTION](#)
- [7 OPERATION FUNCTION](#)
- [8 TROUBLESHOOTING](#)
- [9 SPECIFICATIONS](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

SECURITY GUIDANCE

BEFORE USING THE SPEAKER, PLEASE READ OUR SPECS CLEARLY AND KEEP IT FOR FUTURE REFERENCE

1. Stay away from heat, sharp items and direct sunlight.
2. The product has a built-in lithium battery, which can't be replaced. Don't throw it away or put it in fire to avoid danger.

3. Do not insert any metal objects, avoid short circuit.
4. Don't repair the product by yourself, please contact the authorized manufacturer to repair it.
5. Avoid rain, spray and other liquids.
6. If the product is overheated, damaged or falling into the liquid, stop using it.
7. Use the product according to local standards and regulations. '

PACKAGING ACCESSORIES

1. HMIL SPEAKER.....x1
2. MICRO-USB CHARGING CABLE.....x1
3. AUX AUDIO CABLE.....x1
4. PRODUCT MANUAL:.....x1

BUILT-IN BATTERY

1. Built-in rechargeable battery, it takes 2-3 hours to complete the charge and discharge cycle for the first time.
2. Don't continue to charge a fully when charged battery, as overcharging will shorten the battery life.
3. If it is unused, the fully-loaded battery may be slightly lost.
4. The speaker is placed in a place that is too hot or too cold, which will shorten the life of it.

CHARGING ADAPTATION


1. Please use a standard DC 5V= 1A charger to charge.
2. Do not use other types of chargers, otherwise the product may be damaged.
3. Please refer to the status of the charging indicator to determine whether it is charging normally.
4. Please avoid using it while charging as much as possible.

CHARGING FUNCTION

1. Insert the MICRO-USB charging cable, and plug the other end of the charging cable into the DC5V= 1A charger.
2. The LED charging indicator of the product is always on red, that is speaker is charging normally.
3. When the product is fully charged, the red LED indicator is off.

PAIRING CONNECTION

1. After the speaker is fully charged and in shutdown mode, press the power-on button for 3s to turn on. The speaker will sound a "BT Mode" prompt tone, that is will enter BT pairing mode.
2. The mobile phone or other device turns on the BT function and search for "HM11" to select and complete the pairing. After the pairing connection is successful, a "BT Connect" prompt tone is issued.
3. After the speaker is turned on, if the speaker has been paired to connect to the mobile phone or other device, the speaker will be automatically connected back within the connection range.
4. During the pairing process of "HM11", if you need to pass the password, you can enter the initial pass word "0000" to pair the connection normally.

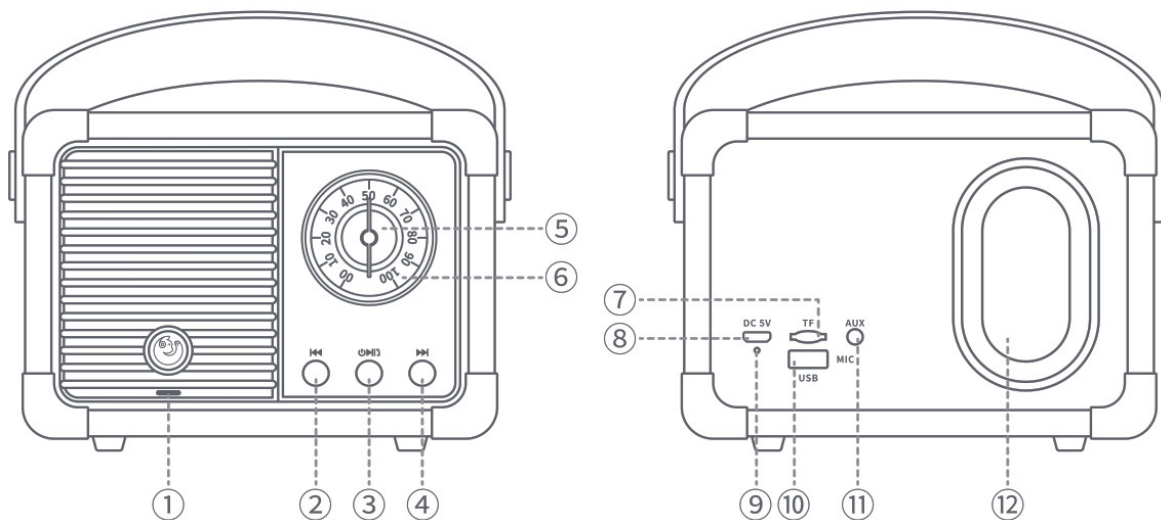

OPERATION FUNCTION

1. LED indicator 2. Previous song 3. Play/pause/turn on/off/hands-free 4. Next song 5. Volume knob 6. Volume scale	7. TF card jack 8. MICRO-USB charging port 9. LED charging indicator 10. USB jack 11. AUX jack 12. Passive diaphragm
---	---

1. Button ① When it power on will flashes and enters BT pairing mode.
2. When you playing music, press the button ② for the previous song.
3. Long press button ③ for 3s to turn on, the "BT Mode" prompt sound. When you playing music, click the button ③ to play / pause the music. When you have an incoming call, click the button ③ to make a hands-free call.
4. When you playing music, press the button ④ for the next song.
5. Rotate the button ⑤ to the left to decrease the volume, another right to increase the volume.
6. Button ⑥ shows the level of the volume.
7. Button ⑦ In the power-on state, when the TF card is inserted will be played automatically.
8. Button ⑧ can be charge to speaker through the MICRO-USB charging cable.
9. Button ⑨ can be know whether the charging state is normal.
10. Button ⑩ In the power on, when the USB flash drive is inserted will be played automatically.
11. Button 11 In the power on, insert the audio cable will automatically enter the AUX mode.
12. Button 12 mean make the bass more powerful.

TROUBLESHOOTING


Failure phenomenon	Possible reason	Solution
Unable to search for BT	The battery is out of power and shut down	Charging the speaker
Can't pair with BT	The speaker is already paired with another device The device does not enter pairing mode	Turn off other paired devices Search again then pair

SPECIFICATIONS

Pair name	HM11
BT	5.0
Receiving range	≥ 10m
Speaker	40mm 40 3W
Battery	3.7V 400 mAh
Charging voltage	DC 5V $\overline{\text{=}}$ 1A
Charging time	2 ~ 3h
Play time	3 ~ 4h
Material	ABS
Size	64 x 103 x 71mm



Documents / Resources

	<p>Dosmix HM11 Retro Bluetooth Speaker [pdf] Instruction Manual HM11 Retro Bluetooth Speaker, HM11, Retro Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	--

References

- [User Manual](#)