



## Dosound Electronics DS-168BT Turntable/Cassette Player With USB/SD and Radio Instruction Manual

[Home](#) » [Dosound Electronics](#) » Dosound Electronics DS-168BT Turntable/Cassette Player With USB/SD and Radio Instruction Manual 

### Contents

 
- [1 Dosound Electronics DS-168BT Turntable/Cassette Player With USB/SD and Radio](#)
- [2 Parts List](#)
- [3 Listen to a Record](#)
- [4 Listen to CD](#)
- [5 Listen to the Radio](#)
- [6 Listen to USB SD tracks](#)
- [7 Listen to Bluetooth](#)
- [8 Listen to Tape](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

*Dosound*

**Dosound Electronics DS-168BT Turntable/Cassette Player With USB/SD and Radio**




## Parts List

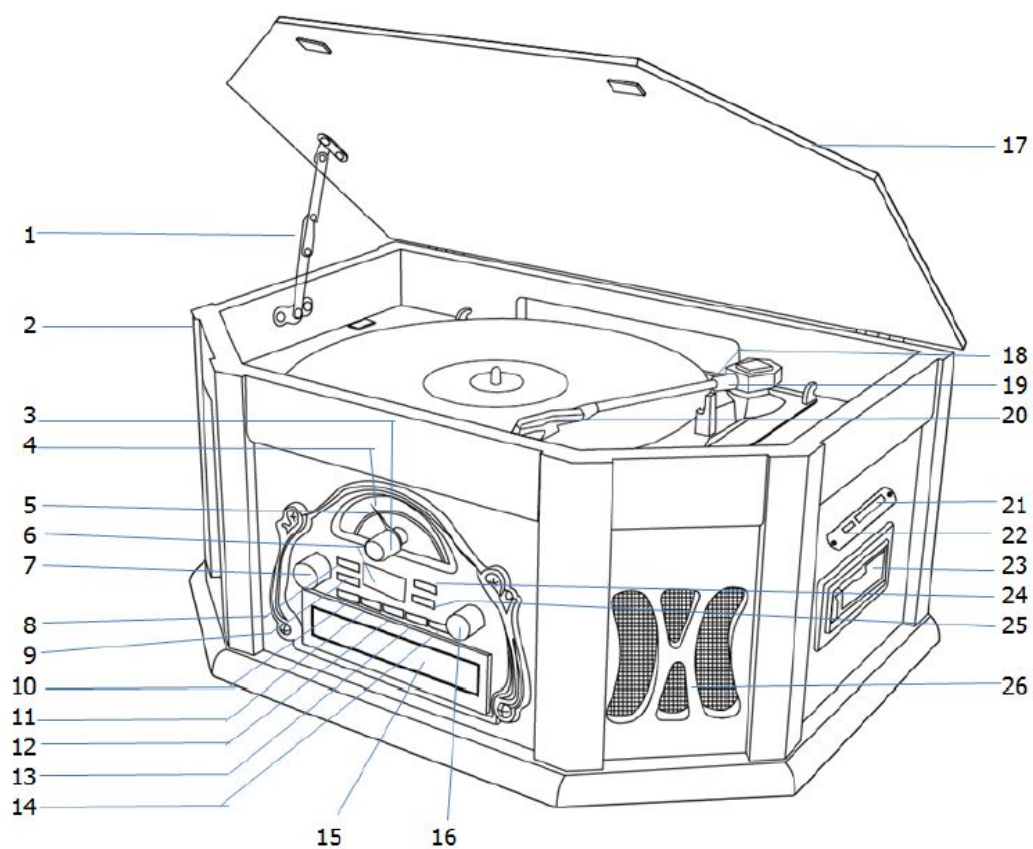

1. Concealed hinge
2. Wooden main body
3. Tuning knob of radio
4. Tuning pointer
5. frequency dial
6. LED indicator


7. Function selector(Mode AM/FM/PO/CD/TAPE)
8. Mode button
9. PROG button
10. PLAY / PAUSE button
11. STOP button
12. DOWN / REV button
13. UP / Forward button
14. OP/CL button, CD tray OPEN/Closebutton
15. CD disc tray
16. Power on/off, volume control
17. Dust cover
18. 45 rpm adaptor
19. tone arm
20. acoustical pickup
21. SD SLOT
22. USB SLOT
23. Cassette player
24. Repeat button
25. RADOM button
26. speakers

### Listen to a Record

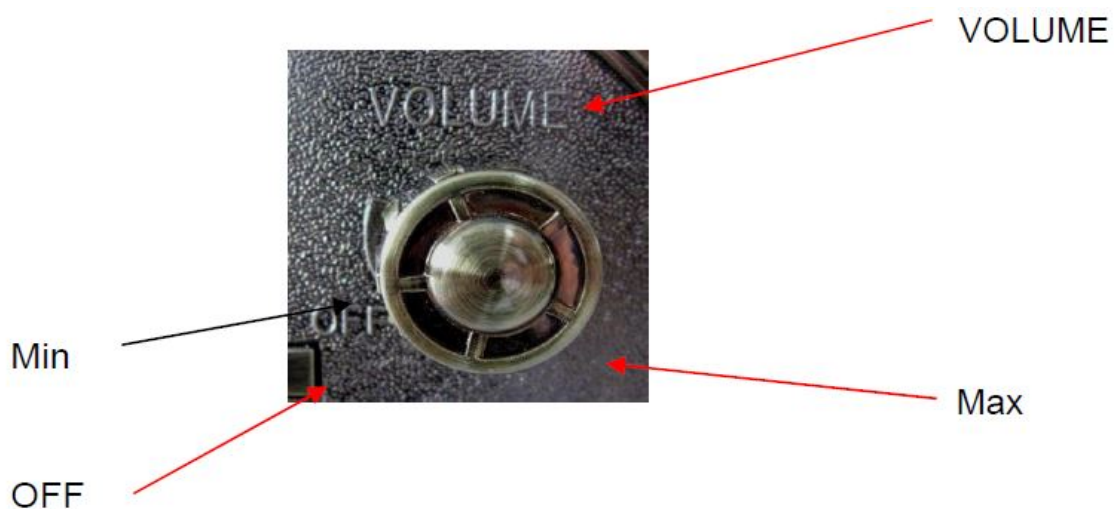 


1. Open the dust cover and turn the volume knob clockwise to turn the equipment on.
2. Use the function selector to select PHONO mode.
3. Open the dust cover and adjust the Concealed hinge
4. Put there cordon the turntable. When playing a 45RPM record, use the included adaptor.
5. Gently push the clamper to the right to release the tonearm
6. Raise the cue lever to lift the tonearm off the tonearm support
7. Select the speed 33 45 78
8. Move the tonearm gently to the edge of the record (or the starting point of a track)
9. Adjust the volume knob to your desired volume level.

## Listen to CD

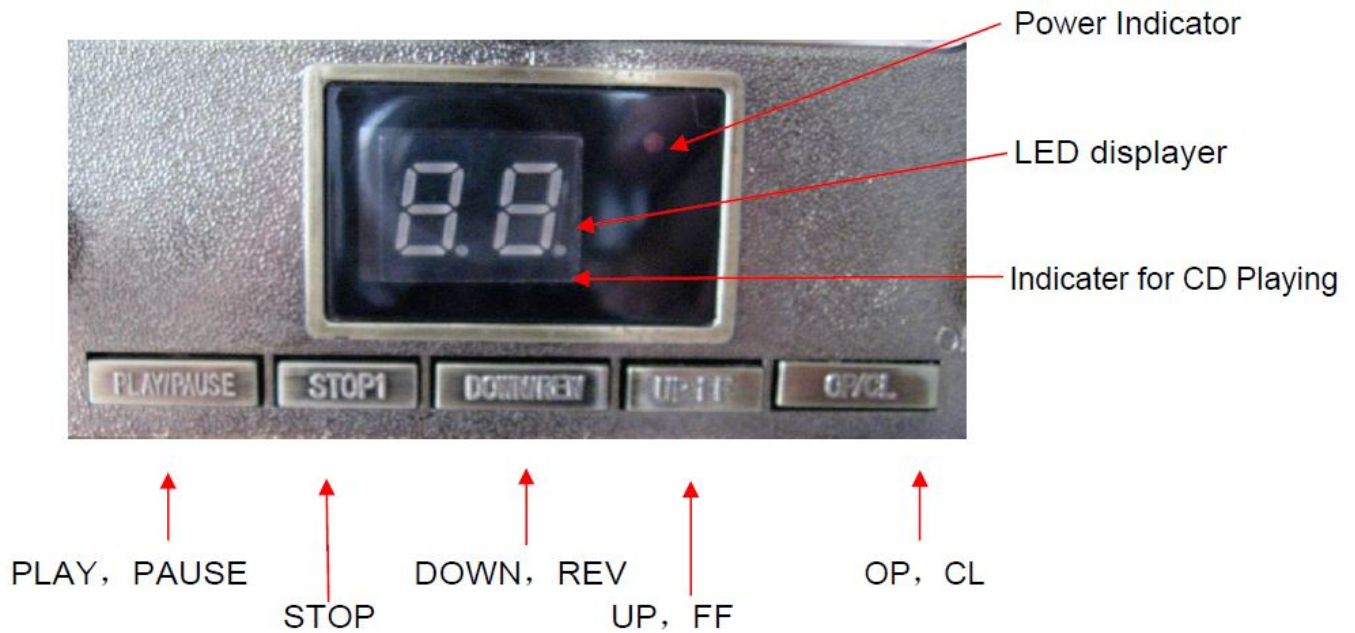 

1. Open the dust cover and turn the volume knob clockwise to turn the equipment on.
2. Use the function selector to select CD mode.
3. Press the OPEN/CLOSE button or press OP/CL on the remote control
4. Place a disc on the tray
5. Press the OPEN/CLOSE button to close the tray
6. It takes a few seconds for the unit to load the disc. No buttons will work during loading.  
Wait until the total number of the tracks and the total play time of the disc are displayed.
7. Press the "play" button to play the CD DISC
8. To skip to the next track with the UP/FF button
9. To skip to the previous track with the Down/REV button
10. Press "STOP" to stop playing CD disc
11. Adjust the volume knob to your desired volume level.

## Listen to the Radio

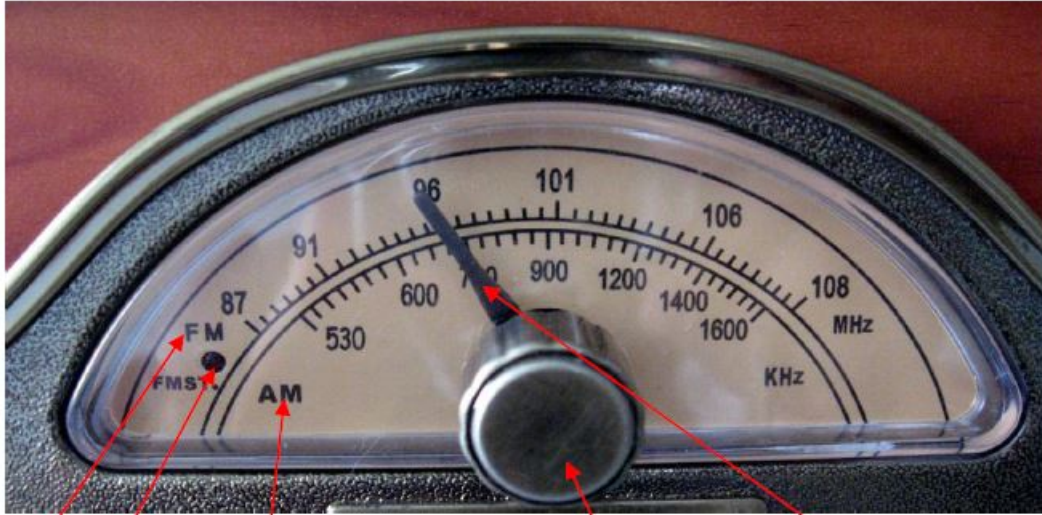 

FM Frequency  
FMSTEREOLED

AM Frequency

Tuning knob

Frequency pointer

### 1. Listen to FM

1. Turn the volume knob in a clockwise direction to turn the equipment on.
2. Use the function selector to select FM mode
3. Tune to the desired frequency. turning slowly will be better for searching the channel.
4. Once a stereo signal is received, the ST icon will light up on the display.
5. the receiver has a built-in AM bar antenna.  
If reception is weak, slightly rotate or reposition the unit to improve AM reception.
6. Adjust the volume knob to your desired volume level.

### 2. Listen to AM

1. Turn the volume knob in a clockwise direction to turn the equipment on.
2. Use the function selector to select AM mode
3. Tune to the desired frequency. turning slowly will be better for searching the channel.
4. AM reception: the receiver has a built-in AM bar antenna.  
If reception is weak, slightly rotate or reposition the unit to improve AM reception.
5. Leave player away from electromagnetic interference

## Listen to USB SD tracks

1. Turn the volume knob in a clockwise direction to turn the equipment on.
2. Turn the Function knob in a clockwise direction to CD mode
3. Use the Mode button to select USB or SD mode
4. Insert the USB/SD card into the correct slot.
5. Wait for 6~10s, once the machine reads the Total tracks, will auto-play the tracks.

## Listen to Bluetooth

 


1. Turn the volume knob in a clockwise direction to turn the equipment on.
2. Turn the Function knob in a clockwise direction to CD mode
3. Use the Mode button to select Bluetooth mode
4. "BT" will be displayed on the LCD screen
5. Turn on your Bluetooth device and scan, "Boytone" will be found on your Bluetooth device. Paired and connect the unit and your bluetooth device.
6. Play your Bluetooth device as normally do, and the music will be played from the turntable.

**NOTE:**

- Make sure your Bluetooth device and the unit is within 10 meters.
- Check and see if there are other Bluetooth devices nearby interfering the signal and connection.

**Listen to Tape**

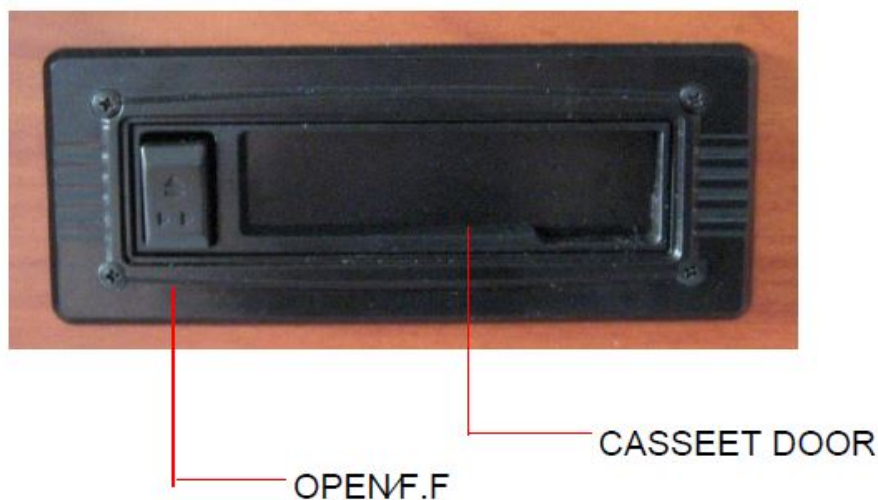


1. Turn the volume knob in a clockwise direction to turn the equipment on.
2. Use the function selector to select PO mode.  
Attention: the Phone/turntable player should be at stop status.
3. Insert a cassette with the tape facing away from you, as illustrated on the right. The EJECT/FAST FORWARD button will pop out and the system will start playing the tape automatically.
4. To fast forward the cassette tape, press the eject/FAST FORWARD button halfway down while the cassette is playing. The tape will be advanced forward rapidly.
5. To resume normal playback, slightly press the EJECT/FAST FORWARD, The button will fully pop out again.
6. Adjust the volume knob to your desired volume level.

**Main technical details**

1. **Unit Dimension:** 50 L x 34 W x 25 H cm
2. **Gross Weight** 9.6 KG
3. **Voltage** 120V 50/60 HZ
4. **Consumed power** 25W (Max)
5. **Output power** 2x2.5W RMS

Documents / Resources

<div><div><div>Turntable/Cassette Player With USB SD and Radio</div><div></div><div>Model DS-168BT Operating Instructions Manual</div></div></div>	<p><a href="#">Dosound Electronics DS-168BT Turntable/Cassette Player With USB/SD and Radio</a> [pdf]   nstruction Manual</p> <p>DS-168, DS168, 2A45K-DS-168, 2A45KDS168, DS-168BT Turntable layer With USB and Radio, DS-168BT Turntable Player With USB SD and Radio, DS-168BT Cassette Player With USB and Radio, DS-168BT Cassette Player With USB SD and Radio</p>
---	---