

[Skip to content](#)

Manuals+

User Manuals Simplified.



DOSS SoundBox DS1681 [Wonders Technology Bluetooth Speaker] User Guide

[Home](#) » [Doss](#) » **DOSS SoundBox DS1681 [Wonders Technology Bluetooth Speaker] User Guide**




1. Intro

Thank you for purchasing the DOSS SoundBox Wireless Portable Bluetooth Speaker with Bluetooth and Hands free function. We encourage you to read this instruction guide thoroughly to get the most out of this innovative wireless portable speaker.

2. Package content

- One wireless portable speaker
- USB charging cable
- Φ 3.5mm auxiliary cable
- Travel waterproof pouch
- User manual, Warranty card, Contact card

3. Product Overview

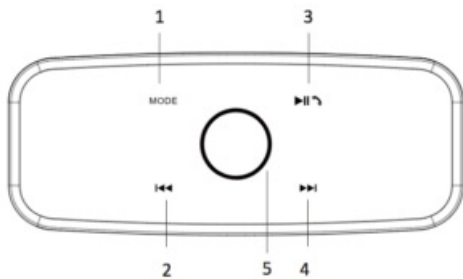


1. Mode switch:

Touch **MODE** to toggle play mode among Bluetooth, TF Card and Aux-in connection.

2. In Bluetooth mode/TF mode, touch to |<< skip backward.

3. **Play/Pause and handset button**

- In Bluetooth mode, touch to answer or end a call. Touch for 3 seconds to reject a call.
 - In Bluetooth mode, touch to play/pause your tune. Touch for 3 seconds to disconnect with your device.
 - In TF mode, touch to play/pause your tune.
4. In Bluetooth mode/TF mode, touch to >>| skip forward.
5. Volume control:
- Clockwise rotation to increase the volume.
 - Counterclockwise rotation to decrease the volume.

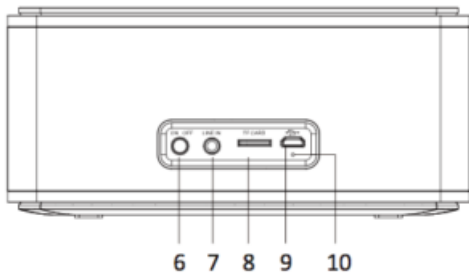

6. Power button:

Long press to turn the device on and off.

7. Auxiliary $\Phi 3.5\text{mm}$ jack: Use it for cabled playback with compatible devices.

8. TF card:

Use it for TF card (with music) playback.

9. Charging port:

Plug the supplied USB cable into this port to recharge the built-in battery.

10. LED charging indicator.

- Charging: Steady Red.
- Fully charged: Steady Green

Status Indicator Lights

Center indicator/ Control button	Flashing blue	Indicates that the speaker has entered into the pairing mode and it is ready to be the first time
	Steady blue	Indicates that the device is successfully paired
	Steady red	Indicates that the device has switched to the auxiliary input mode
	Steady Green	Indicates that the device has switched to the TF mode
Battery status indicator	Steady red	Battery is charging
	Steady green	Battery is fully charged

Related Manuals:

1. [DOSS ICON True Wireless Earbuds User Manual](#) DOSS True Wireless Earbuds Device ID : FreePods Model No.:...
2. [INSIGNIA NS-SB314 Soundbar Home Theater Speaker System with Bluetooth User](#)

- Guide** INSIGNIA NS-SB314 Soundbar Home Theater Speaker System with Bluetooth User...
3. **NUTRI NINJA BL580 With Freshvac Technology Owner's Guide** THANK YOU FOR PURCHASING The Nutri Ninja® with FreshVac™ Technology...
 4. **INSIGNIA NS-SPBTBRICK Bluetooth Stereo Speaker with Powerbank Quick Setup Guide** Quick Setup Guide INSIGNIA NS-SPBTBRICK Bluetooth Stereo Speaker with Powerbank...
 5. **INSIGNIA NS-SB314 Soundbar Home Theater Speaker System with Bluetooth Quick Setup Guide** Quick Setup Guide INSIGNIA NS-SB314 Soundbar Home Theater Speaker System...
 6. **Anko Bluetooth Speaker with Ambient Light and Wireless Speaker User Manual** Bluetooth speaker Ambient light and wireless charge Instruction Manual Please...