



DOSS FreeTalk Bluetooth Conference Speakerphone User Manual

[Home](#) » [Doss](#) » DOSS FreeTalk Bluetooth Conference Speakerphone User Manual 

Contents

- [1 DOSS FreeTalk Bluetooth Conference Speakerphone](#)
- [2 Introduction](#)
- [3 Packing content](#)
- [4 Specifications](#)
- [5 Installation](#)
- [6 button and controls](#)
- [7 Indicators](#)
- [8 Preparation](#)
- [9 Operations](#)
- [10 Troubleshooting](#)
- [11 FCC Statement](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)



DOSS FreeTalk Bluetooth Conference Speakerphone



Introduction

Thanks for purchasing the DOSS FreeTalk, the Bluetooth Speakerphone. We advise you to read, and follow and keep the following Instructions to be able to correctly set up the speakerphone and enjoy all of its features to the fullest.


Packing content

- 1x DOSS Bluetooth Speakerphone
- 1x Micro USB-C Charging Cable
- 1x Travel Bag
- 1x User Manual



Specifications

- Input: DC 5V=2A 1 9V=2A
- Battery: Li-ion 3.7V 1500mAh
- Charging time: 3 hours
- TalkTime: 8 hours
- Unit dimension: 5.8 x 5.6 x 1.3 inches
- Bluetooth version: V5.0
- Operating distance: ≤10M, 33ft
- Warranty: One-year limited

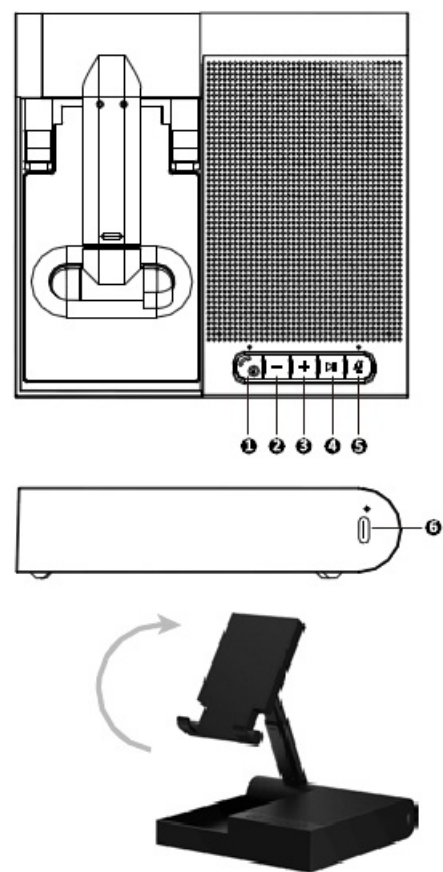


Installation



button and controls

NO.	Buttons	You want to	How to
1		Turn on/off Reject a call Answer/ end a call	Press and hold for 3 seconds Press and hold for 2 seconds Press
2		Volume down Go to previous track	Press Press and hold
3		Volume up Skip to next trap	Press Press and hold
4		Play/Pause Disconnect Reconnect	Press Press and hold for 3 seconds Press twice
5		Mic on/off	Press
6		Charge the speakerphone	Insert the charging cable

Indicators

Indicator view	Indicator state	System state
	Flashing blue Solid blue off	Bluetooth pairing Bluetooth mode/USB-C mode Power off
	Solid red off	Mic off Mic on
	Solid red off	Charging Fully charged

Preparation

Use the supplied USB-C cable to charge your speakerphone directly from the cel phone adapter (please make sure its output is 5V=2A). Make sure th at the speakerphone is fully charged before using it for the frst time The charging indicator will remain RED when charging and be OFF once fully charged

Note:

- If the speaker beeps every few seconds, please recharge it for 3 hours
- The speaker has a buit-in battery saver mode where it will automatically power off if not connect with your device for 10 minutes

Operations

Pair your speakerphone with your smart device or computer via Bluetooth

Power on your speakerphone, and then turn on Bluetooth on your device to choose DOSS FreeTalk in the list. if the pairing succeeds, the Bluetooth indicator light will go solid blue with a clear prompt tone

Note:


- The speaker will auto turn off after 10 minutes without ay device connection.
- If your smart device cannot discover the DOSS Free Talk, please long press the play/pause button and try to pair again.

Having problems connecting?

1. Make sure that your device and computer are within 1 meter from the speakerphone.
2. Clear the Bluetooth pairing list on your device.
3. Restart your speakerphone.
4. Try the pairing steps above again.
5. Problem still not solved? Contact DOSS customer service at support@dossav.com for assistance.

Pair your computer with the speakerphone via using a USB-C cable

Turning on the speakerphone, and then please connect the computer and speakerphone via using a USB-C cable.

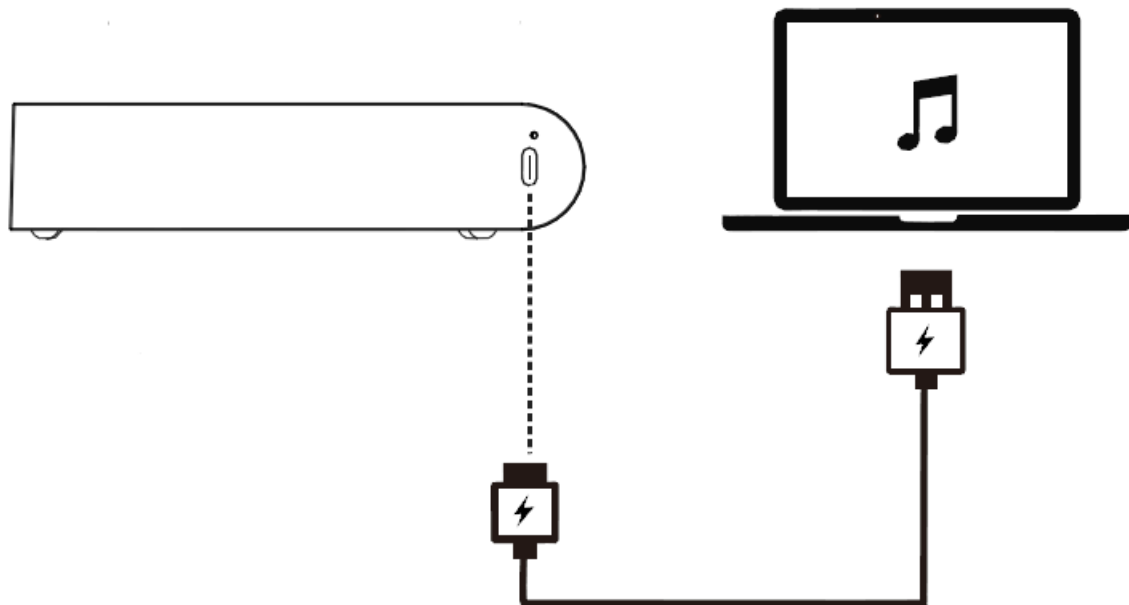

Wireless charging of mobile phone by speakerphone

When the speakerphone is using the charger to take charge, your mobile phone will be wireless charged by placing it on the phone holder.

Note: If your speakerphone is not charging, the mobile phone can't be wireless charged when placing it on the phone holder.

Troubleshooting

Symptom	Solutions
No power (battery)/ Low battery prompt tone	<ul style="list-style-type: none">• The battery may be in protection mode or drained. Plug in and charge the speaker for 3 hours.
The battery does not charge	<ul style="list-style-type: none">• Turn off and charge speakerphone for 3 hours by using original USB cable and 5V 2A charger.• Try to use a different USB cable and DC plug.
The poor sound quality/buzzing sound when using	<ul style="list-style-type: none">• Make sure to use the microphone within 1 meter.• Make sure the distance of speakerphone and device within 1 meter.• Check the Network or Call status of your device.• Charge your speakerphone until fully charged.
Speakerphone can't pair/disconnect	<ul style="list-style-type: none">• On your mobile device, turn the Bluetooth feature off and on. Remove your speaker from the Bluetooth list on your device. Pair your device again.• Pair with another Bluetooth device.• Clear your phone pairing list and restart speakerphone. Pair your device again.• Charge your speakerphone until fully charged.• Make sure the distance of speakerphone and device within 1 meter.
No sound/Low volume	<ul style="list-style-type: none">• Volume up your speakerphone and device.• Make sure the distance of speakerphone and device within 1 meter.• Try connecting to a different device.• Charge your speakerphone until fully charged.
No sound/Low volume when in USB-C mode	<ul style="list-style-type: none">• Check the sockets of the speakerphone and computer to ensure the USB cable is plugged in well.• Make sure the audio settings of the computer is DOSS FreeTalk.• Charge your speakerphone until fully charged.

Warning

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the speaker.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods.
- Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on top of the speaker
- Do NOT use the speaker near a microwave oven or wireless LAN products.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part

15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

DOSS

For updates, promotions, and experience sharing, join our customer community Lf @dossav @dosstans @dossdirect www.dossaudio.com support@dossav.com 1-833-275-3677 Mon-Fri 9AM-5PM PST (USA)

Documents / Resources

	DOSS FreeTalk Bluetooth Conference Speakerphone [pdf] User Manual WB326, WC2-WB326, WC2WB326, FreeTalk Bluetooth Conference Speakerphone, DOSS Fre eTalk, Bluetooth Conference Speakerphone, WB326
---	--