

DOUK AUDIO 168 Plus Bluetooth Power Amplifier Instructions

Home » Douk Audio » DOUK AUDIO 168 Plus Bluetooth Power Amplifier Instructions 🖫



Contents

- 1 DOUK AUDIO 168 Plus Bluetooth Power **Amplifier**
- **2 Product Usage Instructions**
- 3 How to use
- **4 Parameters**
- **5 Packing List**
- **6 Contact information**
- 7 Documents / Resources
 - 7.1 References

DOUK AUDIO

DOUK AUDIO 168 Plus Bluetooth Power Amplifier



Specifications

- Model: Lepy 168 Plus Amplifier
- · Power Adapter: Included
- · Power Supply Cable: Included
- User Manual: Included
- Remote Control: Yes (battery not included, requires CR2032)

Product Usage Instructions

Setting up the Amplifier

- 1. Unbox the product and ensure that all the items mentioned in the packing list are present.
- 2. Connect the power supply cable to the amplifier.
- 3. Plug the power adapter into a power outlet and connect it to the amplifier.
- 4. The amplifier is now ready to be used.

Bluetooth Pairing

- 1. Ensure that your Bluetooth-enabled device (e.g., smartphone, tablet) is turned on and in pairing mode.
- 2. Press the Bluetooth button on the amplifier to activate Bluetooth mode.
- 3. On your device, search for Bluetooth devices and select "Lepy 168 Plus" from the list.
- 4. The amplifier will pair with your device, and a confirmation message will be displayed.

Using the Remote Control

The remote control allows you to conveniently control the amplifier's functions. To use the remote control:

- 1. Insert a CR2032 battery into the remote control (not included).
- 2. Ensure that the amplifier is powered on.
- 3. Point the remote control towards the amplifier and press the desired buttons to adjust volume, change tracks, etc.

Frequently Asked Questions (FAQ)

Q: Does the remote control come with a battery?

A: No, the remote control does not come with a battery. You will need to purchase a CR2032 battery separately.

Q: How do I contact customer support?

A: For any inquiries or assistance, you can contact our customer support representative:

Address: Room 1329, Wang Cheng Building, Long Guan street, Long Hua new District, Shenzhen, Guang Dong, China

Contact: LIU CHENXI

Tel: +86-177-0402-8602

Email: nobsound@doukaudio.com

Warm Tips

For safer and faster shipping, the remote control without battery (CR2032).

How to use

- 1. Connect speakers to the output. (With sub speaker jacks to build 2.1 channel system.)
- 2. Wired input: Connect the audio device to the RCA or 3.5mm AUX input. Or insert U-disk to the USB port. Wireless input: Turn on Bluetooth on your phone, search and click to connect.
- 3. Then select the input mode and connect power adapter and then plug the power cable into the socket, and then power on the amplifier.
- 4. Adjust the main volume, sub volume, treble, bass and frequency according to your listening preference.
- 5. After use, please disconnect the power adapter.

Parameters

- Audio input: Bluetooth/USB/Stereo RCA/3.5mm AUX
- Audio output: Speaker jacks / Subwoofer
- Channels: 3 (2.1)
- Power supply:DC 19 24V ≥3A
 Speaker impedance: 4 8 ohm
- SNR: 80dB
- Total output power: 90W
- Main channel output power: 45W×2
- THD: 0.4%
- Frequency response: 20Hz 20KHz
- Remote control: supportPackage weight: 0.962kg
- **Dimensions**(W*D*H): 17.50*13.50*4.52 cm / 6.89*5.31*1.78 in
- Package dimensions(W*D*H): 27.50*18.00*6.50 cm /10.83*7.09*2.56in

Packing List

- 1*Lepy 168 Plus Amplifier
- 1*Power Adapter
- 1*Power Supply Cable
- 1*User Manual

Contact information

Address: Room 1329, Wang Cheng Building, Long Guan street, Long Hua new District, Shenzhen, Guang Dong,

China

Contact: LIU CHENXI **Tel:** +86-177-0402-8602

Email: nobsound@doukaudio.com

Documents / Resources



DOUK AUDIO 168 Plus Bluetooth Power Amplifier [pdf] Instructions

168 Plus Bluetooth Power Amplifier, 168, Plus Bluetooth Power Amplifier, Bluetooth Power Amplifier, Power Amplifier, Amplifier

References

• User Manual

Manuals+, Privacy Policy