



DOYOKY JC01 RETRO Game Controller User Guide

[Home](#) » [DOYOKY](#) » DOYOKY JC01 RETRO Game Controller User Guide 

Contents

- [1 DOYOKY JC01 RETRO Game Controller](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Layout](#)
- [6 Wired Pairing](#)
- [7 Wireless Pairing](#)
- [8 Mapping](#)
- [9 Turbo Function](#)
- [10 Vibration Adjustment](#)
- [11 Status](#)
- [12 For More Info](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)



DOYOKY JC01 RETRO Game Controller



Product Information

Specifications:

- **Model:** 8FMDPNF(VJEF
- **Buttons:** M button, Turbo button, R4 button, L4 button
- Charge lamp and charging port

Product Usage Instructions

Charging the Device:

1. Connect the charging cable to the charging port on the device.
2. Plug the other end of the charging cable into a power source.
3. The charge lamp will light up to indicate that the device is charging.
4. Once fully charged, the charge lamp will turn off.

Using the M button:

Press the M button to perform a specific function or activate a mode. Refer to the user manual for details on the functions and modes available.

Using the Turbo button:

Press and hold the Turbo button to activate the turbo mode. This mode provides increased speed or power for certain functions. Release the button to return to normal mode.

Using the R4 and L4 buttons:

The R4 and L4 buttons can be used for specific actions or assigned functions based on your preferences or the application you are using. Refer to the user manual for more information on how to customize these buttons.

FAQ

• How do I charge the device?

To charge the device, connect the charging cable to the charging port on the device and plug the other end into a power source. The charge lamp will indicate when the device is charging and turn off when fully charged.


- **What is the purpose of the M button?**

The M button is used to perform specific functions or activate different modes. Please refer to the user manual for more information on the available functions and modes.

- **How do I activate the turbo mode?**

To activate the turbo mode, press and hold the Turbo button. This mode provides increased speed or power for certain functions. Release the button to return to normal mode.

Layout

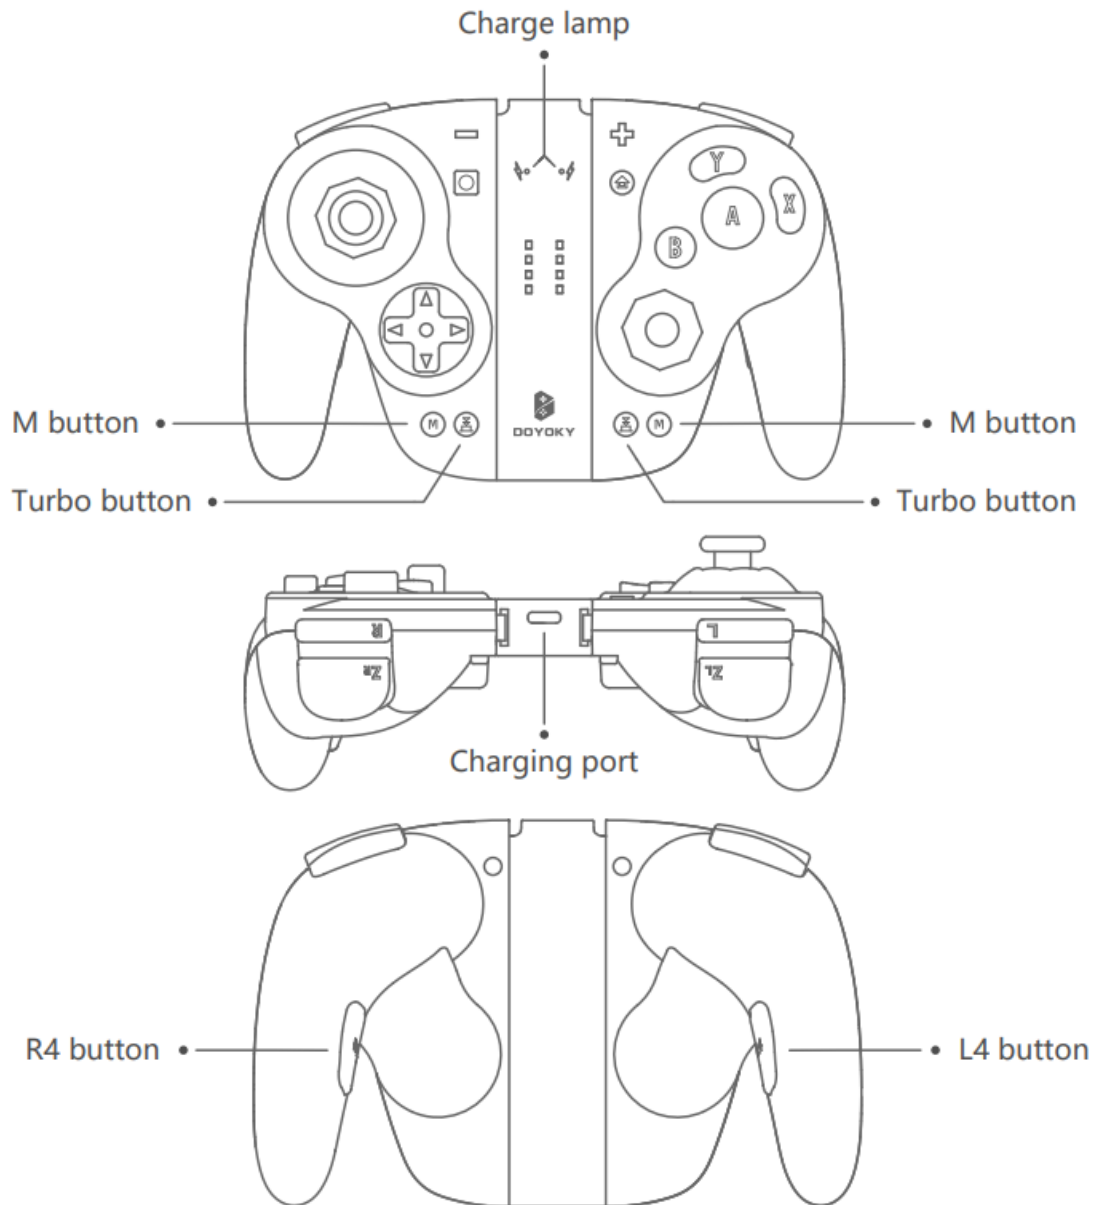

Wired Pairing



1. Please make sure that the Switch has turned on the wired connection mode.(Setting – Controllers and Sensors – Pro Controller Wired Communication).
2. Attaching the controllers to the Switch will connect them automatically.



Wireless Pairing

The Joy-Con controllers will remain paired when you detach them from the Switch, and you'll be able to use them wirelessly.

Reconnection

Press the  button or the button  to reconnect the Switch, 4 LED indicators on the side will start to flash in a regular pattern as an indication of reconnecting.

Mapping

Note: The M button on the left controller can only assign the buttons on the left controller. Same goes for the M button on the right controller.

Setting

- **L:** Hold down the M button and press the button you want to assign to the L4 button for left controller.
(Controller will vibrate.)
- **R:** Hold down the M button and press the button you want to assign to the R4 button for right controller.
(Controller will vibrate.)

*The above steps can directly change the button to be set.

Cancel

Hold the M button for 5 seconds to cancel the assign function of the controller. (Controller will vibrate.)

Buttons can be set

- **Left controller:** L / ZL / Left stick button and Control Pad (Up / Down / Left / Right).
- **Right controller:** R / ZR / Right stick button and A / B / X / Y button.

Turbo Function

Note: The Turbo button on the left controller can only set the buttons on the left controller. Same goes for the Turbo button on the right controller.

Setting

- Hold down the Turbo button and then press the button that you want to set for the 1st time to turn on the normal

turbo function. (Controller will vibrate.)

- Hold down the Turbo button and then press the button that you want to set for the 2nd time to turn on the automatic turbo function. (Controller will vibrate.)

Cancel

- Hold down the Turbo button and then press the button that you have set for the 3rd time to turn off its turbo function. (Controller will vibrate.)
- Hold the Turbo button for 5 seconds to cancel the Turbo function of all buttons. (Controller will vibrate.)


Buttons can be set

- **Left controller:** L / ZL / 3L button and Control Pad (Up / Down/ Left/ Right).
- **Right controller:** R / ZR / 3R button and A / B / X / Y button.

Vibration Adjustment

Press the Turbo button and move the Joy-stick left or right to adjust the vibration level of each controller. (Controller will vibrate.)

* There are 3 levels of Vibration 100% 50% 0%.

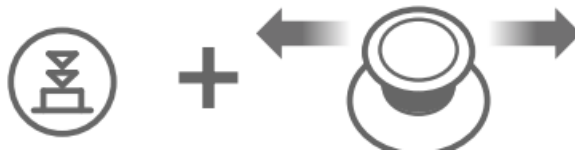

Status

- **Wake Up**

After the first successful connection, press the button to wake up the switch and reconnect (other buttons can not wake up).

- **Low Battery**

When the battery power is low, the LED1-LED4 indicator lights flash quickly at the same time.

- **Charge**

Charging The LED1-LED4 indicator lights slowly and Charge lamp will turn red. Full The LED1-LED4 indicator lights off and Charge lamp will turn green.

For More Info

For more info visit the links given below or scan QR code.

- **Website:** www.doyoky.com
- **Customer:** service@doyoky.com
- **Business:** contact@doyoky.com
- doyokygame
- DOYOKY Game



Join our community

Documents / Resources



[DOYOKY JC01 RETRO Game Controller](#) [pdf] User Guide
JC01 RETRO Game Controller, JC01, RETRO Game Controller, Game Controller

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.