



Dracal USB-I2C-SPS30 USB Adapter for SPS30 Particulate Matter Sensor User Manual

[Home](#) » [Dracal](#) » Dracal USB-I2C-SPS30 USB Adapter for SPS30 Particulate Matter Sensor User Manual 

Contents

- [1 Dracula USB-I2C-SPS30 USB Adapter for SPS30 Particulate Matter Sensor](#)
- [2 Specifications](#)
- [3 Product Overview and Specifications](#)
- [4 Product Overview](#)
- [5 Key specifications](#)
- [6 Installation and Setup](#)
- [7 Installation](#)
- [8 Disassembly Instructions](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



Dracula USB-I2C-SPS30 USB Adapter for SPS30 Particulate Matter Sensor



Specifications

- **Model Name** USB-I2C-SPS30
- **Part Number** 612001
- **Description** USB Adapter for SPS30 Particulate Matter Sensor
- **HS Code** 8471.60.10.50

Compliance Certification

EU Declaration of Conformity

This declaration of conformity is issued under the sole responsibility of the manufacturer:

Dracal Technologies Inc.

A204 – 7900 Taschereau Blvd
Brossard (Quebec)
J4X 1C2 Canada

for the following product(s)

- **Model** USB-I2C-SPS30
- **Type of Equipment** USB sensor
- **CE Marking** No
- **RoHS3 Compliance** No
- **REACH Compliance** No

Technical Documentation

Dracal Technologies holds the technical documentation required by the relevant directives at the following address compliance@dracal.com. It is available upon request to the relevant authorities.



Overview

- At Dracal Technologies, we want to democratize access to precision data to engineers and scientists to ease their lives so they achieve their goals more quickly. We believe that precision data should not be compromised by ease of use.
- Dracal's measuring instruments connect through a USB port. Units with the VCP option allow users to integrate sensor data without using a 3rd party software. The USB units are compatible with DracalView, the graphical software, and command-line interfaces.
- The calibratable units are equipped with a 3-point user-calibration mechanism that allows the handler to align multiple instruments together precisely or to adjust the accuracy of an instrument with a more precise reference.
- The Sensirion SPS30 is a particulate matter sensor. What is easier to gather data from it than an adapter with a USB plug and free DAQ software? The USB-I2C-SPS30 is the answer.

Product Overview and Specifications

Product Overview

The USB-I2C-SPS30 is a ready-to-use I2C to USB converter designed for use with the Sensirion SPS30 Particulate Matter Sensor. It enables connection to a PC with an available USB port. The SPS30 sensor is powered directly by the USB converter. Our downloadable software automatically identifies the SPS30, enabling real-time data acquisition of all sensor channels. The USB-I2C SPS30 features a USB communication interface for the PC and an I2C communication interface for the sensor, with an I2C speed of 400 kHz. It supports a maximum sampling speed of 10 samples per second.

Key specifications

SPS30 (Sensirion)		
Mass concentration size range	PM 1.0	0.3 µm to 1.0 µM
	PM 2.5	0.3 µm to 2.5 µM
	PM 3.0	0.3 µm to 3.0 µM
	PM 4.0	0.3 µm to 4.0 µM
Mass concentration precision	PM 1.0 (0 to 100 mg/m ³)	± 10 µg/m ³
	PM 2.5 (0 to 100 mg/m ³)	± 10 µg/m ³
	PM 3.0 (0 to 100 mg/m ³)	± 25 µg/m ³
	PM 4.0 (0 to 100 mg/m ³)	± 25 µg/m ³

Miscellaneous

- **Supply:** Powered by a USB port or a powered USB HUB.
- Operating temperature range: 0 °C* to 70 °C.
- Supported by the SensGate DAQ unit.
- Simultaneous operation of multiple Dracal sensors is supported.**

* Only if the cable is not moved/flexed while the temperature is below 0 °C.

** Only limited by allowable USB topologies and OS capacity.

Fifty simultaneous USB sensors have been tested under Windows 8.

Safety Guidelines

WARNING Electromagnetic interference (EMI) may decrease the sensor's accuracy. Avoid using this device near EMI sources such as motors, high-voltage transformers, and fluorescent tubes.

WARNING This product should not be used in applications where its failure may cause personal injury

Installation and Setup

TIP As for any precision measurement equipment, powering the unit at least 15 minutes before using it is advised.

Installation

1. Download the DracalView* software at <https://www.dracal.com/en/software/>
2. Follow the installer's instructions. The whole process should take less than a minute. The setup is now completed.
3. Insert the unit into a free USB port.

* Includes a set of command-line tools.

Usage Guidelines and Applications

Operation – DracalView


We recommend launching DracalView to check if the instrument is connected correctly and works as expected. Here are the main steps of the GettingStarted with DracalView guide.

1. Connect an instrument.

Launch DracalView.

2. Verify the instrument appears in the Sources tab.
3. Modify units and decimals in the Configuration tab (Optional).
4. Customize the names of channels to record in the Sources tab (Optional).
5. Visualize data on GraphView.

Please refer to the USB-I2C-SPS30 page for the complete guide, specifically the “Software & Documentation” tab.

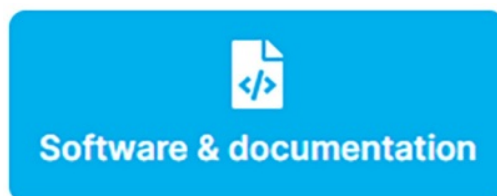

Of note, to log data with DracalView, these are the remaining main steps of the Getting Started guide:

6. Initiate the logging task in the Logging tab.
7. Keep an eye on data with BigView.

Watch an introductory video for a quick overview of setting up and logging data in less than 3 minutes.



Operation – Command-line interface

The command-line tools are available with the download of DracalView. In the Getting Started guide, locate them and call the -h (help) argument, whether on a Windows, MacOS X, or Linux-based computer. For complete documentation on how to use dracal-usb-get or dracal-sensgate-get, code examples, and integrating sensor data into LabVIEW™, click on the relevant link in the same Getting Started guide. Briefly, to log data to a file, here is the command `linDraculaal-usb-get -s [serial number] -i [chosen channels] -L [location]` To redirect the output, give the argument -L the parameter “- ” to have a stdout output.

Operation – COM Protocol


“VCP-” prefix: If present, the product is equipped with the virtual COM port (VCP) option, which allows it to be freely converted between USB and VCP modes. It is delivered in USB mode.

1. To convert the product from USB to VCP mode,
2. Open a command-line terminal.

Call “`dracal-usb-set -f set_protocol VCP`” and disconnect the product. To reverse the product back to USB mode, Send the “`PROTOCOL USB`” command and disconnect the product.

Please note that under Windows, once an instrument is converted to VCP, it is not recognizable by DracalView

and the command-line tools. For additional information, please click the relevant link in the Software & Documentation section of the USB-I2C-SPS30 page.

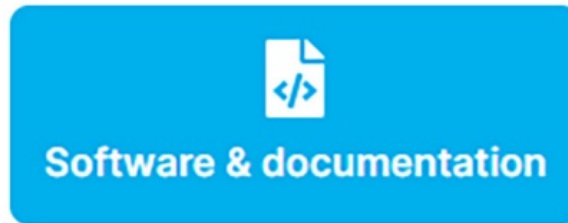


Calibration

“-CAL” suffix: If present, the product is equipped with a 3-point user-calibration mechanism. The Getting Started guide for calibration is summarized as follows:

1. Determine the calibration points.
2. Perform the calibration using DracalView or dracal-usb-cal.

A comprehensive video tutorial on the best practices for calibrating instruments using DracalView can be found [here](#).

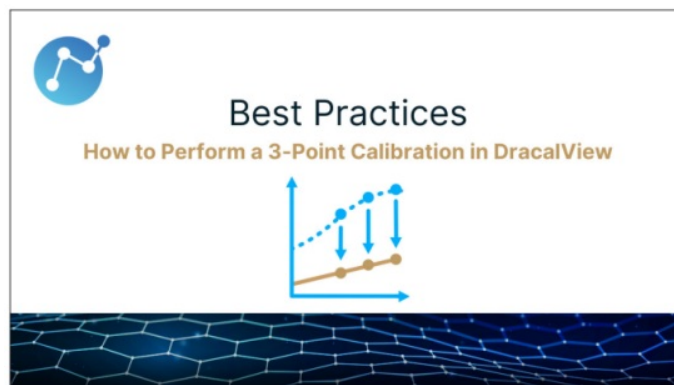

The Getting Started guide for successful calibration, mentioned in this section, provides many tips and complementary documentation.

Care, Storage, and Recalibration

Care

Use within the specifications in this manual.

NOTE Note that this product is not waterproof and requires protection if contact with water is possible.

Storage

Store within these housing temperature and humidity ranges 0 °C to 70 °C, 10 %RH to 90 %RH.

Recalibration

Dracal's measuring instruments are factory-calibrated. It is possible to purchase a calibration certificate traceable to the SI along with the instrument and receive a calibrated instrument. This calibration is performed by an ISO17025-accredited laboratory. If the instrument has a “-CAL” suffix, it can be adjusted for accuracy during the calibration. The long-term drift of the USB-I2C-SPS30 is 1.25 µg/m³ per year, for concentrations of 0 to 100 µg/m³. For higher concentrations, it is 1.25 m/v per year.

Troubleshooting Guide and Support

Troubleshooting

TIP Avoid installing the sensor in a location where strong vibration is likely to occur. Strong vibrations may cause slight inaccuracies in the reading. Feel free to browse the website's Resources section for any supplementary information. Here are interesting articles

- Most frequent questions about Dracal
- Top challenges and their solutions
- FAQs about calibration

Support

Dracal Technologies has a dedicated email address for support support@dracal.com. As customer satisfaction is a priority, someone (an actual human!) will respond within 24 hours.

Return Process and Warranty Information

Return Process

If a customer experiences issues with a Dracal sensor, they can contact support@dracal.com and explain their problem. In most cases, there will be an easy solution. In the rare event of a faulty instrument under warranty, Dracal Technologies will proceed to a replacement upon evaluating the situation. The procedure will be explained through email once the customer advises support@dracal.com.

Warranty

The complete warranty can be found on Dracal Technologies' website here. Briefly, Dracal Technologies only warrants to the original product purchaser for 36 months (3 years) from the delivery date.

Accessories and Peripherals

To use Dracal Technologies' complete DAQ solution, the user must download the software on a computer with a USB port. Aside from sensors, Dracal Technologies offers a remote data logging station the SensGate. Both a Wi-Fi/Ethernet gateway for Dracal's sensors and a data logger, fulfill the needs of customers requiring a remote solution to precision data acquisition.

Disassembly and Environmental considerations

Disassembly Instructions

1. **Turn Off Power** Before disassembling the USB sensor, ensure it is disconnected from any USB port.
2. **Remove External Connections** Unplug any cables connected to the USB sensor.
3. **Identify Screws and Fasteners** Locate and identify any screws or fasteners securing the casing of the USB sensor.
4. **Separate Casing** Gently separate the casing; be careful about damaging internal components. If resistance is encountered, recheck for any overlooked screws.
5. **Document Component Positions** Before further disassembly, document the positions of internal components for ease of reassembly. Handle Components with Care: Handle internal components carefully to avoid electrostatic discharge and damage. Use an ESD (Electrostatic Discharge) mat or wrist strap if available.
6. **Follow Reverse Order for Reassembly** When reassembling the USB sensor, follow the disassembly steps in reverse order, ensuring components are correctly positioned and secured. Environmental Considerations
7. **Recycling Recommendations** Dispose of components and packaging materials by local recycling regulations. Check with local authorities for proper e-waste disposal facilities. Reuse Opportunities: Consider reusing components or donating functional parts to minimize environmental impact.

8. **Minimize Energy Consumption** Power down or disconnect the USB sensor when not in use to minimize energy consumption.

Document Revision History

Version 1.0

2024-02-08

Creation of the User Manual.

FAQ


Q: What should I do if I encounter issues with connecting the instrument?

A: If you encounter issues with connecting the instrument, ensure that the unit is properly inserted into a free USB port and that the DracalView software is correctly installed on your system.

Q: Can I recalibrate the sensor on my own?

A: Recalibration of the sensor should be done by following the guidelines provided in the user manual or by contacting customer support for assistance.

Documents / Resources

	<p>Dracal USB-I2C-SPS30 USB Adapter for SPS30 Particulate Matter Sensor [pdf] User Manual</p> <p>USB-I2C-SPS30, 612001, 624065, USB-I2C-SPS30 USB Adapter for SPS30 Particulate Matter Sensor, USB-I2C-SPS30, USB Adapter for SPS30 Particulate Matter Sensor, Adapter for SPS30 Particulate Matter Sensor, SPS30 Particulate Matter Sensor, Particulate Matter Sensor, Matter Sensor, Sensor, Adapter</p>
--	--

References

- [Home - Dracal Technologies](#)
- [Contact Us - Dracal Technologies](#)
- [The Most Frequently Asked Questions about Dracal - Dracal Technologies](#)
- [Succeeding in 3-Point Calibration of Dracal Sensors - Dracal Technologies](#)
- [Getting started with Dracal command-line tools - Dracal Technologies](#)
- [3-year warranty policy](#)
- [Free USB DAQ for data integration, visualization and automation](#)
- [Top challenges faced by Dracal users and solved - Dracal Technologies](#)
- [Guide on Dracal sensor calibration and its benefits - Dracal Technologies](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.