

**DRAGON TOUCH**  
**K10 Quad Core**  
**Processor**



# DRAGON TOUCH K10 Quad Core Processor User Manual

[Home](#) » [DRAGON TOUCH](#) » DRAGON TOUCH K10 Quad Core Processor User Manual 

## Contents

- [1 DRAGON TOUCH K10 Quad Core Processor](#)
- [2 Product Usage Instructions](#)
- [3 FEATURES](#)
- [4 UNIT AT A GLANCE](#)
- [5 GETTING STARTED](#)
- [6 ABOUT APPLICATIONS](#)
- [7 PRE-INSTALLED APPLICATIONS](#)
- [8 CONNECT TO A Wifi NETWORK](#)
- [9 INTERNET NAVIGATING](#)
- [10 OPTIONAL CONNECTIONS](#)
- [11 TROUBLESHOOTING](#)
- [12 CONTACT](#)
- [13 FAQ](#)
- [14 Documents / Resources](#)
  - [14.1 References](#)
- [15 Related Posts](#)

**DRAGON TOUCH**

**DRAGON TOUCH K10 Quad Core Processor**



## **Product Usage Instructions**

- Press and hold the Power button to turn on the tablet until the LCD screen turns on. To turn off the tablet, press and hold the Power button until the Device Options menu appears, then tap OK to turn off the tablet.
- To turn off the screen, press the Power button once. Press the Power button again to turn the screen back on. You can set the screen to turn off automatically in the Display menu.
- To change the language, go to settings-system-language & input-languages-add a language. Please select your desired language from the list and set it as the primary language.
- Tap and hold your finger on any blank space on the home screen to choose wallpaper from Gallery or downloaded files.
- Tap and hold your finger on any blank space on the home screen to access widgets for customization.

## **FEATURES**

### **Browse the Web**

- Visit your favorite websites.

### **Check your E-mail**

- Keep in touch with friends and family.

### **Watch YouTube™ Videos**

- Browse the world's most popular video-sharing community.

### **Read your favorite books**

- Download thousands of books with the included E-book reader \*.

- Discover thousands of apps for Android™ games, applications, and more with Play Store (Customers need to download it from Google™ Play Store).

### **Connect to the Internet wirelessly**

- With high-speed Wifi 802.11 a/b/g/n (2.4GHz/5GHz) networking, you can enjoy your media library anytime and anywhere.
- A portable powerhouse (5000mAh battery) makes you feel free to listen to popular music, watch videos, and search for photos.

### **Memory card reader.**

- Increase your storage capacity (up to 128GB supported).

 
### **Built-in camera**

- Convenient front-facing camera 2MP / rear camera 8MP (support flash).

### **Automatic orientation detection**

- Read any way you want; the display adjusts automatically!
- Reading books in the e-pub format requires the included E-book reader application.

### **UNIT AT A GLANCE**

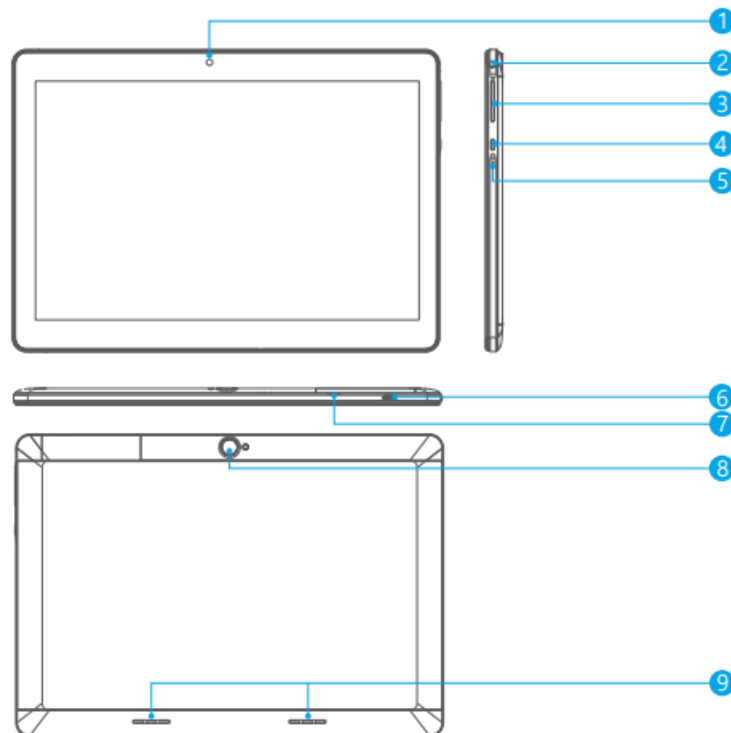

1. Front Camera
2. Headphone: Audio output connection for headphones.

3. VOL+ / VOL-
4. Power button / Screen Saver
5. Reset
6. USB Port: Connect to a USB device / Power Port.
7. Memory Card: Load external memory cards here.
8. Rear camera
9. Speaker

## GETTING STARTED

### Turning on / off the tablet

#### To turn on the tablet:

- Press and hold the Power button until the LCD screen turns on. Wait until the Home screen appears, the tablet is now ready for use.

#### To turn off the tablet:

- 1. Press and hold the Power button until the Device Options menu appears.



- Tap “OK” to turn off the tablet.
  - Turning on / off the screen (Sleep mode)

When the tablet is on, you can turn off the screen to save battery power. Simply press the Power button once to turn the screen off. Press the Power button again to turn the screen back on.
  - To save battery power, the screen can be set to turn off automatically when the tablet is not in use (between 1 minute and 30 minutes).
  - This screen timeout option can be found in the Display menu.
- Changing the language
  - Many users purchase Android tablets that come with a user interface in English, and they want to use their native language, like Spanish, French, Chinese, German and so on.
  - Tap “settings-system-language & input-languages-add a language”. A list is shown with all the available display languages that you can use on your Android device.
  - Tap and hold the lines near the name of the language that you want to use, and drag it to the top of the list.
  - If you do not need a particular display language, you can delete it. Click the three dots in the top-right

corner of the screen, near the text Language preferences. A menu is shown, with only one option: "Remove". Tap on it.

## Home Screen

1. Back: Press to check the previous operating display.
2. Home Screen: Press to go to the home screen.
3. Background: Press to check applications running in the background. Existing idle apps may provide a better performance.
4. Application Panel: Press to check all available Applications.

## Wallpaper

- Tap and hold your finger in any blank space of the home screen, you will see a pop-up menu; you can choose wallpaper from Gallery or your downloaded files or those listed as options; set the one you like to be wallpaper.

## Widgets

- Tap and hold your finger in any blank space on the home screen, you will see a pop-up menu with the widget.

 
## Tip:

1. Tap one icon and move on to top of another icon, you can create a new folder on the home screen. Open the folder; click 'Unnamed Folder' to rename the folder.
2. Swipe down vertically from the top part of a display to enter the quick notification menu.

## Screen Lock


Set a screen lock to secure your tablet.

Tap – Setting-Security-Screen security-Select screen lock, and select a mode from None, Swipe, Pattern, PIN, and Password. You can create a Backup PIN as a safety measure in case you forget your code.

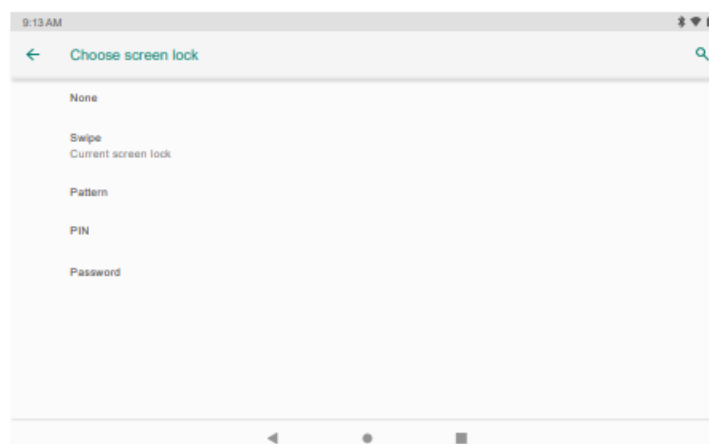

## Unlocking the Screen

 When the screen turns off, you will have to unlock the screen when you turn it back on. To unlock the screen, swipe up the lock icon.

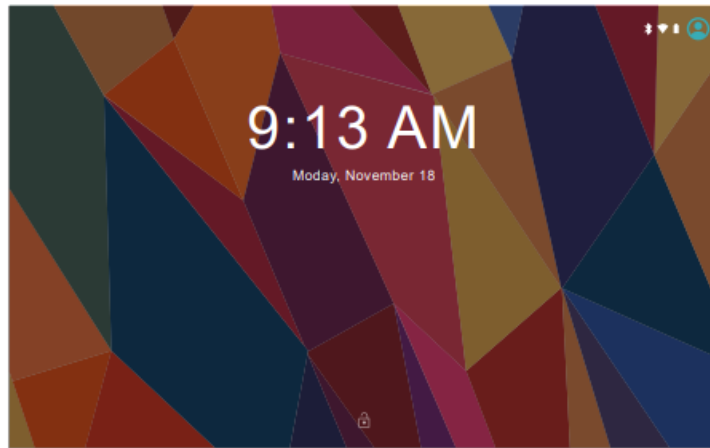


### Screen shot

Press and hold the power button and volume “-” at the same time to screenshot. The screenshot will be saved in the photo file.
 
## ABOUT APPLICATIONS



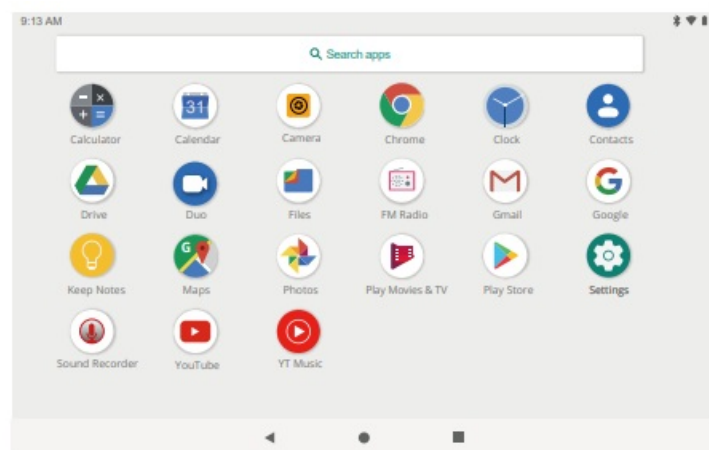



To open an application, tap the application icon on the home screen or in the Launcher where you can tap the icon right up on the home screen to get in. Launcher screen:



The screen shown above is for illustrative purposes only. We reserve the right to modify and improve the final list of applications available on the tablet.

### Pre-installed Applications

Some applications have been installed on your tablet for your convenience. These applications include:

-  Browse the web.
-  Perform simple mathematical operations.
-  Take pictures or videos with the camera.
-  Check your e-mail.
-  Play music.
-  Access the Settings menu to adjust the tablet's options.

## PRE-INSTALLED APPLICATIONS

## Installing Applications

- You can also download and install additional applications from the device's applications marketplace, the web browser, or other sources.
- The tablet must be set to allow the installation of applications from non-market sources. The unknown sources option can be set in the Application settings menu.



### Note:

1. Users are responsible for all charges from specific apps if it is necessary.
2. Manufacturers/sellers are not responsible for apps that are incompatible with the device.
3. In some cases, there may be no icon in the app Panel after an app is installed. Possible reasons may be that this app is not compatible with your OS or the downloaded file is a broken one so you may need to download a full version.

If you install and use an OS other than the one provided by the manufacturer, it may cause your device to malfunction, therefore, your device will no longer be covered by the warranty in this condition.

 
## CONNECT TO A Wifi NETWORK

The Notification bar displays icons that indicate your tablet's Wifi status.

-  Notification that an open Wifi network is in range.
-  Connected to a Wifi network (waves indicate connection strength). [no icon] There are no Wifi networks in range, or the Wi-Fi radio is off.

### Turn on the Wifi radio if it is not already on.

- Go to the Home screen: Press the Home button.
- Open the Settings menu: tap the icon right up on the home screen to get into the launcher, then tap the Settings icon.
- Open the Wireless & networks menu: Slide the icon to ON status.

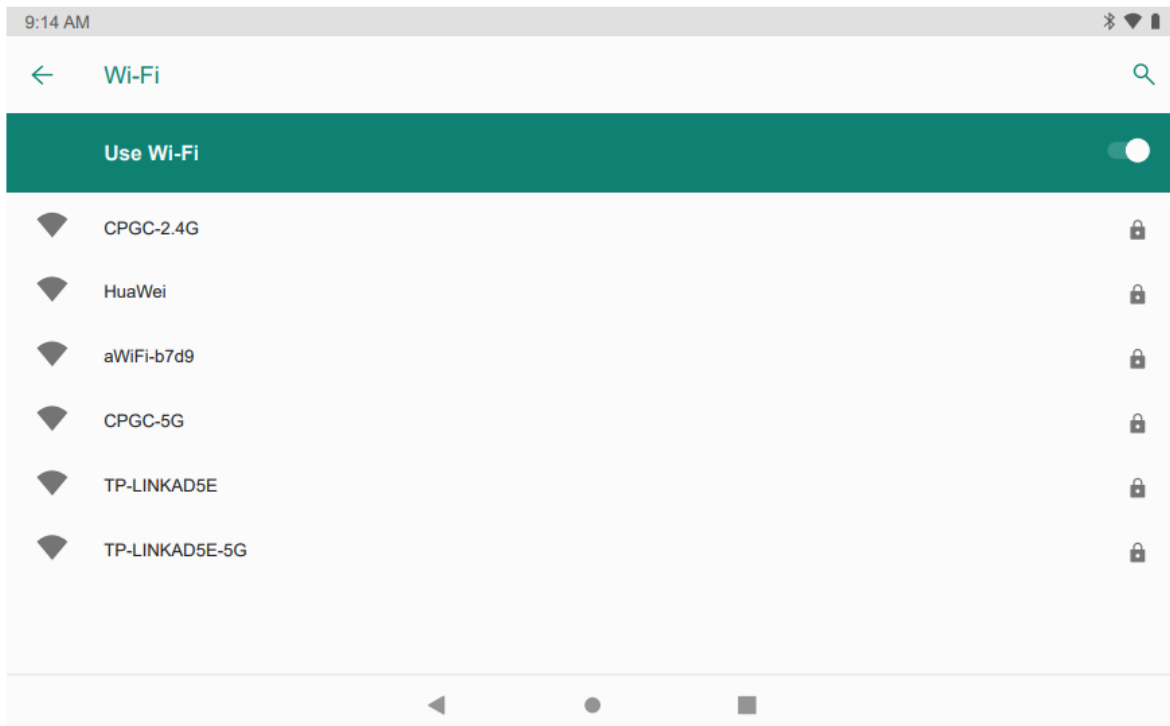


When Wifi is on, the tablet will look for and display a list of available Wifi networks.

**Notes:** If a network that you have connected to previously is found, the tablet will connect to it. If you don't see your network in the list, you can force the tablet to re-scan. To scan for networks, tap the Menu button, and then touch Scan.

**Select an available Wifi network to connect:**

 - In the same Wifi settings menu above, tap a network in the list.
- If the network is open, the tablet will prompt you to confirm the connection to the network. Tap "Connect" to confirm.
- If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials.
- Tap the Wireless password box to show the on-screen keyboard and then use it to enter the password. Tap "Connect" to confirm.



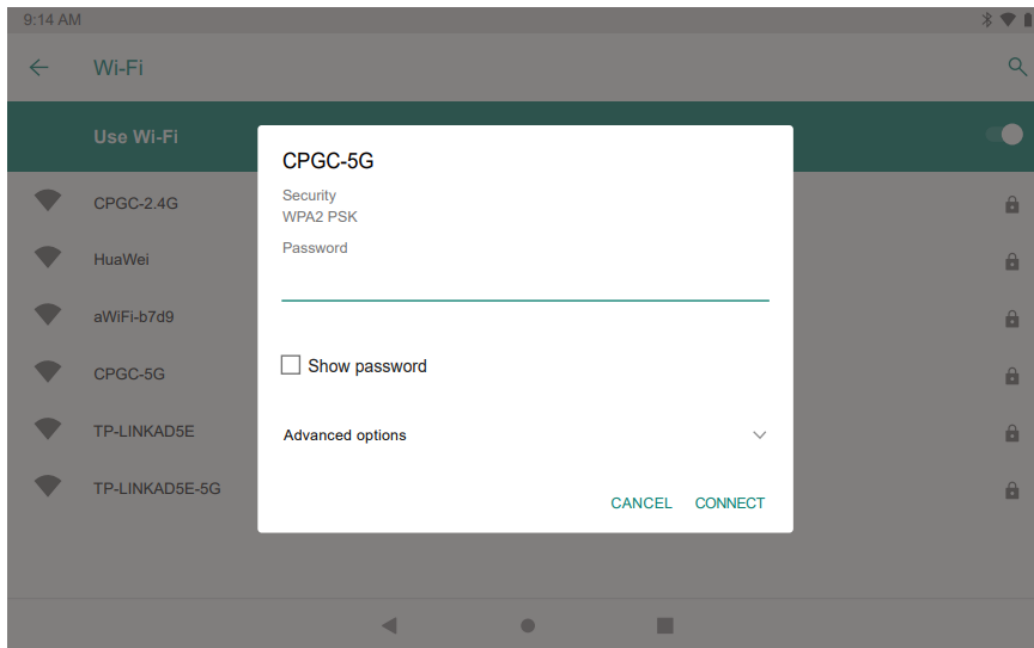

When you have successfully connected to a Wifi network, the Notifications bar at the upper right of the screen will show a Wifi signal indicator.

**Notes:** To learn about how to add a Wifi network when it is not in range or when the router is set to obscure the network name (SSID), or to configure advanced Wifi options, please refer to the manual.

## INTERNET NAVIGATING

Before using your browser, make sure Wifi or the internet is connected.



### Setting Browser

- You can use the browser to pre-install or download others you prefer. Tap the icon on the top right corner of the browser page to open the sub-menu for more detailed settings.

### Navigating

- Tap the browser icon to open your browser. You can access a website quickly by entering the URL on-screen keypad. Websites are optimized for viewing on your actual devices.

### Bookmarks

1. Tap on  any web page to add a bookmark. You can then tap "OK" to save or rename the website.
2. Tap to  view bookmarked sites, pages you saved and your browsing history.
3. To delete a bookmark, go to the bookmarks page, tap, and hold the bookmark you want to delete. Tap "Delete bookmark". At the Delete confirmation window, tap OK.

### Cookies

Cookies placed on your device by a website during navigation contain some site-specific information. It can also contain some personal information (such as a username and password) which can pose a security risk if not properly managed. You can clear these cookies from your device at any time. Go to Home webpage, press

## CONNECT TO A BLUETOOTH DEVICE

### Turn on Bluetooth

 
- You must pair your device with another device before you can transfer files between them. Under “Settings”, tap “Connected devices-Connection preferences-Bluetooth-ON”, the Bluetooth indicator then appears in the status bar.
- It will start searching for available devices nearby. If you need to re-scan, tap the menu on the top right corner, and tap “refresh”.

### Scan Device

- After scanning, there will be a list of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, ensure that the other device is turned on and set to be discoverable.

### Pair with Bluetooth Device

Tap the name of an available Bluetooth device you want to pair with. On the target device, you will get a ‘Bluetooth Pairing Request’ dialog. Tap ‘Pair’, it will then show you paired devices.

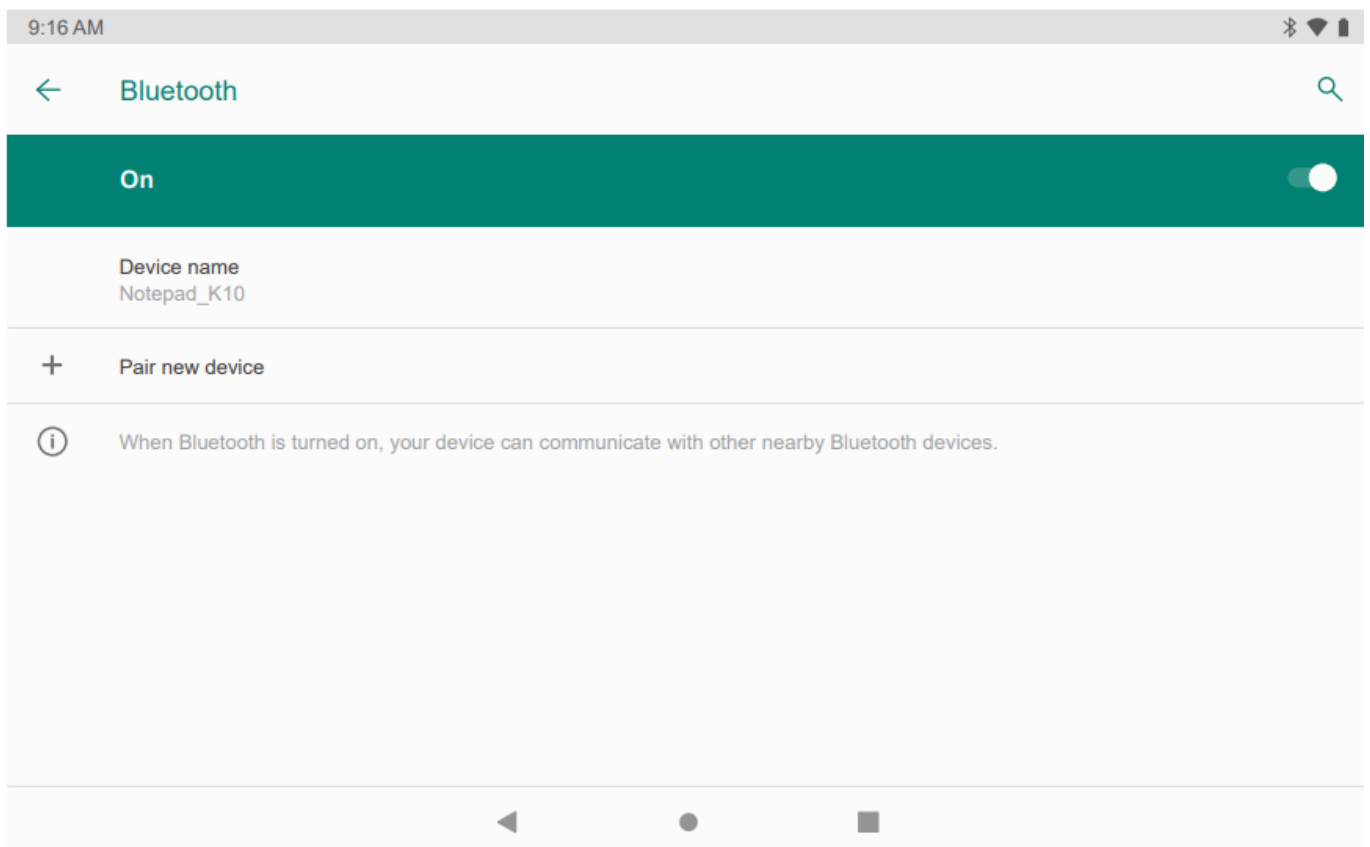

### Device Reset

- You may reset your tablet when necessary, such as a forgotten password or PIN of the tablet. You can reset your tablet. This will clear all information in your tablet and get your device back to factory mode.

### WARNING!

 
- If you perform a Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a Hard Reset.

## OPTIONAL CONNECTIONS

### Connecting to a Computer

Connect the tablet to a computer to transfer files.

1. Connect your tablet to the computer. With the included USB cable: Plug the small end of the cable into the USB 2.0 high-speed connector of the tablet. Plug the large end of the cable into an available USB 2.0 high-speed port on the computer.
2. When your tablet is connected, slide down the USB icon then touch the icon USB connected.
3. Mount the storage. Tap button Transfer files (MTP) to mount the tablet's built-in storage. When it is mounted, you can copy files to or from your tablet.

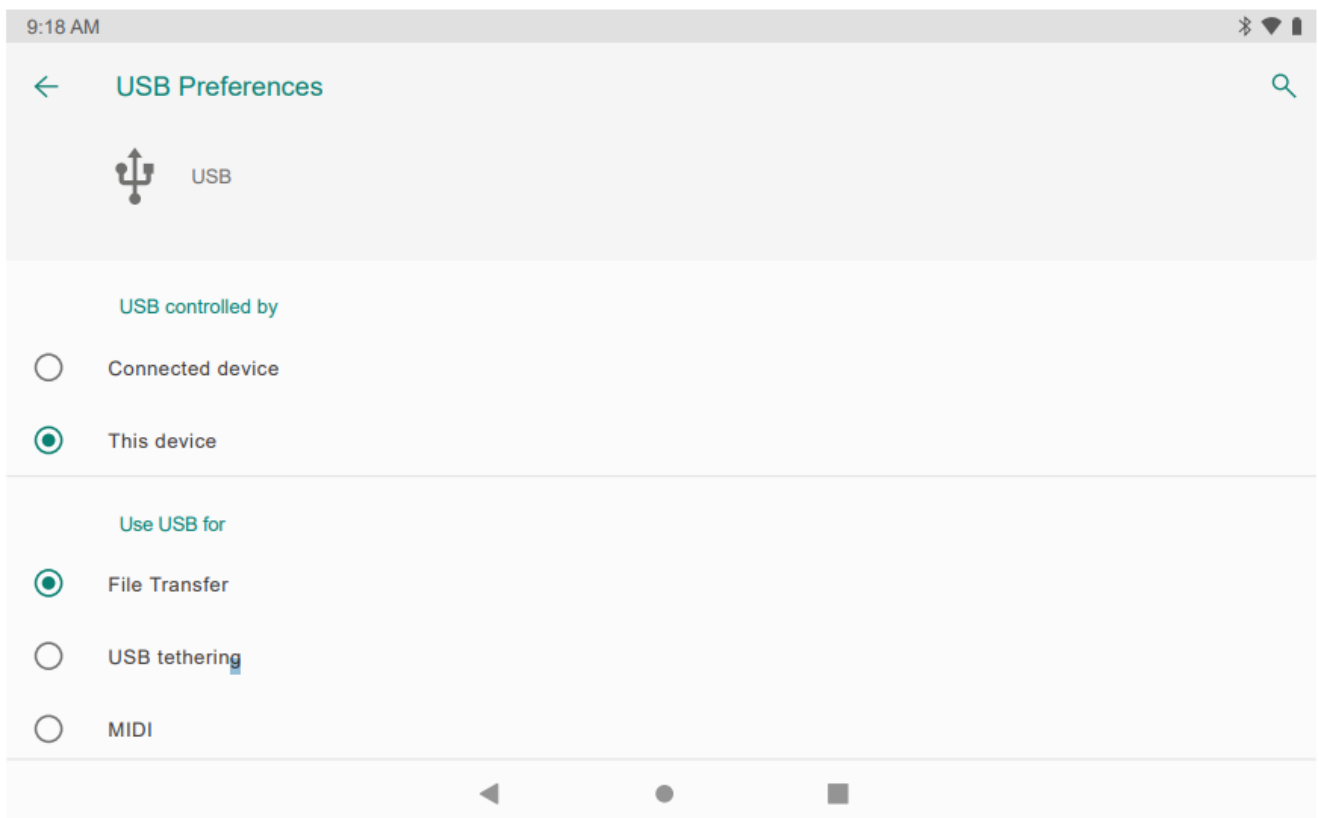

## TROUBLESHOOTING

1. The device doesn't power on.
  1. Reboot your device after charging it for 30 minutes.
  2. Shortly press your power button to check if it lights up in case your device is in sleep mode.
  3. Press the power button for 20 seconds.
  4. Start a hard reset by pressing the reset button with a pin if there is the reset button on your actual device
2. The device doesn't take charge.
  1. Keep your device in power for 30 minutes if it is completely drained.
  2. Check and make sure the charger is properly inserted into the charging port.

Try another outlet or compatible charger.

3. Error message during operation.

1. Uninstall the application with an error message and download to install again. You can also update certain applications with errors.
2. Delete and clear the system to factory mode with a system reset.

4. The device can't be detected by a PC.

1. Make sure your device is in 'on' status.
2. Try with another USB cable.
3. Connect your device to a different port on your PC.

5. The device can't be connected with Wifi.

1. Make sure your turn Wifi to "ON" status.
2. Unplug the Wi-Fi router, wait for 2 minutes, and plug to connect again.
3. Make sure you input the correct password by selecting "show password" when you input it.
4. Check and make sure there is no filtering setting or device connection limit in your router setting.
5. Forget the original Wifi connection, reset Wifi router, and connect again

6. Storage is not enough.

1. Delete applications you don't use often to spare some space.
2. Clean caches in your device regularly. 'Setting-APPs-Click' the app and clear cache or data.
3. Install a third-party system cleaner.
4. Factory reset your tablet to clear all data.
5. Get an extended memory card to expand your storage

## CONTACT

For any inquiries about DragonTouch products, please feel free to contact us. We will respond within 24 hours.

- Tel: [888-811-1140](tel:888-811-1140) (US)
- Email: [cs@dragontouch.com](mailto:cs@dragontouch.com)
- Web: [www.dragontouch.com](http://www.dragontouch.com)
- Google, Android, Google Play, and other marks are trademarks of Google LLC




dragontouch\_jp

## FAQ

- **Q:** How do I increase storage capacity on the NotePad K10?
- **A:** You can increase storage capacity by using a memory card of up to 128GB supported by the device.
- **Q:** How can I change the language on the tablet?

- **A:** To change the language, navigate to settings-system-language & input-languages-add a language and select your desired language from the list.
- **Q:** How do I take a screenshot on the NotePad K10?
- **A:** To take a screenshot, press and hold the Power button and Volume Down button simultaneously for a few seconds.

**Documents / Resources**

 The image shows the front cover of the 'NotePad K10' user manual. At the top, it says 'DRAGON TOUCH'. Below that, 'NotePad K10' is written in a larger font, with 'Tablet PC' underneath. At the bottom, it says 'USER MANUAL' and '(001)'.	<p><a href="#">DRAGON TOUCH K10 Quad Core Processor</a> [pdf] User Manual K10 Quad Core Processor, K10, Quad Core Processor, Core Processor</p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------

**References**

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.