



DRAGONTOUCH NotePad-K10 Tablet User Manual

[Home](#) » [DRAGONTOUCH](#) » DRAGONTOUCH NotePad-K10 Tablet User Manual 

Contents

- [1 DRAGONTOUCH NotePad-K10 Tablet](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 FEATURES](#)
- [6 UNIT AT A GLANCE](#)
- [7 GETTING STARTED](#)
- [8 ABOUT APPLICATIONS](#)
- [9 INSTALLING APPLICATIONS](#)
- [10 CONNECTING TO A Wifi NETWORK](#)
- [11 INTERNET NAVIGATING](#)
- [12 CONNECTING TO A BT DEVICE](#)
- [13 OPTIONAL CONNECTIONS](#)
- [14 TROUBLESHOOTING](#)
- [15 CONTACT US](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)



DRAGONTOUCH NotePad-K10 Tablet



Product Information

Specifications:

- **Product Name:** NotePad-K10 Tablet
- **Version:** V2.1
- **Language:** English
- **Battery:** 5000mAh
- **Wireless Connectivity:** Wifi 802.11 a/b/g/n/ac (2.4GHz/5GHz)
- **Storage Capacity:** Supports microSD card up to 128GB
- **Front Camera:** 5MP
- **Rear Camera:** 8MP with flash

Features:

- **Browse the Web:** Visit your favorite websites.
- **Check your E-mail:** Keep in touch with friends and families.
- **YouTube App:** Make watching your favorite videos easier with the official YouTube app.
- **Google Play Store:** Download your favorite apps, music, movies, TV, books, magazines, apps, and games.
- **Wireless Internet Connection:** Connect to the Internet wirelessly with high-speed Wifi.
- **Portable Powerhouse:** Long-lasting 5000mAh battery for music, video, and photo enjoyment.
- **microSD Card Reader:** Increase storage capacity by using a microSD card.
- **Built-in Camera:** Convenient front-facing camera (5MP) and rear camera (8MP) with flash.
- **Automatic Orientation Detection:** Display adjusts automatically for easy reading.

Product Usage Instructions

Getting Started:

1. To turn on the tablet:

1. Press and hold the power button until the LCD screen turns on.
2. Wait until the Home screen appears, the tablet is now ready for use.

2. To turn off the tablet:

1. Press and hold the power button until the Device Options menu appears.
2. Tap Power off to turn off the tablet.

Customization:

• Wallpaper:

1. On your tablet's home screen, touch and hold an empty space.
2. Tap Wallpapers.
3. Pick your wallpaper.
4. Tap Set wallpaper.
5. If available, pick which screen(s) show the wallpaper.

• Widgets:

1. On your tablet's home screen, touch and hold an empty space.
2. Tap Widgets.

Tip: To make a folder on the home screen, drag an app or a shortcut on top of another. To rename the folder, tap the folder, tap Unnamed Folder, and then enter the new name. To access the quick notification settings, swipe down from the top of your screen.

Screen Lock:

1. To choose a screen lock:

1. Go to Settings > Security > Screen lock.
2. Select your preferred lock type (None, Swipe, Pattern, PIN, Password).

2. To unlock the screen:

When the screen turns off, swipe up the lock icon to unlock it.

Taking a Screenshot:

To take a screenshot:

1. Press and hold the power button and volume down button at the same time.
2. The screenshots will be saved in the photos file.

About Applications:

- To open an application:
- Tap the application icon on the home screen or swipe up to check all available applications.
- The pre-installed applications on your tablet include:
 - Browsing the web
 - Performing simple mathematical operations
 - Taking pictures or videos with the camera

- Checking your e-mail
- Playing music
- Accessing the Settings menu to adjust the tablet's options

FAQ

- **Can I expand the storage capacity of the tablet?**

Yes, you can increase your storage capacity by using a microSD card up to 128GB.

- **How do I connect to the Internet wirelessly?**

The tablet supports high-speed Wifi 802.11 a/b/g/n/ac (2.4GHz/5GHz) networking. Simply go to Settings > Wi-Fi and select your preferred wireless network.

- **How long does the battery last?**

The tablet is equipped with a 5000mAh battery, which provides a long-lasting power source for listening to music, watching videos, and browsing photos.

- **How do I take a screenshot?**

Press and hold the power button and volume down button at the same time to capture a screenshot. The screenshots will be saved in the photos file.

FEATURES

- **Browse the Web**

Visit your favorite websites.

- **Check your E-mail**

Keep in touch with friends and families.

- **Make watching your favorite videos easier with the YouTube app**

Explore brand new content, music, news and more with the official YouTube app.

- **Download your favorite apps on Google Play**

Discover thousands of apps such as music, movies, TV, books, magazines, apps and games all on Google Play (Customers need to download these apps on Google Play).

- **Connect to the Internet wirelessly**

- With high-speed Wifi 802.11 a/b/g/n/ac (2.4GHz/5GHz) networking, you can enjoy your media library anytime and anywhere.
- Portable powerhouse (5000mAh battery) makes you feel free to listen popular music, watch videos, and search photos.

- **microSD card reader**

Increase your storage capacity (up to 128GB supported).

 
- **Built-in camera**

Convenient front-facing camera 5MP/rear camera 8MP (support flash).

- **Automatic orientation detection**

Read any way you want; the display adjusts automatically!

UNIT AT A GLANCE

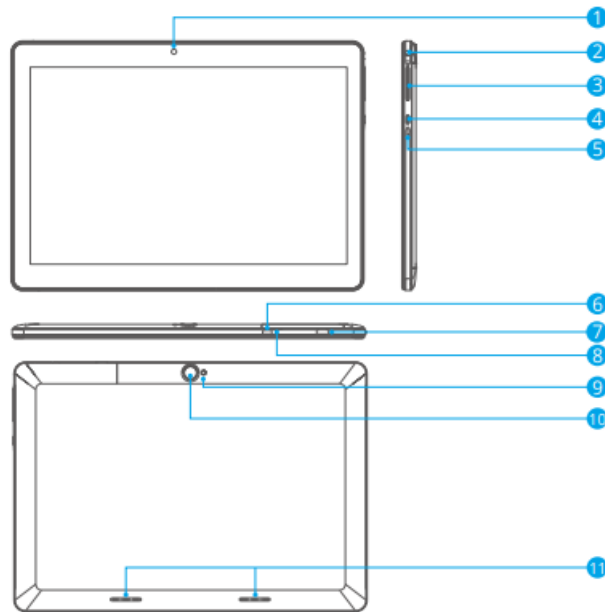

1. Front Camera
2. Headphone Jack
3. VOL+/VOL-
4. Power Button/Screen Saver
5. Reset Hole
6. Micro HDMI Port
7. USB-C Port
8. microSD Card Slot
9. Flash
10. Rear Camera
11. Speaker

GETTING STARTED

 
Turning on/off the tablet

- **To turn on the tablet:**

Press and hold the power button until the LCD screen turns on. Wait until the Home screen appears, the tablet is now ready for use.

- **To turn off the tablet:**

1. Press and hold the power button until the Device Options menu appears.

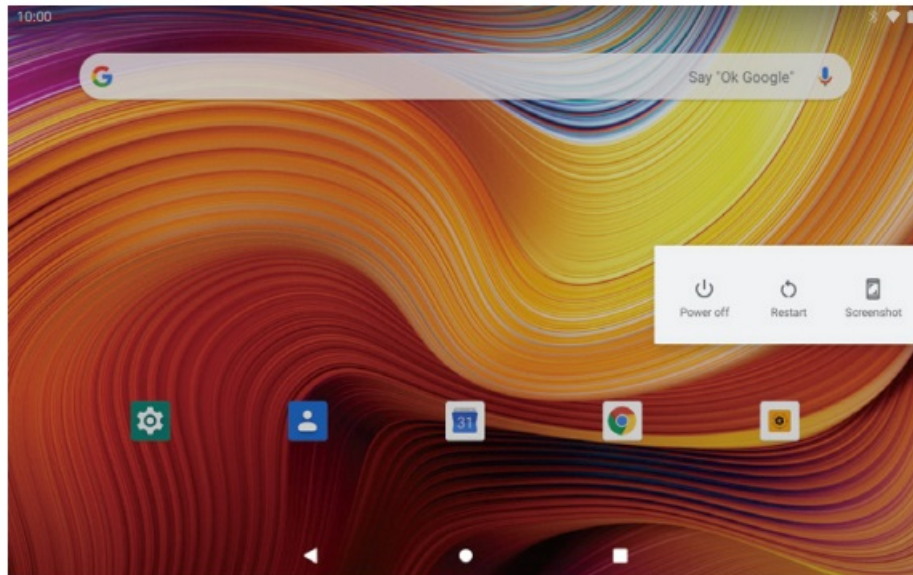

2. Tap "Power off" to turn off the tablet.

- **Turning on/off the screen (Sleep mode)**

- When the tablet is on, you can turn off the screen to save battery power. Simply press the power button once to turn the screen off. Press the power button again to turn the screen back on.
- To save battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes).
- To change the screen timeout, tap Settings → Display → Screen timeout.

- **Changing the language**

You can change the display language to your preferred language at any time.

1. Tap Settings → System → Languages & input → Languages → Add a language.
2. Select your preferred language from the list by tapping on it. If prompted, select the region for your chosen language.
3. Touch and hold your preferred language and drag it to the top of the list. To remove a language from the list, tap "⋮" → Remove, mark the language you would like to remove, and tap "🗑️".

Home Screen

1. **Back:** Press to check the previous operating display.
2. **Home Screen:** Press to go to the home screen.
3. **Background:** Press to check applications running in the background. Closing idle apps may help improve performance.
4. **Application Panel:** Swipe up to check all available applications.

Wallpaper

1. On your tablet's home screen, touch and hold an empty space.
2. Tap Wallpapers.
3. Pick your wallpaper.
4. Tap Set wallpaper.
5. If available, pick which screen(s) show the wallpaper.

Widgets

 
1. On your tablet's home screen, touch and hold an empty space.
2. Tap "Widgets".

Tip:

1. To make a folder on the home screen, drag an app or a shortcut on top of another. To rename the folder, tap the folder, tap "Unnamed Folder", and then enter the new name.
2. To access the quick notification settings, swipe down from the top of your screen.


Screen Lock

- Set a screen lock to secure your tablet.
- Go to Settings, tap "Security" → "Screen lock", and select a mode from None, Swipe, Pattern, PIN and Password. You can create a Backup PIN as a safety measure in case you forget your code.

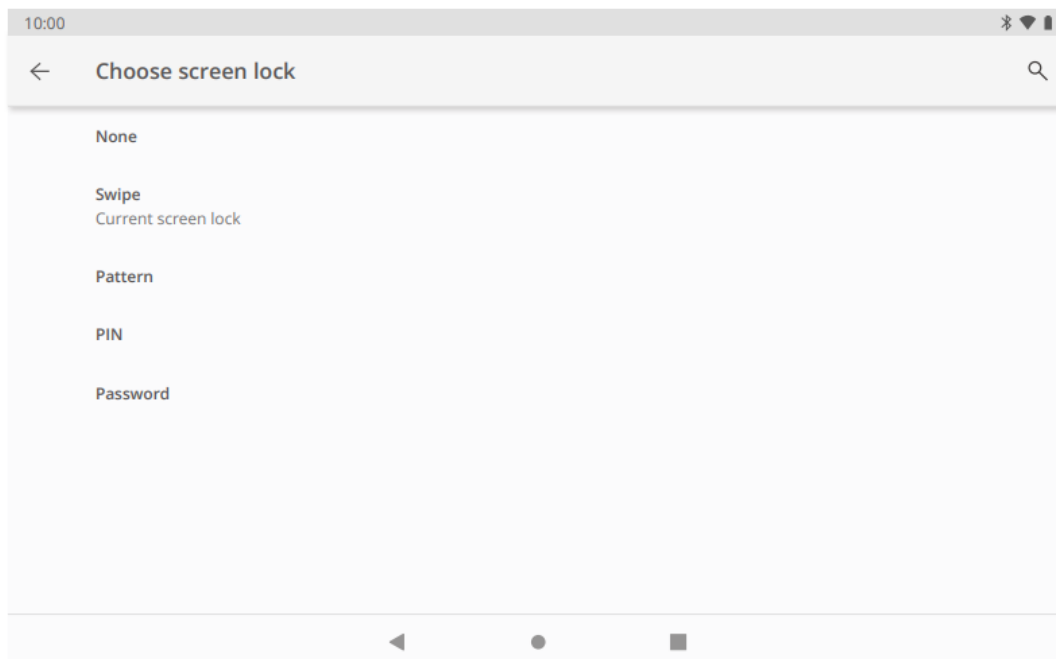

Unlocking the Screen

 When the screen turns off, you will have to unlock the screen when you turn it back on. To unlock the screen, swipe up the lock icon.

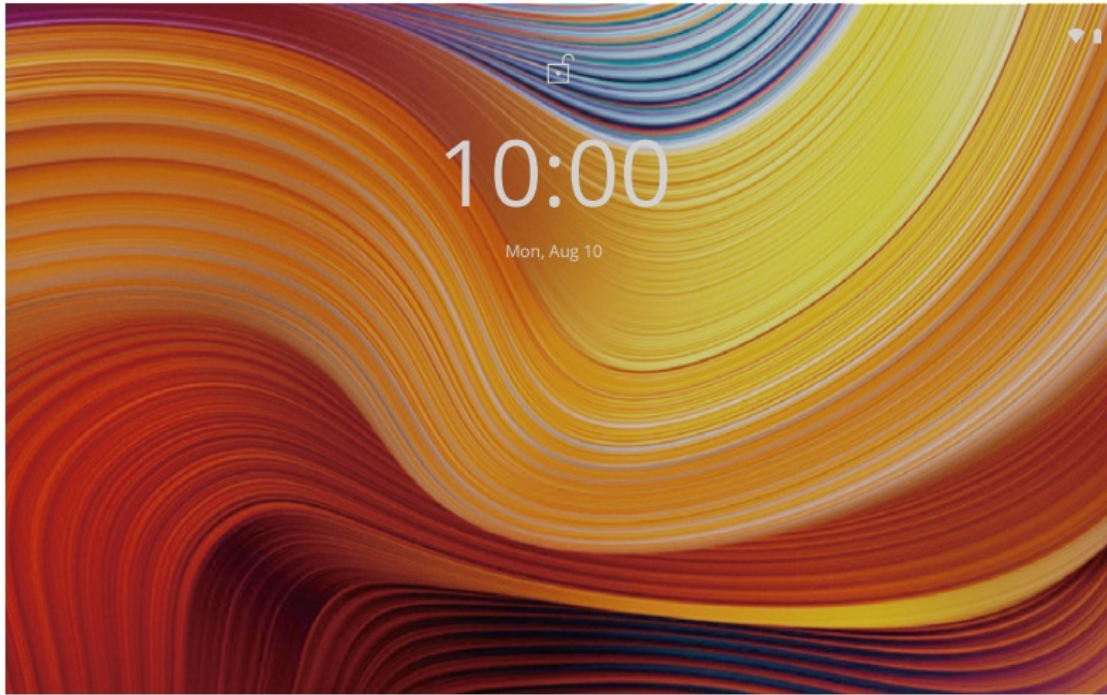


Taking a Screenshot

Press and hold the power button and volume down button at the same time to take a screenshot. The screenshots will be saved in the photos file.

 ABOUT APPLICATIONS



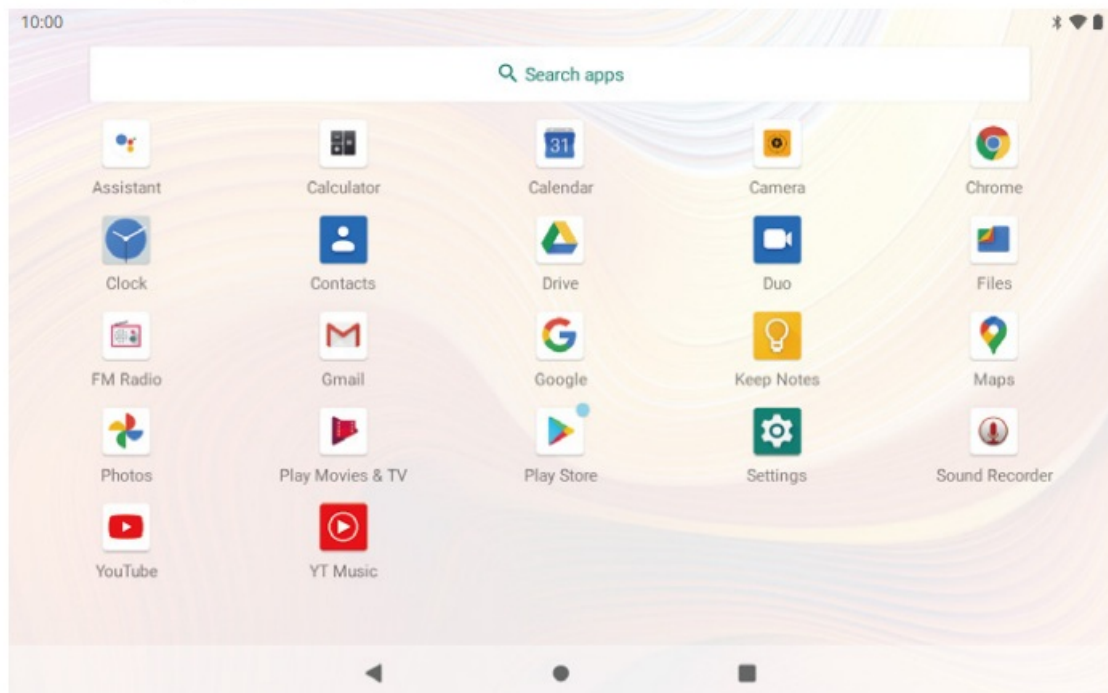



- To open an application, tap the application icon on the home screen or swipe up to check all available applications.



- The screen shown above is for illustrative purposes only. We reserve the right to modify and improve the final list of applications available on the tablet.

Pre-installed Applications

Some applications have been installed on your tablet for your convenience. These applications include:

-  Browse the web.
-  Perform simple mathematical operations.
-  Take pictures or videos with the camera.
-  Check your e-mail.
-  Play music.
-  Access the Settings menu to adjust the tablet's options.

INSTALLING APPLICATIONS

- You can also download and install additional applications from Google Play, the web browser, or other sources.
- To download apps from sources other than Google Play, your tablet must be set to allow app installations from unknown sources. Go to Settings, tap “Apps & notifications” → “Advanced” → “Special app access” → “Install unknown apps”.
- Select the app then tap the Allow from this source switch to turn on or off.

Note:

1. Users are responsible for all charges from specific apps if it is necessary.
2. Manufacturers/sellers are not responsible for apps that are incompatible with the device.
3. In some cases, there may be no icon in the App Panel after an app is installed. Possible reasons may be that this app is not compatible with your OS or the downloaded file is a broken one so you may need to download a full version.

 
If you install and use an OS other than the one provided by the manufacturer, it may cause your device to malfunction, therefore, your device will no longer be covered by the warranty in this condition.

CONNECTING TO A Wifi NETWORK

- The Notification bar displays icons that indicate your tablet's Wifi status.
- Notification that an open Wifi network is in range.
- Connected to a Wifi network (waves indicate connection strength).[no icon] There are no Wifi networks in range, or the Wifi radio is off.

Turning on Wifi

- Swipe up on the screen and tap Settings.
- Tap Network & internet and then Wifi.
- Turn on Use Wifi.

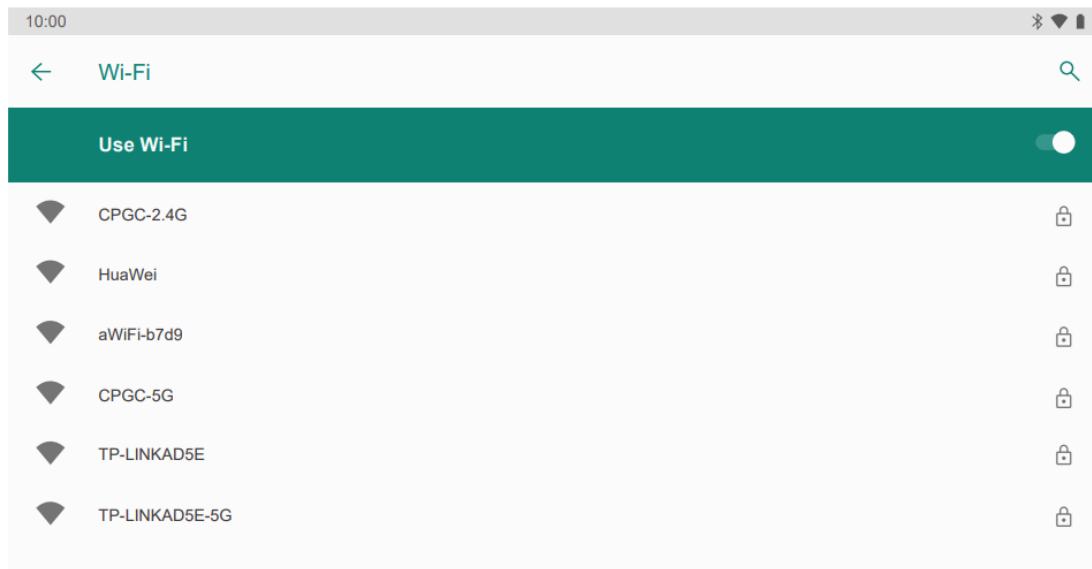


Your device will automatically search for available Wifi networks.

Note: If a network that you've connected to before is available, the tablet will connect to it. If the network you want isn't listed, but is nearby, wait for the list to refresh. Or, tap Add network, enter the network name (SSID) and security details, and tap Save.

Connecting to Wifi

 - Tap the Wifi network you would like to connect to.

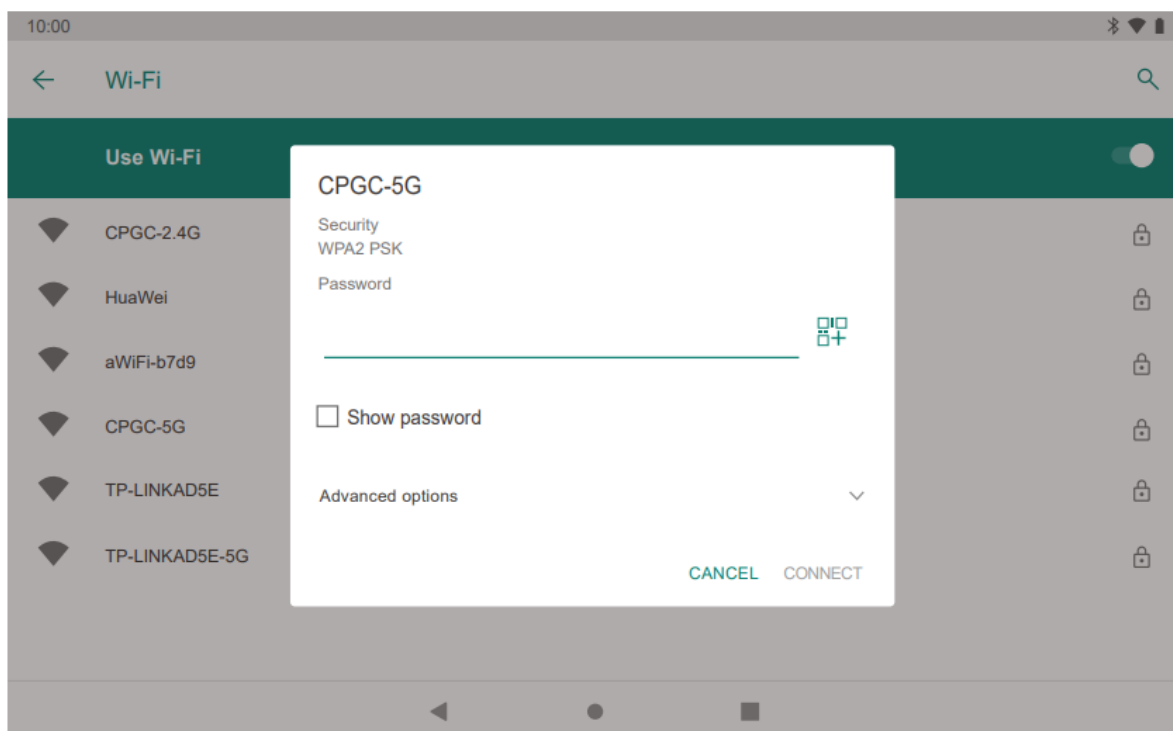

- If the network is open, the tablet will prompt you to confirm the connection to the network. Tap “CONNECT” to confirm.
- If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Enter the network password using the onscreen keyboard, and tap “CONNECT”.
- You will see “Connected” below your selected Wifi network as well as a Wifi icon in the Status Bar indicating

that you are connected.

INTERNET NAVIGATING

Before using your browser, make sure Wifi or mobile data is turned on.

Setting Browser

You can use the pre-installed browser or download others you prefer. Tap " " for more detailed settings.

Navigating

Tap the browser icon to open your browser. You can access a website quickly by entering the URL using the onscreen keyboard. Websites are optimized for viewing on your actual devices.

Bookmarks

1. Tap on any web page to add a bookmark. You can then tap "Edit" to save or rename the website.
2. At the top right, tap " ⋮ " → "Bookmarks" to see a list of your bookmarks. You can manage your bookmarks.

Cookies

You can clear cookies from your device at any time. On a webpage, tap " ⋮ " → "Settings" → "Privacy & security" → "Clear browsing data".

CONNECTING TO A BT DEVICE

Turning BT on

1. Go to Settings.
2. Tap "Connected devices" → "Connection preferences" → "BT" and tap the slider to turn it on. You will see the BT icon in the Status Bar.

Pairing a BT Device

1. Swipe down from the top of the screen.
2. Touch and hold the BT icon.
3. Tap "Pair new device".

It will automatically scan and you will see a list of available devices. If the device you want to pair with isn't in the list, ensure that the other device is in Pairing Mode and set to be discoverable.
4. Tap the name of the BT device you want to pair with.
5. Tap "PAIR". On the other device, accept the pairing if prompted.



Device Reset

You can remove data from your tablet by performing a Hard Reset.

Important: Please back up your important data before performing a Hard Reset. A factory reset erases all your data and apps from your tablet.

OPTIONAL CONNECTIONS

Connecting to a Computer

 
Connect the tablet to a computer to transfer files.

1. Connect your tablet to the computer.

Connect the included USB cable to your tablet's USB-C port and your computer's USB port.

2. Change the USB Preferences

Swipe down the notification panel and tap "USB file transfer turn on" for more options.

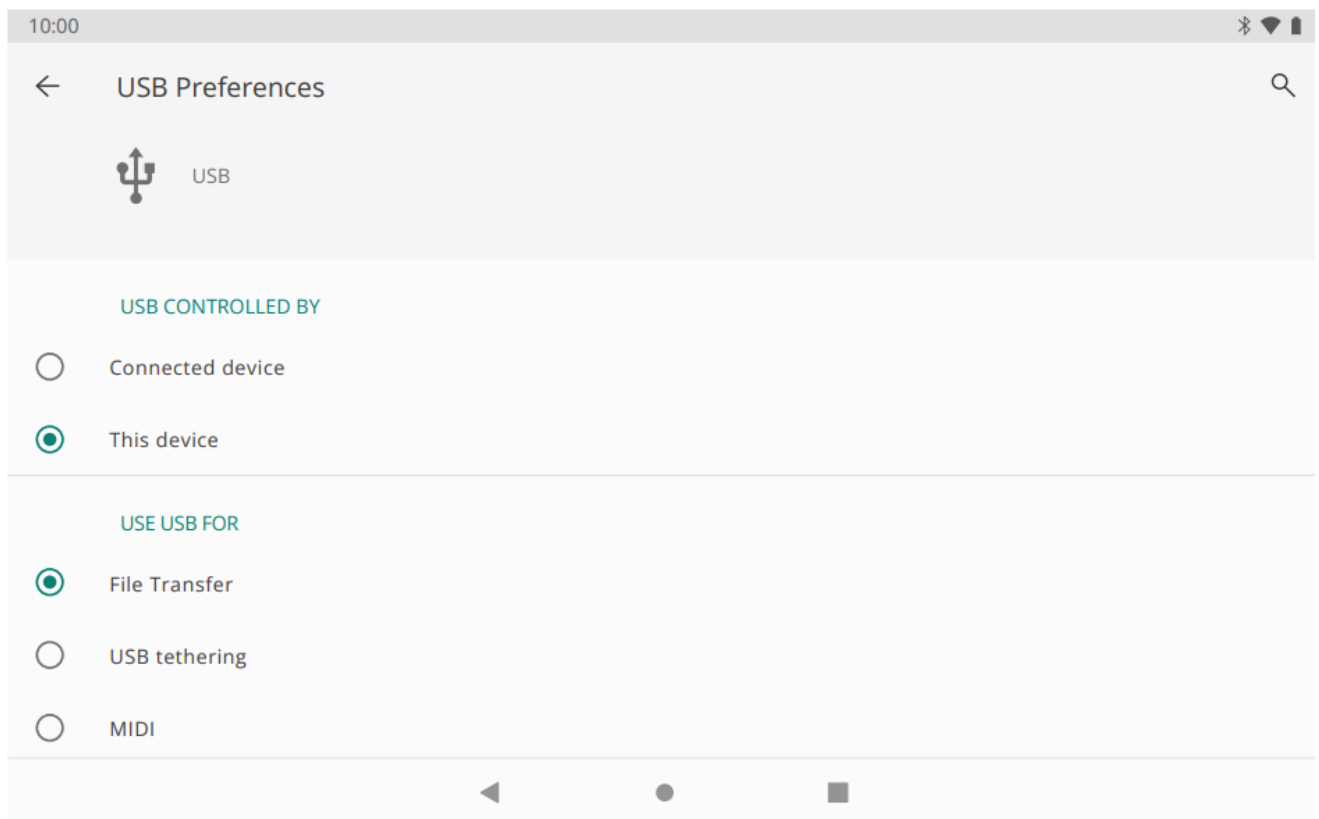

TROUBLESHOOTING

- **Device doesn't power on.**
 - Reboot your device after charging it for 30 minutes.
 - Shortly press your power button to check if it lights up in case your device is in sleep mode.
 - Press the power button for 20 seconds.
 - Start a hard reset by pressing the reset button with a pin.
- **Device doesn't take charge.**
 - Charge your tablet for at least 30 minutes before restarting.
 - Check that the cable is securely connected to the charger and to your tablet.
 - Try another outlet or compatible charger.
- **Error message appears during operation.**
 - If an error message appears, uninstall the app and then reinstall it. Or update the app to the latest version.
 - Reset it to factory settings.
- **Device can't be detected by a PC.**
 - Make sure your device is in "ON" status.
 - Try with another USB cable.
 - Connect your device to a different port on your PC.
- **Device can't be connected with Wifi.**
 - Make sure you turn Wifi to "ON" status.
 - Unplug the Wifi router, wait for 2 minutes and plug to connect again.
 - Make sure you input the correct password by selecting "show password" when you input it.
 - Check and make sure there is no filtering setting or device connection limit in your router setting.
 - Forget original Wifi connection, reset the Wifi router, and connect again.

- **Insufficient storage available.**

- Delete applications you don't use often to spare some space.
- Clean caches in your device regularly. Tap "Settings" → "Apps & notifications" → "SEE ALL XX APPS". Tap on an app, then tap "Storage & cache". Choose "CLEAR STORAGE" or "CLEAR CACHE".
- Install a third-party system cleaner.
- Factory reset your tablet to clear all data.
- Insert a microSD card to expand its memory.

CONTACT US

- For any inquiries with Dragon Touch products, please feel free to contact us, we will respond within 24 hours.
 - **Email:** cs@dragontouch.com
 - **Tel:** 888-811-1140 (US) Mon-Fri (except holiday) 9am-5pm (EST)
 - **Official website:** www.dragontouch.com
 - Google, Android, Google Play, YouTube and other marks are trademarks of Google LLC.
 - The microSD, microSDHC, microSDXC and SD marks and logos are trademarks of SD-3C, LLC.
-

Documents / Resources

	DRAGONTOUCH NotePad-K10 Tablet [pdf] User Manual NotePad-K10 Tablet, NotePad-K10, Tablet
---	---

References

-  [Dragon Touch Android Tablet PC, 4k Action Camera & Sports DV Camera at Dragon Touch](#)
- [User Manual](#)