



DrayTek Vigor2766 Series Fast Security Router User Guide

[Home](#) » [DrayTek](#) » DrayTek Vigor2766 Series Fast Security Router User Guide 

DrayTek Vigor2766 Series Fast Security Router



Contents

- [1 Intellectual Property Rights \(IPR\) Information](#)
- [2 Safety Instructions and Approval](#)
- [3 Declaration of Conformity](#)
- [4 Regulatory Information](#)
- [5 Package Content](#)
- [6 Panel Explanation](#)
- [7 Hardware Installation](#)
- [8 Software Configuration](#)
- [9 Customer Service](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

Intellectual Property Rights (IPR) Information

Copyrights

© All rights reserved. This publication contains information that is protected by copyright. No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders.

Trademarks

The following trademarks are used in this document:

- Microsoft is a registered trademark of Microsoft Corp.
- Windows, Windows 8, 10, 11 and Explorer are trademarks of Microsoft Corp.
- Apple and Mac OS are registered trademarks of Apple Inc.
- Other products may be trademarks or registered trademarks of their respective manufacturers.

Safety Instructions and Approval

Safety Instructions

- Read the installation guide thoroughly before you set up the router.
- The router is a complicated electronic unit that may be repaired only by authorized and qualified personnel. Do not try to open or repair the router yourself.
- Do not place the router in a damp or humid place, e.g. a bathroom.
- Do not stack the routers.
- The router should be used in a sheltered area, within a temperature range of 0 to +40 Celsius.
- Do not expose the router to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoor to prevent electronic shock hazards.
- Keep the package out of reach of children.
- When you want to dispose of the router, please follow local regulations on conservation of the environment.

Warranty

We warrant to the original end user (purchaser) that the router will be free from any defects in workmanship or materials for a period of two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary to restore the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value, and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects which do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

CE Declaration of Conformity

Hereby, DrayTek Corporation declares that the radio equipment type Vigor2766 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:


<https://fw.draytek.com.tw/Vigor2766/Document/CE/>

Manufacturer: DrayTek Corp.

Address: No.26, Fushing Rd., Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan.

Product: Vigor2766 Wireless Series

Frequency Information for Europe area:

2.4GHz WLAN	2412MHz – 2472 MHz, max. TX power: 19.79dBm	*1
5GHz WLAN	5160MHz – 5340 MHz, max. TX power: 22.74dBm TX power: 29.88dBm	*2 5480MHz – 5720 MHz, max.
	Requirements in AT/BE/BG/CZ/DZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/ CY/LV/LI/LT/LU/HU/ MT/NL/NO/PL/PT/RO/SI/SK/TR/FI/SE/CH/ UK/HR. 5150MHz~5350MHz is for indoor use only.	

(*1: for 2.4GHz WLAN model; *2: for 5GHz WLAN model)

This product is designed for DSL and 2.4GHz /5GHz WLAN network throughout the EC region.

Regulatory Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device may accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

USA Local Representative	Company name	ABP International Inc.		
	Address	13988 Diplomat Drive Suite 180 Dallas TX 75234		
	ZIP Code	75234	E-mail	rmesser@abptech.com
	Contact Person	Mr. Robert Messer	Tel.	19728311600

Caution

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.



■ The antenna/transmitter should be kept at least 20 cm away from human body.

More update, please visit www.draytek.com.

*The external power supply used for each product will be model dependent.

		1	2	3	4	5	6	7	8	9
A	Manufacturer	CWT	CWT	CWT	CWT	CWT	APD	APD	APD	APD
B	Address	No. 222 , Sec. 2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unt y 33 8, Taiw an	No. 222 , Sec. 2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unt y 33 8, Taiw an	No. 222 , Sec. 2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unt y 33 8, Taiw an	No. 222 , Sec. 2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unt y 33 8, Taiw an	No. 222 , Sec. 2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unt y 33 8, Taiw an	No.5, L ane 83, Lung-S ou St., Taoyua n City 3 30, Tai wan	No.5, L ane 83, Lung-S ou St., Taoyua n City 3 30, Tai wan	No.5, L ane 83, Lung-S ou St., Taoyua n City 3 30, Tai wan	No.5, L ane 83, Lung-S ou St., Taoyua n City 3 30, Tai wan
C	Model identi fier	2ABB0 12F UK	2ABB0 18F UK	2ABL02 4F UK	2ABL03 0F UK	2ABN0 36F UK	WA-12 M12FG	WB-18 D12FG	WA-24 Q12FG	WA-36 A12FG
		2ABB0 12F EU	2ABB0 18F EU	2ABL02 4F EU	2ABL03 0F EU	2ABN0 36F EU	WA-12 M12FK	WB-18 D12FK	WA-24 Q12FK	WA-36 A12FK
D	Input voltage	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V
E	Input AC freq uency	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z
	Output voltag e DC	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V
F	Output curren t	1.0A	1.5A	2.0A	2.5A	3.0A	1.0A	1.5A	2.0A	3.0A
G	Output power	12.0W	18.0W	24.0W	30.0W	36.0W	12.0W	18.0W	24.0W	36.0W
H	Average activ e efficiency	84.9%	86.2%	87.6%	87.8%	89.8%	83.7%	85.4%	88.6%	88.2%
I	Efficiency at l ow load 10%	73.6%	78.0%	81.3%	83.3%	83.7%	74.5%	80.5%	86.4%	85.4%
J	No-load powe r consumption	0.07W	0.07W	0.07W	0.07W	0.07W	0.07W	0.10W	0.07W	0.10W

External power supply (Power Adapter) information. For more update, please visit www.draytek.com.

Package Content

 
Take a look at the package content. If there is anything missed or damaged, please contact DrayTek or dealer

immediately.


- Vigor router




- Quick Start Guide, Antenna

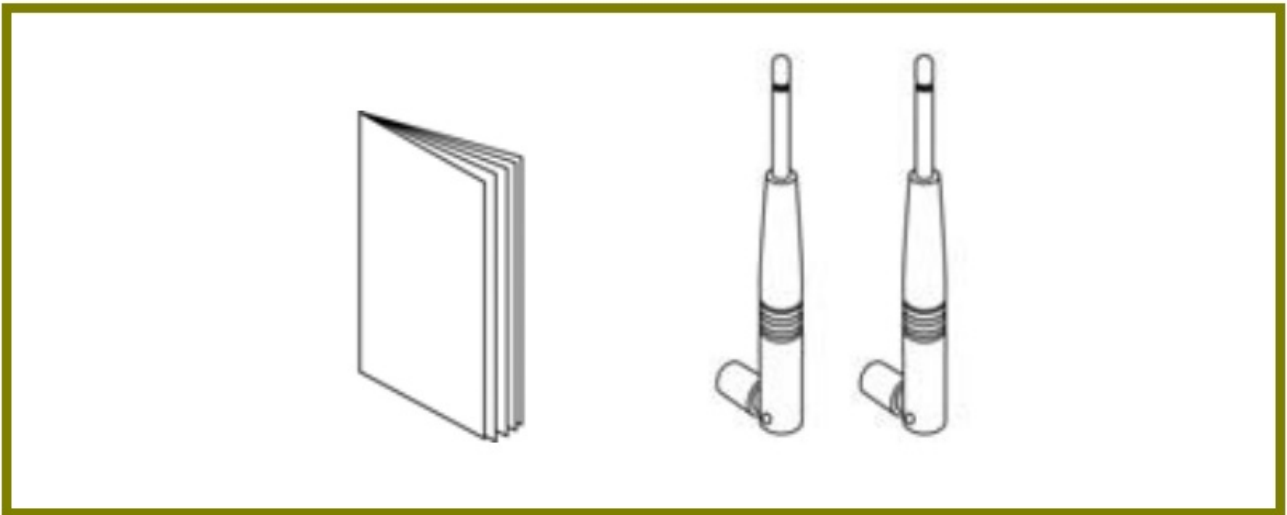

- RJ-45 Cable (Ethernet)

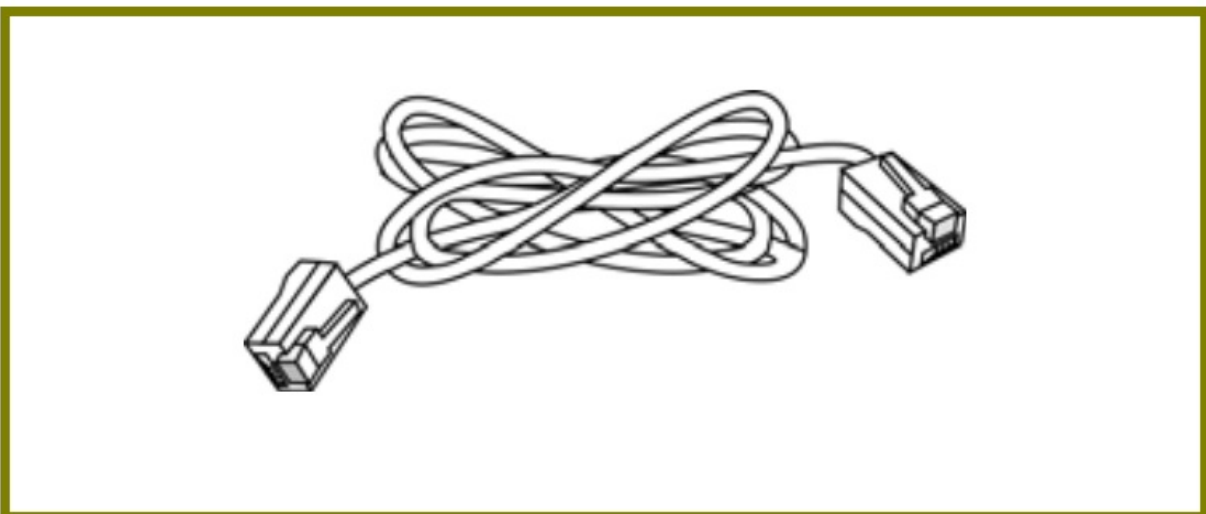 

- RJ-11 to RJ-11 Cable (Annex A)

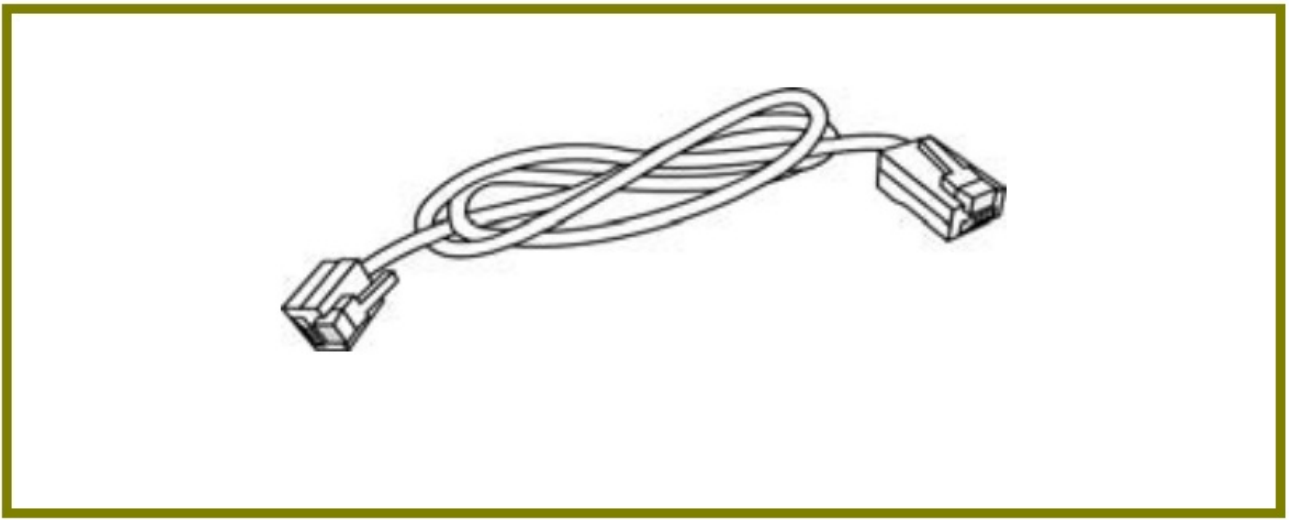 

- RJ-11 to RJ-45 Cable (Annex B)

 


- RJ-45 to RJ-45 Cable (Annex B)




The type of the power adapter depends on the country that the router will be installed. * The maximum power consumption is 17-23 Watt.


- UK-type Power Adapter

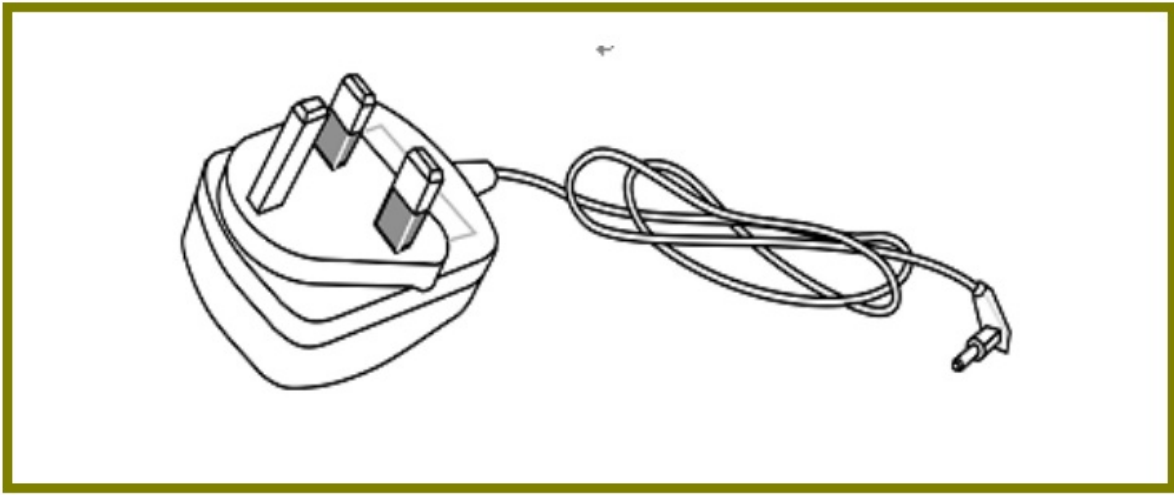


- EU-type Power Adapter

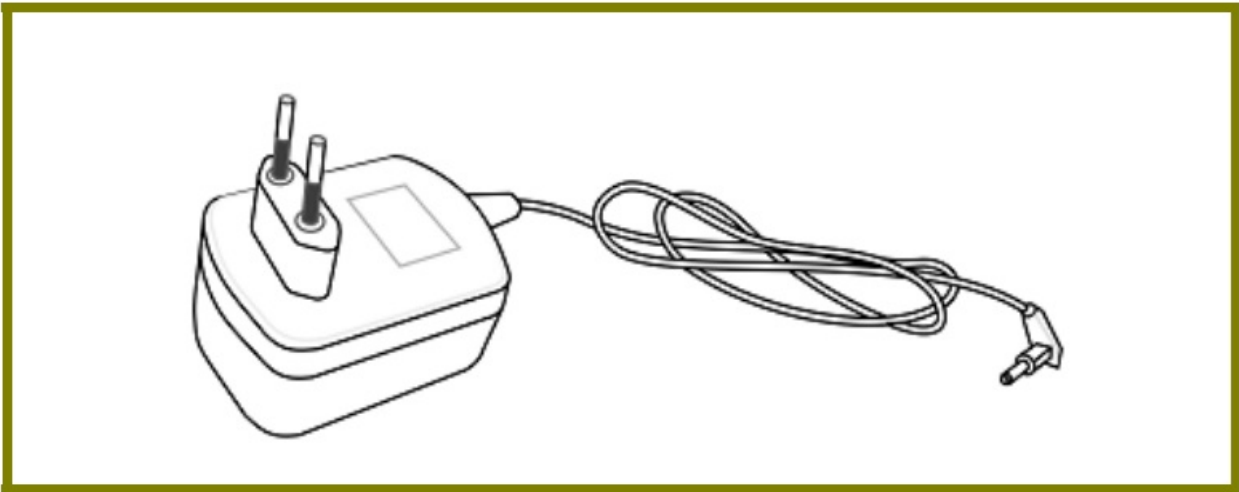 


- USA/Taiwan-type Power Adapter

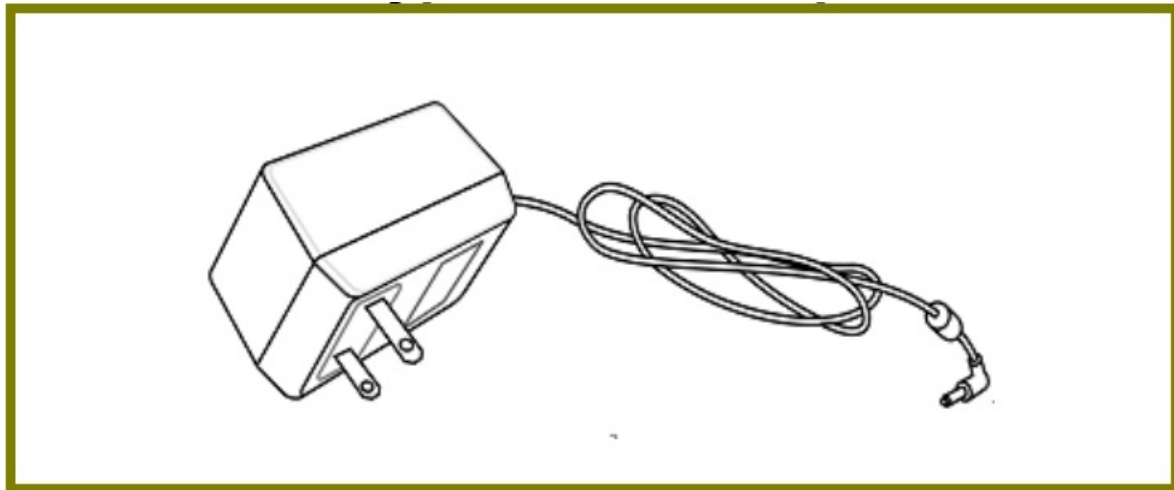 


- AU/NZ-type Power Adapter

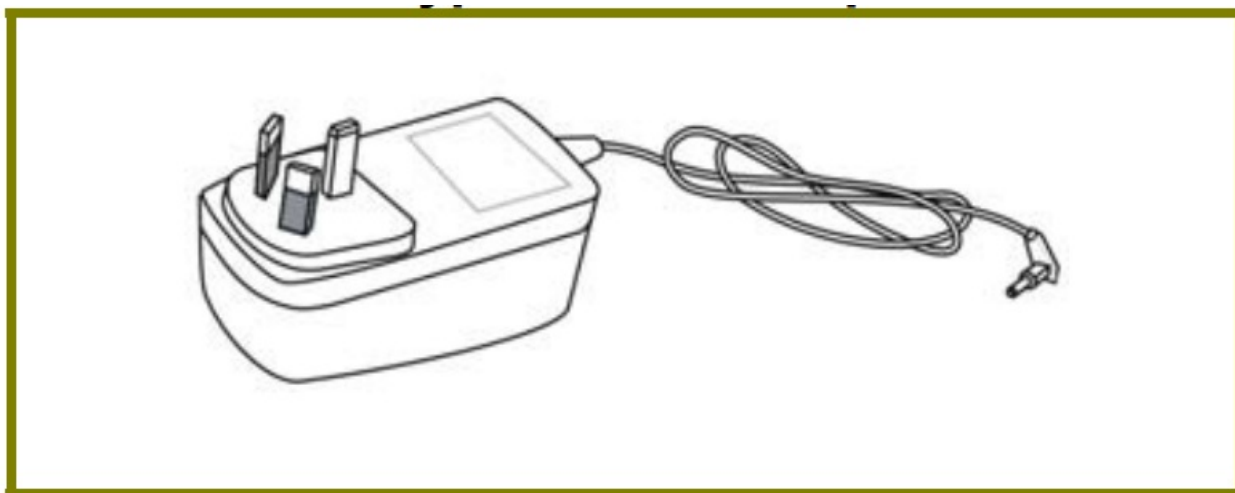 





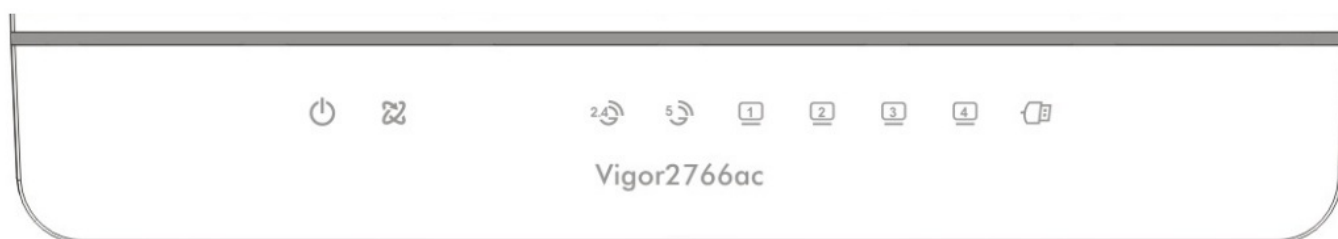 


 **Note** Remove the protective film from the router before use to ensure ventilation.

Panel Explanation

 Vigor2766ac

 




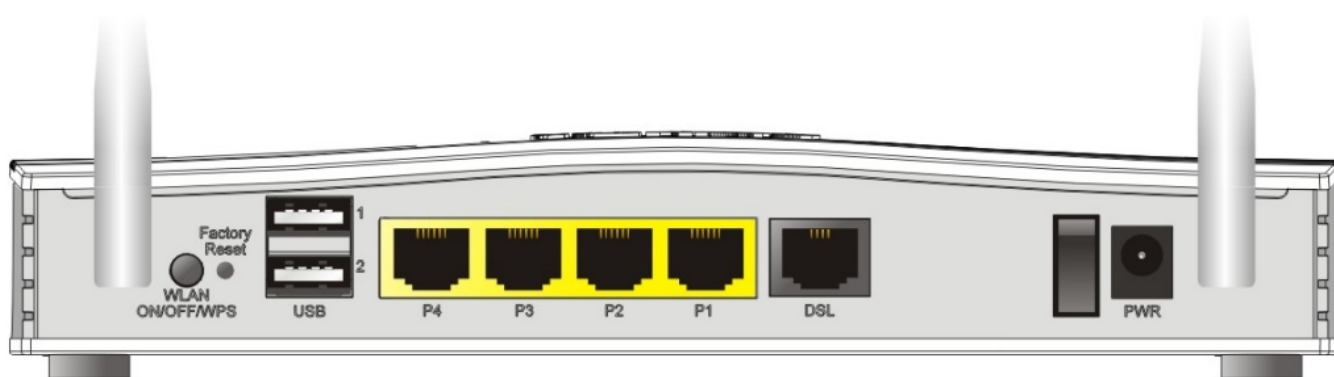



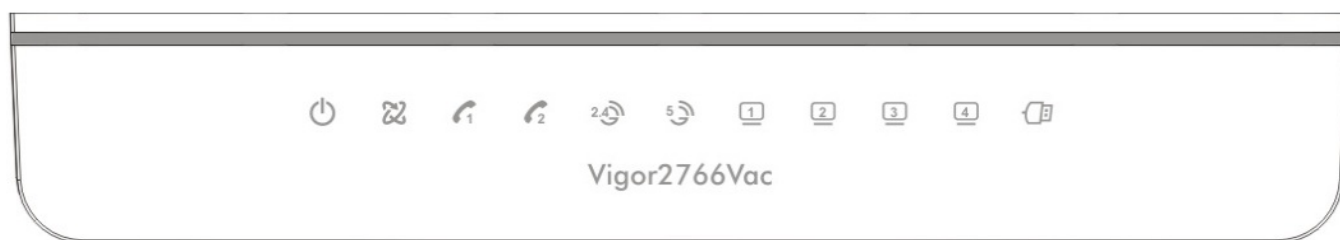


LED	Status		Explanation
(Activity) 	Blinking		The router is powered on and running normally.
	Off		The router is powered off.
(DSL) 	Orange	On	The DSL link up, waiting for the Internet connection.
		Blinking	Slowly – The DSL connection is ready for training. Quickly – The DSL connection is synchronizing.
	Green	On	The router is ready to access to the Internet through DSL link.
		Blinking	The data is transmitting.
(Wireless LAN On/Off/WPS) 	On (Green)		The wireless access point is ready.
	Blinking (Green)		The data is transmitting via wireless connection based on the rate of 2.4GHz.
	Blinking (Orange)		Blinks with one second cycle for two minutes. The WPS function is active.
	Off		The wireless access point is turned off.
(Wireless LAN On/Off/WPS) 	On (Green)		The wireless access point is ready.
	Blinking (Green)		The data is transmitting via wireless connection based on the rate of 5GHz.
	Blinking (Orange)		Blinks with one second cycle for two minutes. The WPS function is active.
(LAN1/2/3/4) 	On		The LAN port is connected.
	Blinking		The data is transmitting.
	Off		The LAN port is disconnected.
(USB) 	On		A USB device is connected and active.
	Blinking		The data is transmitting.




Interface	Description
WLAN ON/OFF/WPS	<p>WLAN On – Press the button and release it within 2 seconds. When the wireless function is ready, the green LED will be on.</p> <p>WLAN Off – Press the button and release it within 2 seconds to turn off the WLAN function. When the wireless function is not ready, the LED will be off.</p> <p>WPS – When WPS function is enabled by web user interface, press this button for more than 2 seconds to wait for client's device making network connection through WPS.</p>
Factory Reset	<p>Restore the default settings.</p> <p>Usage: Turn on the router (ACT LED is blinking). Press the hole and keep for more than 5 seconds. When you see the ACT LED begins to blink rapidly than usual, release the button. Then the router will restart with the factory default configuration.</p>
USB1~USB2	Connector for a USB device (for 3G/4G USB Modem or printer).
P1~P4	Connectors for local networked devices.
DSL	Connector for accessing the Internet.
I/O	Power Switch.
PWR	Connector for a power adapter.

Vigor2766Vac



LED	Status		Explanation
(Activity) 	Blinking		The router is powered on and running normally.
	Off		The router is powered off.
(DSL) 	Orange	On	The DSL link up, waiting for the Internet connection.
		Blinking	Slowly – The DSL connection is ready for training. Quickly – The DSL connection is synchronizing.
	Green	On	The router is ready to access to the Internet through DSL link.
		Blinking	The data is transmitting.
 	On		The phone connected to this port is off-hook.
	Off		The phone connected to this port is on-hook.
	Blinking		A phone call comes.
(Wireless LAN On/Off/WPS) 	On (Green)		The wireless access point is ready.
	Blinking (Green)		The data is transmitting via wireless connection based on the rate of 2.4GHz.
	Blinking (Orange)		Blinks with one second cycle for two minutes. The WPS function is active.
	Off		The wireless access point is turned off.
(Wireless LAN On/Off/WPS) 	On (Green)		The wireless access point is ready.
	Blinking (Green)		The data is transmitting via wireless connection based on the rate of 5GHz.
	Blinking (Orange)		Blinks with one second cycle for two minutes. The WPS function is active.
(LAN1/2/3/4)  	On		The LAN port is connected.
	Blinking		The data is transmitting.
	Off		The LAN port is disconnected.
(USB) 	On		A USB device is connected and active.
	Blinking		The data is transmitting.

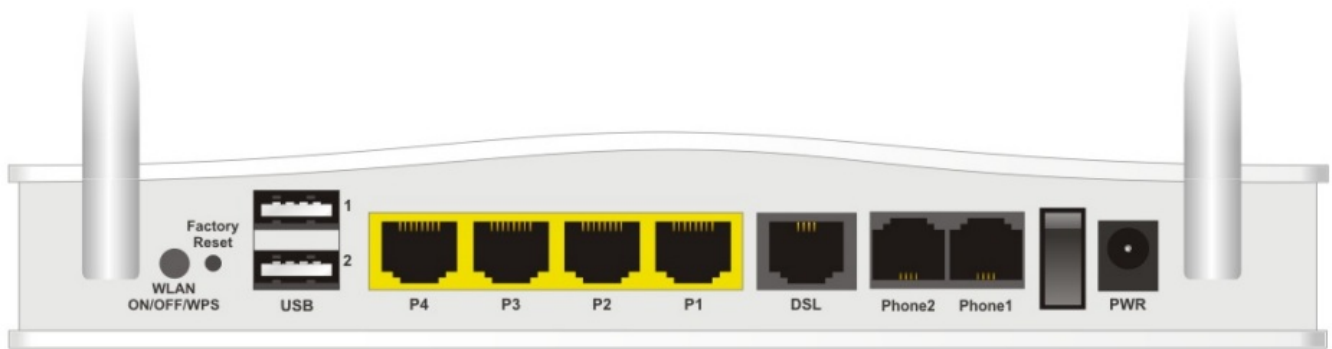 

Interface	Description
WLAN ON/OFF/WPS	<p>WLAN On – Press the button and release it within 2 seconds. When the wireless function is ready, the green LED will be on.</p> <p>WLAN Off – Press the button and release it within 2 seconds to turn off the WLAN function. When the wireless function is not ready, the LED will be off.</p> <p>WPS – When WPS function is enabled by web user interface, press this button for more than 2 seconds to wait for client's device making network connection through WPS.</p>
Factory Reset	<p>Restore the default settings.</p> <p>Usage: Turn on the router (ACT LED is blinking). Press the hole and keep for more than 5 seconds. When you see the ACT LED begins to blink rapidly than usual, release the button. Then the router will restart with the factory default configuration.</p>
USB1~USB2	Connector for a USB device (for 3G/4G USB Modem or printer).
P1~P4	Connectors for local networked devices.
DSL	Connector for accessing the Internet.
Phone2/Phone1	Connector of analog phone for VoIP communication.
I/O	Power Switch.
PWR	Connector for a power adapter.

Hardware Installation

 
This section will guide you to install the router through hardware connection and configure the router's settings through web browser.

Before starting to configure the router, you have to connect your devices correctly.

Network Connection

1. Connect the DSL interface to the land line jack with a DSL line cable.
2. Connect one port of 4-port switch to your computer with a RJ-45 cable. This device allows you to connect 4 PCs directly.
3. Connect detachable antennas to the router.
4. Connect one end of the power cord to the power port of this device. Connect the other end to the wall outlet of electricity.
5. Power on the router.

6. Check the ACT and DSL, LAN LEDs to assure network connection.

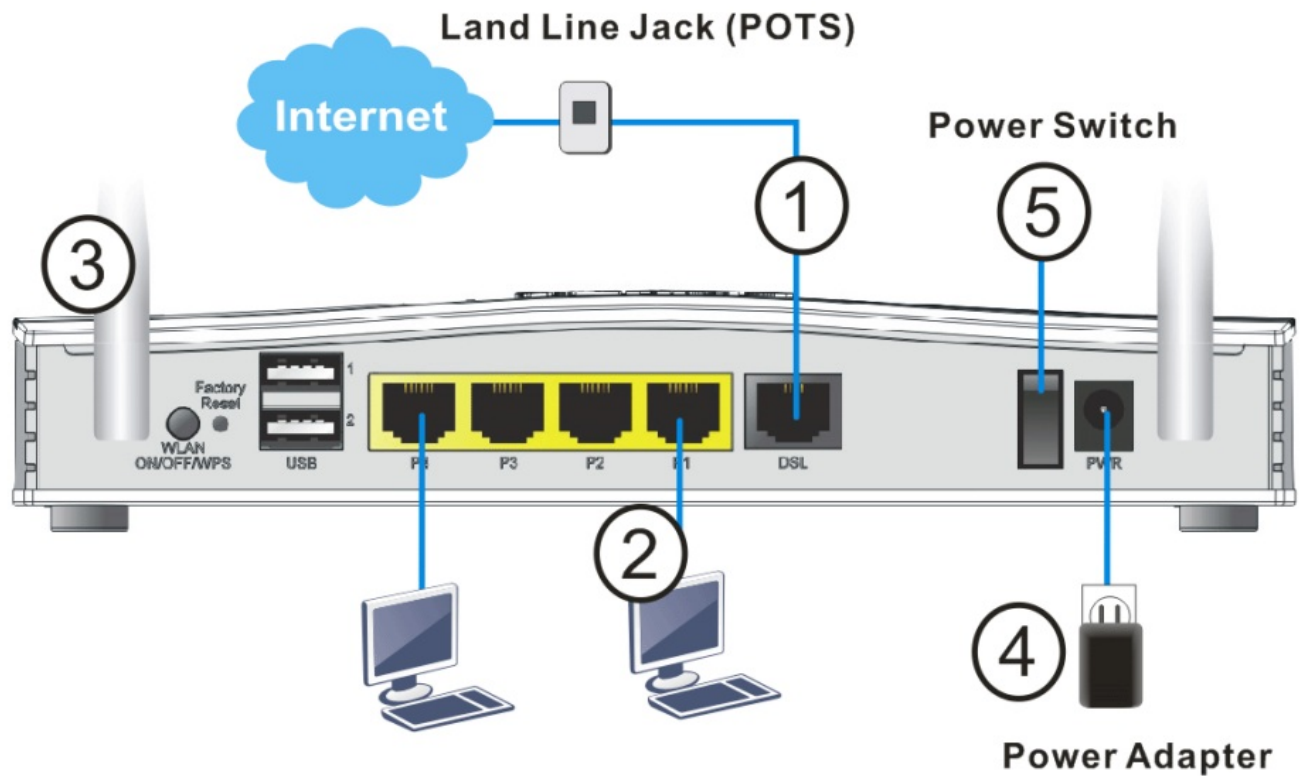



(For the detailed information of LED status, please refer to section 2.1.)

Wall-Mounted Installation

Vigor router has keyhole type mounting slots on the underside.

 1. Drill two holes on the wall. The distance between the holes shall be 168mm.
2. Fit screws into the wall using the appropriate type of wall plug.
3. With the screws installed, the router can be slotted into place.

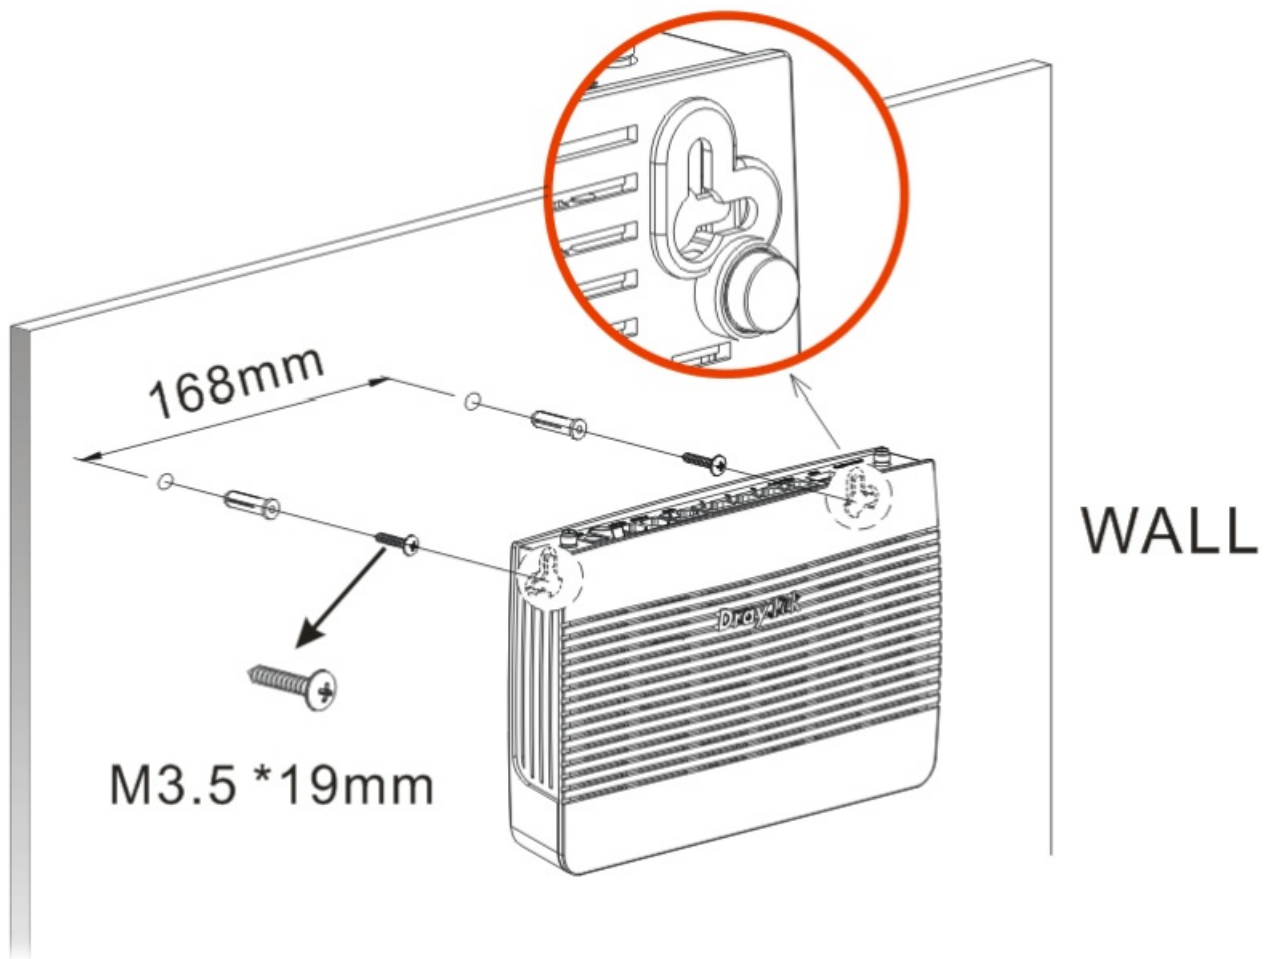

 **Note** The recommended drill diameter shall be 6.5mm (1/4").


4. When you finished about procedure, the router has been mounted on the wall firmly.

Software Configuration

To access Internet, please finish basic configuration after completing the hardware installation.

The Quick Start Wizard is designed for you to easily set up your router for Internet access. You can directly access the Quick Start Wizard via Web Configurator.

Make sure your PC connects to the router correctly.

 **Note** You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be the same subnet as the default IP address of Vigor router 192.168.1.1. For the detailed information, please refer to the section – Trouble Shooting in the User's Guide.

Open a web browser on your PC and type <http://192.168.1.1>. A pop-up window will open to ask for username and password. Please type "admin/admin" as the Username/Password and click Login. Here, we take Vigor2765 series as an example.

DrayTek
Vigor2766 Series

Login

Username

Password

Language
English

Login

Security Warning: You are logging in without encryption which is not recommended. To login securely [click here](#).

Copyright© 2000-2021 DrayTek Corp. All Rights Reserved.

Now, the Main Screen will pop up. Click Wizards>>Quick Start Wizard.

DrayTek
Vigor2766 Series

Off
IR6

Dashboard
Wizards
Online Status

Search Menu

WAN
LAN
Hotspot Web Portal
Routing
NAT
Hardware Acceleration
Firewall
User Management
Objects Setting
CSM
Bandwidth Management
Applications
VPN and Remote Access
Certificate Management
Mesh
Wireless LAN (2.4 GHz)
Wireless LAN (5 GHz)
USB Application
System Maintenance
Diagnostics

Central Management
AP
External Devices

MyVigor Services
Product Registration
Service Status

All Rights Reserved.

Admin mode
Status: Ready

Dashboard

System Information

Model Name	Vigor2766ac	System Up Time	00:01:03
Router Name	DrayTek	Current Time	Sat Jan 01 2000 00:00:57
Firmware Version	4.3.1.2 STD	Build Date/Time	Sep 29 2021 18:00:32
DSL Version	T2-3-2-3-0-2	LAN MAC Address	14-49-BC-1F-DB-2B

IPv4 LAN Information

LAN	IP Address	DHCP	LAN	IP Address	DHCP
LAN1	192.168.1.1/24	v	LAN2	192.168.2.1/24	v
LAN3	192.168.3.1/24	v	LAN4	192.168.4.1/24	v
IP Routed Subnet	192.168.0.1/24	v			

IPv4 Internet Access

WAN	Line / Mode	IP Address	MAC Address	Up Time
WAN1	VDSL2 / PPPoE	Disconnected	14-49-BC-1F-DB-29	00:00:00
WAN2	Ethernet / ---	Disconnected	14-49-BC-1F-DB-2A	00:00:00
WAN3	USB / ---	Disconnected	14-49-BC-1F-DB-2B	00:00:00

Interface

DSL	Connected	Down Stream: 0Kbps / Up Stream: 0Kbps
WAN	Connected: 0	WAN1 WAN2 WAN3
LAN	Connected: 0	Port1 Port2 Port3 Port4
WLAN	Connected: 0	
WLAN5G	Connected: 0	
USB	Connected: 0	USB 1 USB 2

Security

VPN	Connected: 0	Remote Dial-In User / LAN to LAN
MyVigor	Activate: 0	
DOS	Attack Detected	
RootCA		

Quick Access

System Status
Dynamic DNS
TR-069
User Management
IM/VPN Block
Schedule
SysLog / Mail Alert
RADIUS
Firewall Object Setting
Data Flow Monitor

Certificate Status

Expired (0)
Expire within 30 days (0)
Unexpired (0)
OK (0)
Not Valid Yet (0)
View More



Note The home page will change slightly in accordance with the router you have.

The first screen of Quick Start Wizard is entering login password. After typing the password, please click Next.

Quick Start Wizard

- Enter login password

Please enter an alpha-numeric string as your **Password** (Max 83 characters)

Old Password

New Password

Confirm Password

Password Strength: Weak **Medium** Strong

Strong password requirements:

1. Have at least one upper-case letter and one lower-case letter.
2. Including non-alphanumeric characters is a plus.

Hint: If you want to keep the password unchanged, leave the password blank and press "Next" button to skip this process.

On the next page as shown below, please select the WAN interface that you use.

If DSL interface is used, please choose WAN1; if Ethernet interface is used, please choose WAN2; if 3G USB modem is used, please choose WAN3. Then click Next for next step. WAN1, WAN2 and WAN3 will bring up different configuration page. Here, we take WAN1 (ADSL/VDSL2/G. fast) as an example.

- WAN Interface

WAN Interface:

Display Name:

Physical Mode: ADSL / **VDSL2** / G.fast

DSL Mode:

Physical Type:

VLAN Tag insertion(ADSL):

VLAN Tag insertion(VDSL2/G.fast):

On the next page as shown below, please select the appropriate protocol according to the information from your ISP. For example, you should select PPPoE mode if the ISP provides you PPPoE interface. Then click Next for next step.

PPPoE/PPPoA

1. Choose WAN1 as WAN Interface and click the Next button; you will get the following page.

Connect to internet

WAN 1

Protocol PPPoE / PPPoA ▼

For ADSL Only:

Encapsulation PPPoA VC MUX ▼

VPI 0

VCI 38

Fixed IP ☐ Yes ☒ No(Dynamic IP)

IP Address

Subnet Mask

Default Gateway

Primary DNS 8.8.8.8

Second DNS 8.8.4.4

< Back Next > Finish Cancel

2. After finished the above settings, simply click Next.

Set PPPoE/PPPoA

WAN 1

Service Name (optional) 2766

Username 84005755@hinet.net

Password *****

Confirm Password *****

< Back Next > Finish Cancel

3. Please manually enter the Username/Password provided by your ISP. Then click Next for viewing summary of such connection.

Please confirm your setting

WAN Interface:	WAN1
Physical Mode:	ADSL / VDSL2 / G.fast
VPI:	0
VCI:	38
Protocol / Encapsulation:	PPPoA / VCMUX
Fixed IP:	No
Primary DNS:	8.8.8.8
Secondary DNS:	8.8.4.4

< Back

Next >

Finish

Cancel

4. Click Finish. A page of Quick Start Wizard Setup OK!!! will appear. Then, the system status of this protocol will be shown.
5. Now, you can enjoy surfing on the Internet.

MPoA / Static or Dynamic IP

1. Choose WAN1 as WAN Interface and click the Next button; you will get the following page.

Connect to Internet

WAN 1

Protocol

MPoA / Static or Dynamic IP ▼

For ADSL Only:

Encapsulation

1483 Routed IP VC-Mux (IPoA) ▼

VPI

0

VCI

38

Fixed IP

☐ Yes ☒ No(Dynamic IP)

IP Address

Subnet Mask

Default Gateway

Primary DNS

8.8.8.8

Second DNS

8.8.4.4

< Back

Next >

Finish

Cancel

2. Please type in the IP address/mask/gateway information originally provided by your ISP. Then click Next for viewing summary of such connection.
please confirm setting

WAN Interface:	WAN1
Physical Mode:	ADSL / VDSL2 / G.fast
VPI:	0
VCI:	38
Protocol / Encapsulation:	1483 Route VCMUX
Fixed IP:	No
Primary DNS:	8.8.8.8
Secondary DNS:	8.8.4.4

[< Back](#)[Next >](#)[Finish](#)[Cancel](#)

- Click Finish. A page of Quick Start Wizard Setup OK!!! will appear. Then, the system status of this protocol will be shown.
- Now, you can enjoy surfing on the Internet.

Customer Service

If the router cannot work correctly after trying many efforts, please contact your dealer/DrayTek for further help right away. For any questions, please feel free to send e-mail to "support@draytek.com".

Be a Registered Owner

Web registration is preferred. You can register your Vigor router via

<https://myvigor.draytek.com>.

 
Firmware & Tools Updates

Due to the continuous evolution of DrayTek technology, all routers will be regularly upgraded. Please consult the DrayTek web site for more information on newest firmware, tools and documents.

<https://www.draytek.com>

DrayTek

Documents / Resources

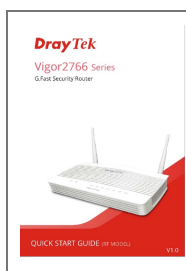

[DrayTek Vigor2766 Series Fast Security Router](#) [pdf] User Guide

Vigor2766 Series Fast Security Router, Vigor2766 Series, Fast Security Router, Security Router , Router

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)