



DrayTek Vigor2915 Series Dual-WAN Security Router User Guide

[Home](#) » [DrayTek](#) » DrayTek Vigor2915 Series Dual-WAN Security Router User Guide 

Vigor2915 Series Dual-WAN Security Router Quick Start Guide (For RF Model)

Version:1.0

Firmware Version: V4.0.2

(For future updates, please visit the DrayTek website)

Date: March 5, 2020, i

Intellectual Property Rights (IPR) Information

Copyrights

© All rights reserved. This publication contains information that is protected by copyright. No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders.

Trademarks

The following trademarks are used in this document:

- Microsoft is a registered trademark of Microsoft Corp.
- Windows, Windows 95, 98, Me, NT, 2000, XP, Vista, 7, 8 and Explorer are trademarks of Microsoft Corp.
- Apple and Mac OS have registered trademarks of Apple Inc.
- Other products may be trademarks or registered trademarks of their respective manufacturers.

Contents

- [1 Safety Instructions and Approval](#)
- [2 Package Content](#)
- [3 P3. Panelanel Explanation](#)
 - [3.1 Vigor2915ac](#)
 - [3.2 Vigor2915Fac](#)
- [4 Hardware Installation](#)
 - [4.1 Network Connection](#)
 - [4.2 Wall-Mounted Installation](#)
- [5 Software Configuration](#)
- [6 PPPoE](#)
- [7 PPTP/L2TP](#)
- [8 Static IP](#)
- [9 DHCP](#)
- [10 Customer Service](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

Safety Instructions and Approval

Safety Instructions

- Read the installation guide thoroughly before you set up the router.
- The router is a complicated electronic unit that may be repaired only by authorized and qualified personnel. Do not try to open or repair the router yourself.
- Do not place the router in a damp or humid place, e.g. a bathroom.
- Do not stack the routers.
- The router should be used in a sheltered area, within a temperature range of 0 to +40 Celsius.
- Do not expose the router to direct sunlight or other heat sources.

The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoor to prevent electronic shock hazards.
- Keep the package out of reach of children.
- When you want to dispose of the router, please follow local regulations on the conservation of the environment.

Warranty

We warrant to the original end-user (purchaser) that the router will be free from any defects in workmanship or materials for a period of two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary to restore the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value, and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects that do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.



Declaration of Conformity

Hereby, DrayTek Corporation declares that the radio equipment type Vigor2915 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:


<http://www.draytek.com.tw/ftp/Vigor2915/Document/CE/>

Manufacturer: DrayTek Corp.

Address: No. 26, Fu Shing Road, HuKou Township, HsinChu Industrial Park, Hsin-Chu County, Taiwan 303

Product: Vigor2915 Series

Frequency Information for Europe area:

2.4G WLAN	2412MHz – 2472 MHz, max. TX power: 19.98dBm
5G WLAN	5170MHz – 5250 MHz, max. TX power: 22 dBm
	Requirements in AT/BE/BG/CZ/DZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/ CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK/TR/FI/SE/CH/ UK/HR. 5170MHz~5250MHz is for indoor use only.

(*1: for 2.4G WLAN model; *2: for 5G WLAN model;)

This product is designed for a 2.4GHz /5GHz WLAN network throughout the EC region.



Regulatory Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device may accept any interference received, including interference that may cause undesired operation.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

USA Local Representative	Company name Address	ABP International Inc.		
	ZIP Code	13988 Diplomat Drive Suite 180 Dallas TX 75234		
	Contact Person	75234	E-mail	rmesser@abptech.com
	Contact Person	Mr. Robert Messer	Tel.	19728311600

Introduction

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The antenna/transmitter should be kept at least 20 cm away from the human body.

For more updates, please visit www.draytek.com.

Vigor2915 series is a broadband router that integrates IP layer QoS, NAT session/bandwidth management to help users control works well with large bandwidth.

By adopting a hardware-based VPN platform and hardware encryption of AES/DES/3DES, and hardware key hash of SHA-1/MD5, the router increases the performance of VPN greatly and offers several protocols (such as IPSec/PPTP/L2TP) with VPN tunnels.



 
The object-based design used in SPI (Stateful Packet Inspection) firewall allows users to set firewall policy with ease. CSM (Content Security Management) provides users control and management in IM (Instant Messenger) and P2P (Peer to Peer) more efficiently than before. In addition, DoS/DDoS prevention and URL/Web content filter strengthen the security outside and control inside.

Vigor2915 series supports USB interface for connecting a USB printer to share printing function, 3G/4G USB modem for network connection, or connectivity for network FTP service.




Package Content

Take a look at the package content. If there is anything missed or damaged, please contact DrayTek or the dealer immediately.

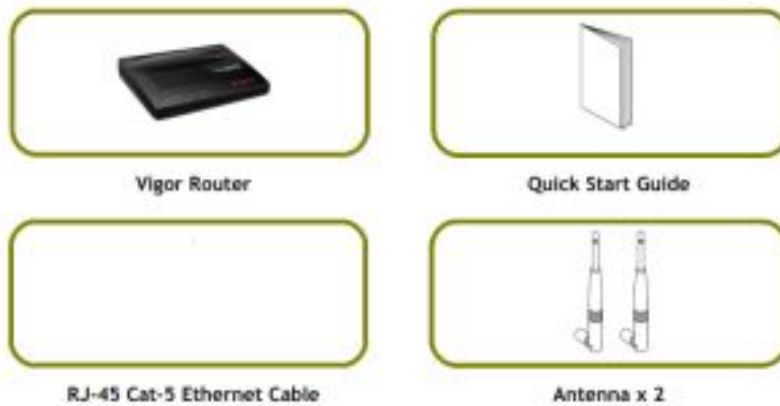

 The type of the power adapter depends on the country that the router that will be installed. * The maximum power consumption is 18 Watt.

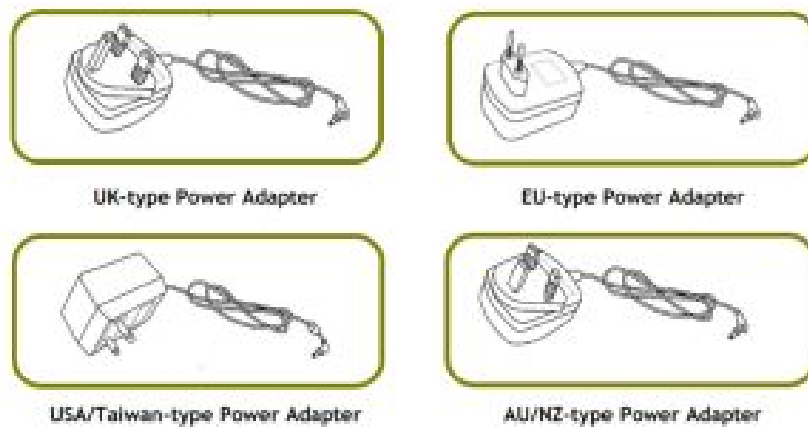

P3. Panel Explanation

Vigor2915ac



LED	Status	Explanation
ACT	Blinking	The router is powered on and running normally.
	Off	The router is powered off.
Internet	On	Internet connection is ready.
	Off	Internet connection is not ready.
	Blinking	The data is transmitted.
W2/P4	On	The WAN/LAN port is connected.
	Off	The WAN/LAN port is disconnected.
	Blinking	The data is transmitted.
P3-P1	On	The LAN port is connected.
	Off	The LAN port is disconnected.
	Blinking	The data is transmitted.
W1	On	The WAN port is connected.
	Off	The WAN port is disconnected.
	Blinking	The data is transmitteg.
USB	On	USB device is connected and ready for use.
	Blinking	The data is transmitting.
WISPr	On	Wi-Fi WAN connected.
	Off	Wi-Fi WAN disconnected.
	Blinking	The data is transmitting.
2.4G/5G	On	Wireless access point with a bandwidth of 2.4GHz/5GHz is ready.
	Blinking	It will blink slowly while wireless traffic goes through. ACT and WLAN LED s blink quickly and simultaneously when WPS is working and will return to normal condition after two minutes. (You need to set up WPS within 2 min utes.)




Interface	Description
PWR	Connector for a power cord.
ON/OFF	Power Switch.
USB	Connector for a USB device (for 3G/4G USB Modem or printer or Environmental Thermometer).
W1	Connector for local network devices or modem for accessing Internet.
P1-P3	Connecters for local network devices.
W2/P4	The function of this connector is adjustable and controlled by web user interface. It can perform the job as a WAN port (for accessing the Internet) or as a LAN port (for local network devices).
Wireless LAN ON/OFF/WPS	Press the “Wireless LAN ON/OFF/WPS” button once to wait for a client device to make a network connection through WPS. Press the “Wireless LAN ON/OFF/WPS” button twice to enable (WLAN LED on) or disable (WLAN LED off) wireless connection.
Factory Reset	Restore the default settings. Usage: Turn on the router (ACT LED is blinking). Press the hole and keep it for more than 5 seconds. When you see the ACT LED begin to blink rapidly than usual, release the button. Then the router will restart with the factory default configuration.

Vigor2915Fac



LED	Status	Explanation
ACT	Blinking	The router is powered on and running normally.
	Off	The router is powered off.
Internet	On	Internet connection is ready.
	Off	Internet connection is not ready.
	Blinking	The data is transmitting.
W2/P4	On	The WAN/LAN port is connected.
	Off	The WAN/LAN port is disconnected.
	Blinking	The data is transmitting.
P3-P1	On	The LAN port is connected.
	Off	The LAN port is disconnected.
	Blinking	The data is transmitting.
W1	On	SFP module is plugged and the fiber link is up.
	Off	SFP module is unplugged or the fiber link is down.
	Blinking	The data is transmitting.
USB	On	USB device is connected and ready for use.
	Blinking	The data is transmitting.
WISPr	On	Wi-Fi WAN connected.
	Off	Wi-Fi WAN disconnected.
	Blinking	The data is transmitting.
2.4G/5G	On	The wireless access point with bandwidth of 2.4GHz/5GHz is ready.
	Blinking	It will blink slowly while wireless traffic goes through. ACT and WLAN LEDs blink quickly and simultaneously when WPS is working and will return to normal condition after two minutes. (You need to set up WPS within 2 minutes.)



Interface PWR	Description Connector for a power cord.
ON/OFF	Power Switch.
USB	Connector for a USB device (for 3G/4G USB Modem or printer or Environmental Thermometer).
W1	Fiber connection (1G) for accessing the Internet. 
P1-P3	Connecters for local network devices.
W2/P4	The function of this connector is adjustable and controlled by web user interface. It can perform the job as a WAN port (for accessing Internet) or as a LAN port (for local network devices).
Wireless LAN ON/OFF/WPS	Press the “Wireless LAN ON/OFF/WPS” button once to wait for a client device to make network connection through WPS. Press the “Wireless LAN ON/OFF/WPS” button twice to enable (WLAN LED on) or disable (WLAN LED off) wireless connection.
Factory Reset	Restore the default settings. Usage: Turn on the router (ACT LED is blinking). Press the hole and keep for more than 5 seconds. When you see the ACT LED begins to blink rapidly than usual, release the button. Then the router will restart with the factory default configuration.

 
Hardware Installation

This section will guide you to install the router through a hardware connection and configure the router's settings through web browser.

Before starting to configure the router (taking Vigor2915ac for example), you have to connect your devices correctly.

Network Connection


1. Connect the cable Modem/DSL Modem/Media Converter to any WAN port of router with Ethernet cable (RJ-45).
2. Connect one end of an Ethernet cable (RJ-45) to one of the LAN ports (P1~P4) of the router and the other end of the cable (RJ-45) into the Ethernet port on your computer.
3. Connect one end of the power cord to the router's power port on the rear panel, and the other side into a wall outlet.
4. Power on the device by pressing down the power switch on the rear panel.
5. The system starts to initiate. After completing the system test, the ACT LED will light up and start blinking.
(For the detailed information of LED status, please refer to section 3. Panel Explanation)

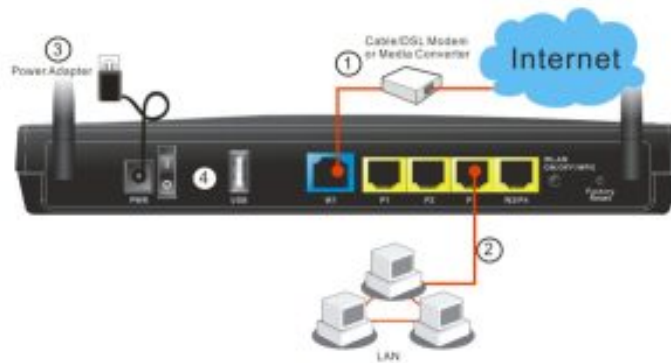

Wall-Mounted Installation

Vigor router has keyhole-type mounting slots on the underside.

 1. A template is provided on the Vigor router packaging box to enable you to space the screws correctly on the wall.
2. Place the template on the wall and drill the holes according to the recommended instruction.
3. Fit screws into the wall using the appropriate type of wall plug.
4. When you finished about the procedure, the router has been mounted on the wall firmly.

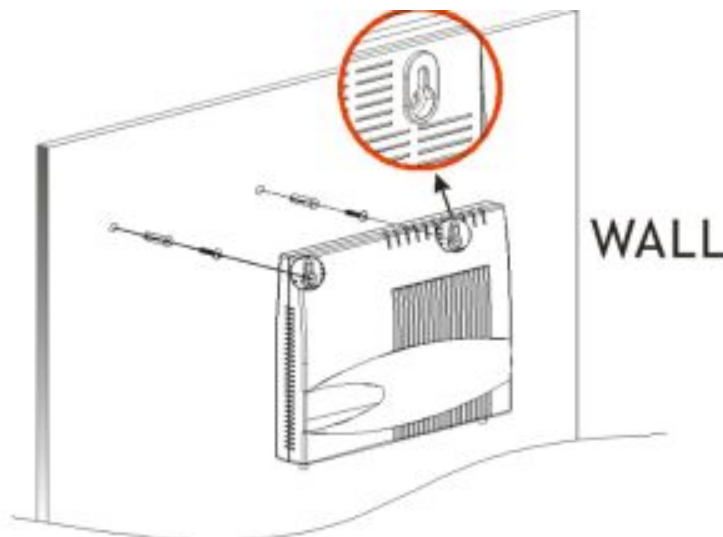

Note The recommended drill diameter shall be 6.5mm (1/4").

Software Configuration

To access the Internet, please finish the basic configuration after completing the hardware installation. The QuickStart Wizard is designed for you to easily set up your router for Internet access. You can directly access the QuickStart Wizard via Web Configurator.

1. Make sure your PC connects to the router correctly.

Note You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be the same subnet as the default IP address of the Vigor router 192.168.1.1. For detailed information, please refer to the later section – Trouble Shooting of the guide.

2. Open a web browser on your PC and type <http://192.168.1.1>. A pop-up window will open to ask for a

username and password. Please type “admin/admin” as the Username/Password and click Login.




The image shows the login page for a DrayTek Vigor2915 Series router. At the top, there is a red banner with the DrayTek logo and "Vigor2915 Series". Below this, the word "Login" is displayed in a black box. The login form consists of two input fields: "Username" with the text "admin" and "Password" with masked characters "*****". A "Login" button is positioned below the password field. A security warning message states: "Security Warning: You are logging in without encryption which is not recommended. To login securely [click here](#)." At the bottom, the copyright notice reads: "Copyright © 2000-2019 DrayTek Corp. All Rights Reserved."



Note

If you fail to access to the web configuration, please go to “Trouble Shooting” for detecting and solving your problem.

 - Now, the Main Screen will pop up. Click Wizards>>Quick Start Wizard.

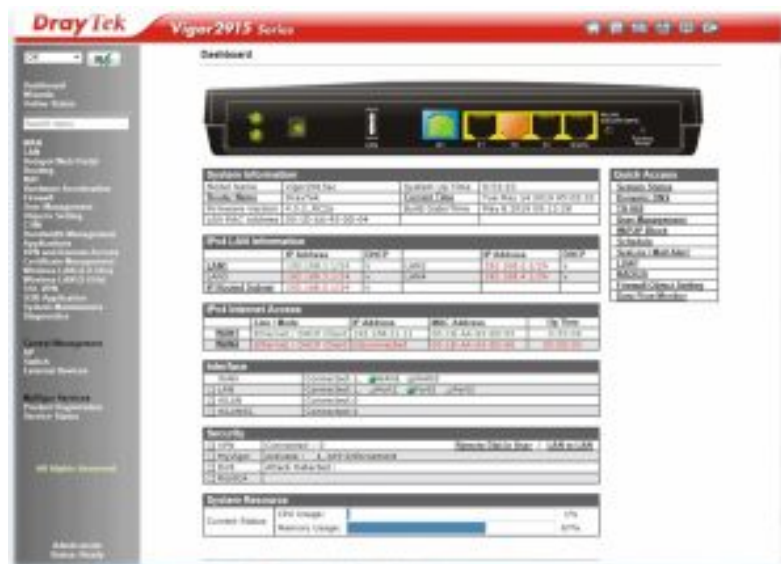


The image shows the main configuration screen of a DrayTek Vigor2915 Series router. The interface is divided into a left sidebar with navigation menus and a main content area. The main content area displays various system information, including a dashboard with a router image, system information (Model Name, Serial No., Firmware Version, etc.), IP address information (LAN, WAN, DMZ), and a table of IP addresses. The sidebar contains sections for System Management, Network Management, and System Information.



Note

The home page will change slightly in accordance with the router you have.

 - Enter the login password on the field of New Password and retype it on the field of Confirm Password. Then click Next to continue.

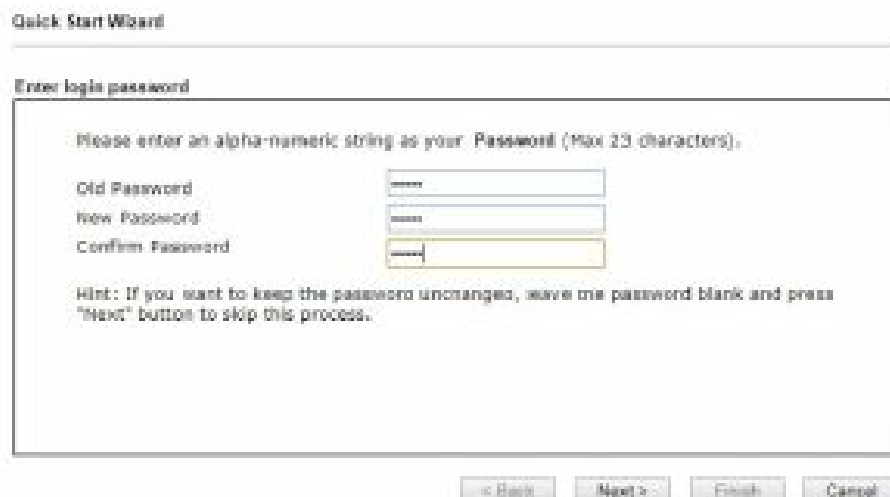

The image shows the "Quick Start Wizard" screen, specifically the "Enter login password" step. The screen prompts the user to "Please enter an alpha-numeric string as your Password (Max 23 characters)." There are three input fields: "Old Password", "New Password", and "Confirm Password". A hint at the bottom states: "Hint: If you want to keep the password unchanged, leave the password blank and press 'Next' button to skip this process." At the bottom of the screen, there are four buttons: "< Back", "Next >", "Finish", and "Cancel".

5. On the next page as shown below, please select the WAN interface that you use. Then click Next for the next step.

The screenshot shows the 'Quick Start Wizard' window with the 'WAN Interface' tab selected. The configuration fields are as follows:

Field	Value
WAN Interface:	WAN1
Display Name:	
Physical Mode:	Ethernet
Physical Type:	Auto-negotiation

At the bottom of the window, there are four buttons: '< Back', 'Next >', 'Finish', and 'Cancel'.

WAN1 (Ethernet/Fiber) and WAN2 (Ethernet) will bring up different configuration page. Here we take WAN2 (Ethernet) as an example. After choosing WAN2, please specify the physical type. Then, click Next. On the next page as shown below, please select the appropriate Internet access type according to the information from your ISP. For example, you should select PPPoE mode if the ISP provides you PPPoE interface.

PPPoE

1. Choose WAN2 as the WAN Interface and click the Next button. The following page will be open for you to specify Internet Access Type.

The screenshot shows the 'Quick Start Wizard' window with the 'Connect to Internet' tab selected for 'WAN 2'. The text reads: 'Select one of the following Internet Access types provided by your ISP:'. The options are:

- ☒ PPPoE
- ☐ PPTP
- ☐ L2TP
- ☐ Static IP
- ☐ DHCP

At the bottom of the window, there are four buttons: '< Back', 'Next >', 'Finish', and 'Cancel'.

2. Click PPPoE as the Internet Access Type. Then click Next to continue.

The screenshot shows the 'PPPoE Client Mode' configuration page for 'WAN 2'. The text reads: 'Enter the user name and password provided by your ISP.' The fields are:

Field	Value
Service Name (Optional)	CHT
Username	84005557@china.net
Password	*****
Confirm Password	*****

At the bottom of the window, there are four buttons: '< Back', 'Next >', 'Finish', and 'Cancel'.

3. Please manually enter the Username/Password provided by your ISP. Click Next for viewing a summary of

such a connection.

Quick Start Wizard

Please confirm your settings:

WAN Interface:	WAN2
Physical Mode:	Ethernet
Internet Access:	DHCP

Click **Back** to modify changes if necessary. Otherwise, click **Finish** to save the current settings and restart the Vigor router.

< Back Next > Finish Cancel

- Click Finish. A page of Quick Start Wizard Setup is OK!!! will appear. Then, the system status of this protocol will be shown.

Quick Start Wizard Setup OK!

- Now, you can enjoy surfing on the Internet.

PPTP/L2TP

- Choose WAN2 as the WAN Interface and click the Next button. The following page will be open for you to specify Internet Access Type.

Quick Start Wizard

Connect to Internet

WAN 2

Select one of the following Internet Access types provided by your ISP.

☐ PPPoE

☐ PPTP

☒ L2TP

☐ Static IP

☐ DHCP

< Back Next > Finish Cancel

- Click PPTP/L2TP as the Internet Access Type. Then click Next to continue.

Quick Start Wizard

PPTP Client Mode

WAN 2

Enter the user name, password, WAN IP configuration and PPTP server IP provided by your ISP.

User Name: 77494727@knet.net

Password:

Confirm Password:

WAN IP Configuration

☐ Obtain an IP address automatically

☒ Specify an IP address

IP Address: 192.16.20.86

Subnet Mask: 255.255.255.0

Gateway: 192.16.20.1

Primary DNS: 8.8.8.8

Second DNS: 8.8.4.4

PPTP Server:

< Back Next > Finish Cancel

3. Please type in the IP address/mask/gateway information originally provided by your ISP. Then click Next for viewing a summary of such a connection.

Quick Start Wizard

Please confirm your settings:

WAN Interface:	WAN2
Physical Mode:	Ethernet
Internet Access:	PPP

Click **Back** to modify changes if necessary. Otherwise, click **Finish** to save the current settings and restart the Vigor router.

< Back Next > Finish Cancel

4. Click Finish. A page of Quick Start Wizard Setup is OK!!! will appear. Then, the system status of this protocol will be shown.

Quick Start Wizard Setup OK!

5. Now, you can enjoy surfing on the Internet.

Static IP

1. Choose WAN2 as the WAN Interface and click the Next button. The following page will be open for you to specify Internet Access Type.

Quick Start Wizard

Connect to Internet

WAN2

Select one of the following Internet Access types provided by your ISP.

- ☐ PPPoE
- ☐ PPTP
- ☐ L2TP
- ☒ Static IP
- ☐ DHCP

< Back Next > Finish Cancel

2. Click Static IP as the Internet Access type. Simply click Next to continue

Quick Start Wizard

Static IP Client Mode

WAN2

Enter the Static IP configuration provided by your ISP.

WAN IP	192.16.20.86
Subnet Mask	255.255.255.0
Gateway	192.16.20.1
Primary DNS	8.8.8.8
Secondary DNS	8.8.4.4 (optional)

< Back Next > Finish Cancel

3. Please type in the IP address information originally provided by your ISP. Then click Next for the next step.

Quick Start Wizard

Please confirm your settings:

WAN Interface:	WAN2
Physical Mode:	Ethernet
Internet Access:	PPPoE

Click **Back** to modify changes if necessary. Otherwise, click **Finish** to save the current settings and restart the Vigor router.

Click Finish. A page of Quick Start Wizard Setup is OK!!! will appear. Then, the system status of this protocol will be shown.

Quick Start Wizard Setup OK!

4. Now, you can enjoy surfing on the Internet.

DHCP

1. Choose WAN2 as WAN Interface and click the Next button. The following page will be open for you to specify Internet Access Type.

Quick Start Wizard

Connect to Internet

WAN 2
Select one of the following Internet Access types provided by your ISP:

☐ PPPoE
☐ PPTP
☐ L2TP
☐ Static IP
☒ DHCP

2. Click DHCP as the Internet Access type. Simply click Next to continue.

Quick Start Wizard

DHCP Client Mode

WAN 2
If your ISP requires you to enter a specific host name or specific MAC address, please enter it in.

Host Name: (optional)

MAC: (optional)

3. After finishing the settings above, click Next for viewing a summary of such a connection.

Quick Start Wizard

Please confirm your settings:

WAN Interface:	WAN2
Physical Mode:	Ethernet
Internet Access:	PPPoE

Click **Back** to modify changes if necessary. Otherwise, click **Finish** to save the current settings and restart the Vigor Router.

- Click Finish. A page of Quick Start Wizard Setup is OK!!! will appear. Then, the system status of this protocol will be shown.

Quick Start Wizard Setup OK!

- Now, you can enjoy surfing on the Internet.

Customer Service

If the router cannot work correctly after trying many efforts, please contact your dealer/DrayTek for further help right away. For any questions, please feel free to send an e-mail to support@draytek.com.

 


Be a Registered Owner

Web registration is preferred. You can register your Vigor router via <http://www.draytek.com>.


Firmware & Tools Updates

Due to the continuous evolution of DrayTek technology, all routers will be regularly upgraded. Please consult the DrayTek website for more information on the newest firmware, tools, and documents. <http://www.draytek.com>

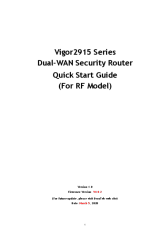Documents / Resources

	<p>DrayTek Vigor2915 Series Dual-WAN Security Router [pdf] User Guide Vigor2915 Series, Dual-WAN Security Router</p>
	<p>DrayTek Vigor2915 Series Dual-WAN Security Router [pdf] User Guide Vigor2915 Series Dual-WAN Security Router, Vigor2915 Series, Dual-WAN Security Router, Security Router, Router</p>
	<p>DrayTek Vigor2915 Series Dual WAN Security Router [pdf] User Guide Vigor2915_RF, Vigor2915 Series Dual WAN Security Router, Vigor2915 Series, Dual WAN Security Router, WAN Security Router, Security Router, Router</p>

References

-  [Home | DrayTek](#)
-  [MyVigor - DrayTek](#)
-  [Home | DrayTek](#)
-  [Index of /](#)