



DrayTek VigorAP 1060C Wireless Access Point User Guide

[Home](#) » [DrayTek](#) » DrayTek VigorAP 1060C Wireless Access Point User Guide 



VigorAP 1060C Wireless Access Point User Guide



VigorAP 1060C 11ax Ceiling AP

Quick Start Guide

Version: 1.3

Firmware Version: V1.4.4

(For future updates, please visit the DrayTek website)

Date: December 17, 2021

Contents

 
- [1 Package Content](#)
- [2 Panel Explanation](#)
- [3 Installation](#)
- [4 Connection and Configuration](#)
- [5 Customer Service](#)
- [6 Safety Instructions and Approval](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Package Content

Take a look at the package content. If there is anything missed or damaged, please contact DrayTek or the dealer immediately.




VigorAP 1060C Main Unit

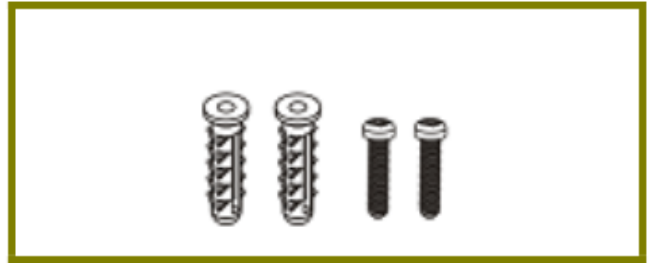


Screw Set
(for wall mounting)



 
Mount Base
(for wall mounting)

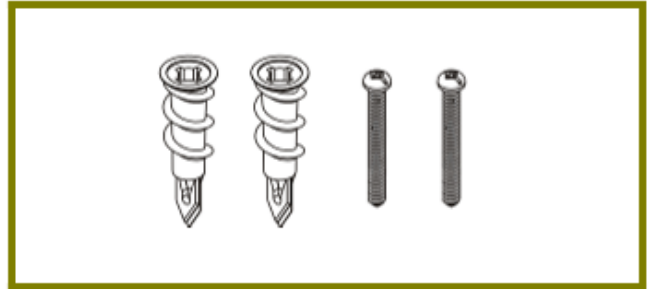

 
Fixings and Screws
(for ceiling mounting)

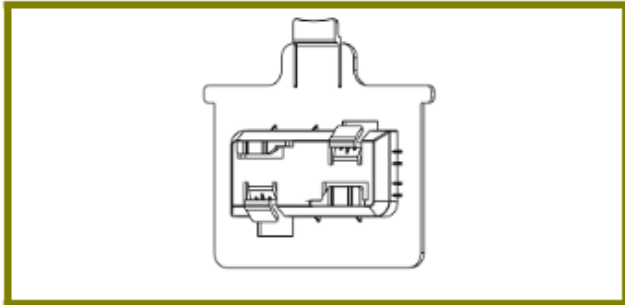


Ceiling Mount Base for 9/16" T-Rail

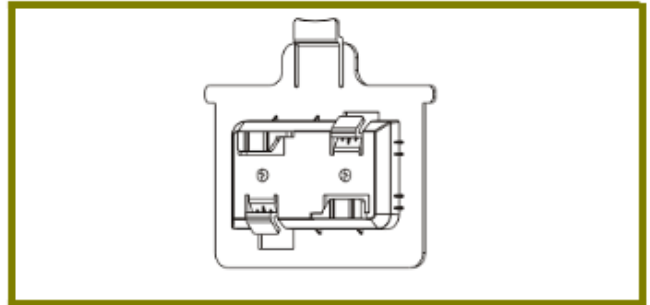 

Ceiling Mount Base for 15/16" T-Rail

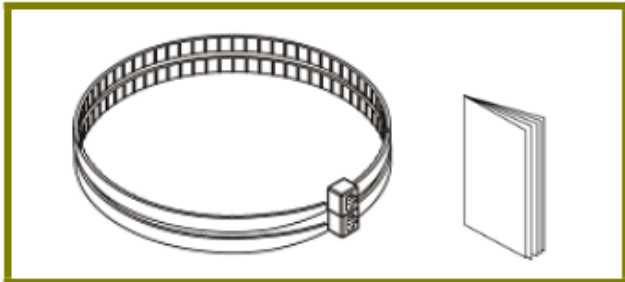 


Cable Tie & Quick Start Guide

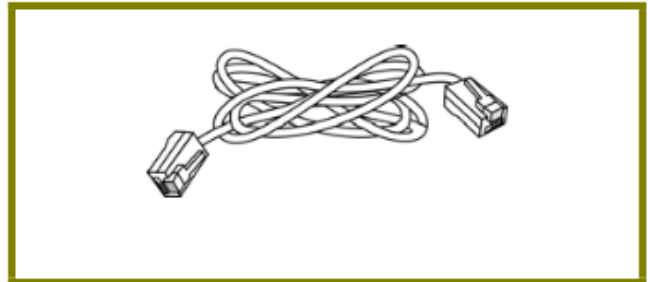 

RJ-45 Cable (Ethernet)

 


Note Power Input: 12V  2.5A

PoE Input: 54V  0.6A

Total Rated Power Consumption: 21 Watts

Panel Explanation

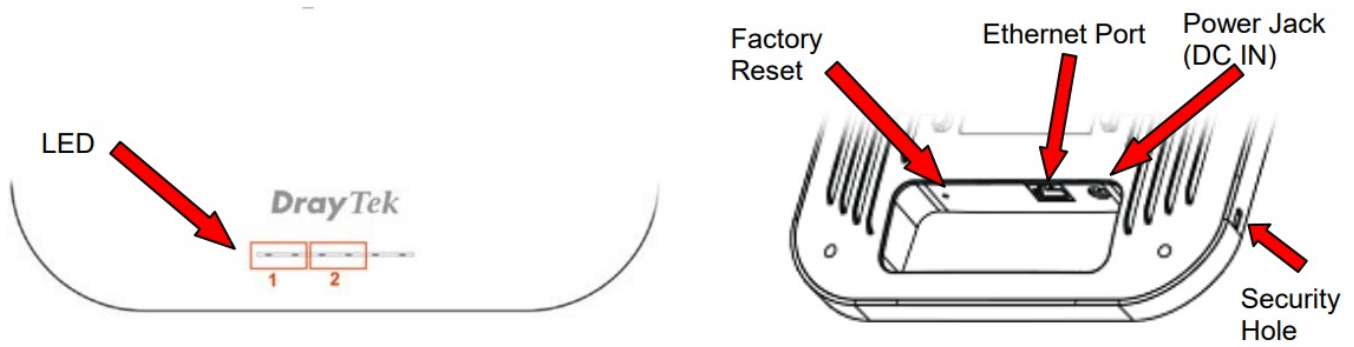

LDE	Status	Explanation
1	On (Blue)	The system is in boot-loader mode.
	Off	The system is not ready or fails.
	Blinking(Blue)	The system is in TFTP mode.
2	Off	The system is ready and can work normally.
	Blinking(Blue)	The system is not ready or fails.

Interface	Explanation
Ethernet Port	Connects to LAN or router.
Power Jack(1 2V 2.5A)	Connector for a power adapter.
Hole	Explanation
Factory Reset	Restores the unit back to factory default settings. To use, insert a small item such as an unbent paperclip into the hole. You will feel the button inside depress gently. Hold it for 5 seconds. The VigorAP will restart with the factory default configuration and the LED will blink blue.
Security Hole	A security hole for installing the anti-theft lock.



Note For the sake of security, make the accessory kit away from children.

 
Installation

VigorAP can be installed in certain locations: wooden ceilings, plasterboard ceilings, light-weighted steel frames, and walls.

3.1 Ceiling-mount Installation (wooden Ceiling)


Determine where the Access Point to be placed and mark the location on the surface for the two mounting holes. Use the appropriate drill bit to drill two holes in the markings and hammer the bolts into the openings.

1. Place the mount base under the wooden ceiling and fasten it on the ceiling with two screws firmly.
2. When the mount base is in place, slide the AP into the slot of the mount base.

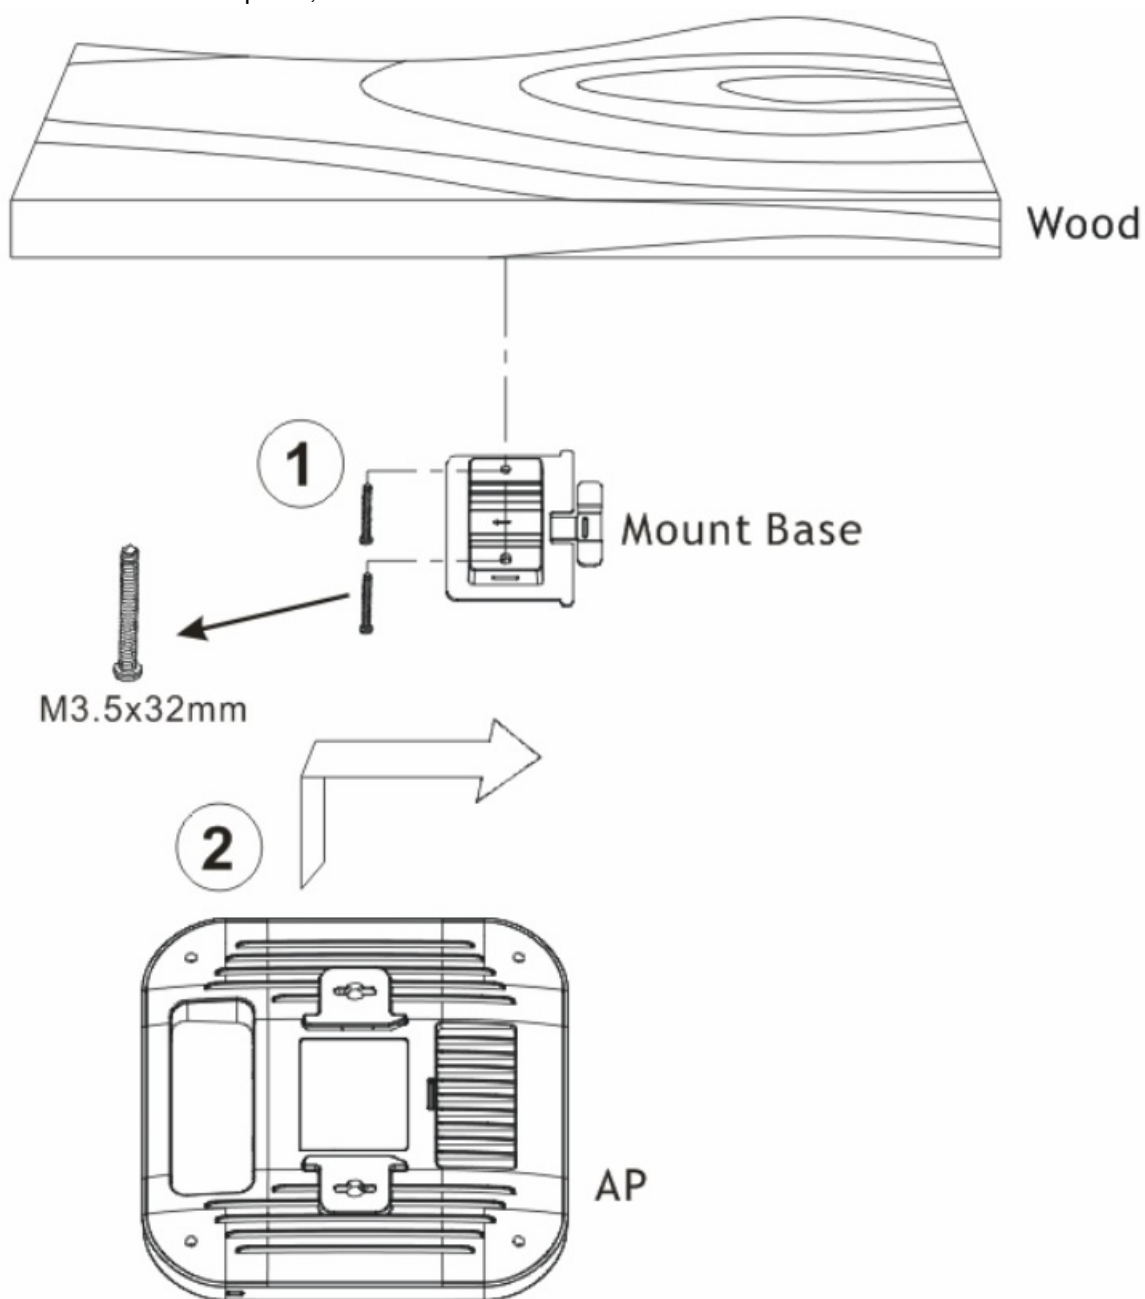

3.1 Ceiling-mount Installation (Plasterboard Ceiling)

 
1. Insert two turnbuckles firmly into the plasterboard.
2. Set the Mount Base in the turnbuckles. Let the screws pass through the Mount Base and insert them into the turnbuckles. Fasten them to offer a more powerful supporting force.
3. When the Mount Base is in place, slide the mount base into the slot of the AP.

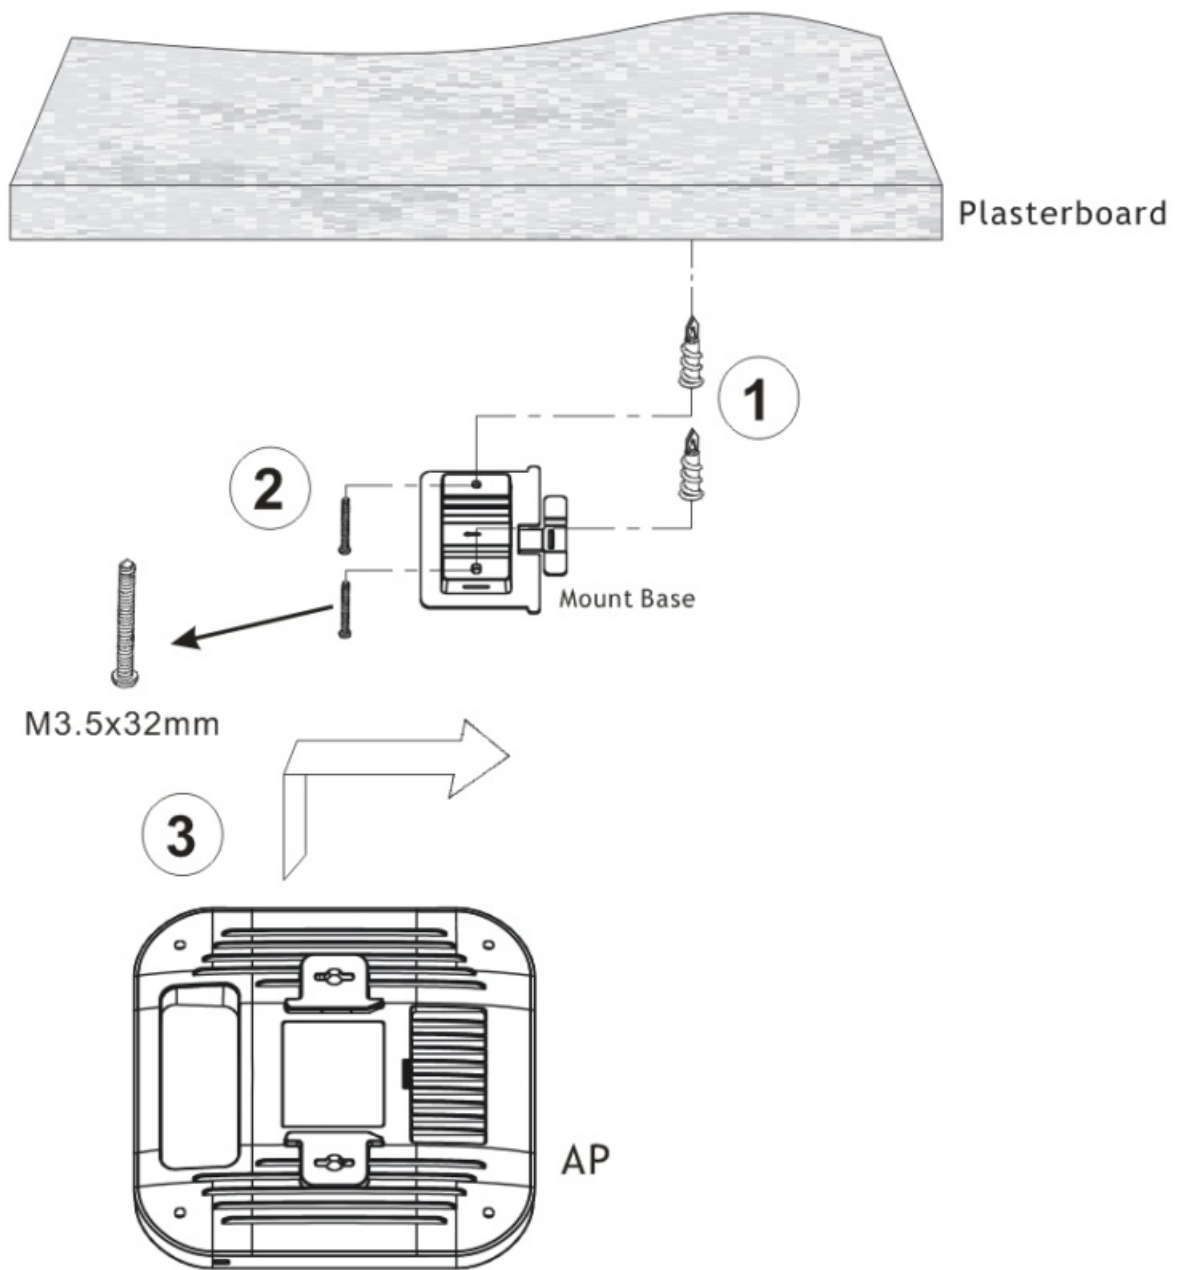


3.3 Suspended Ceiling (Lightweight Steel Frame) Installation

You cannot screw into ceiling tiles as they are weak and not suitable for bearing loads. Your VigorAP is supplied with mounts (Mount Base) which will be used to attach directly to the ceiling frame of your suspended ceiling.

 1. Slide the mount base into the slot of the AP.

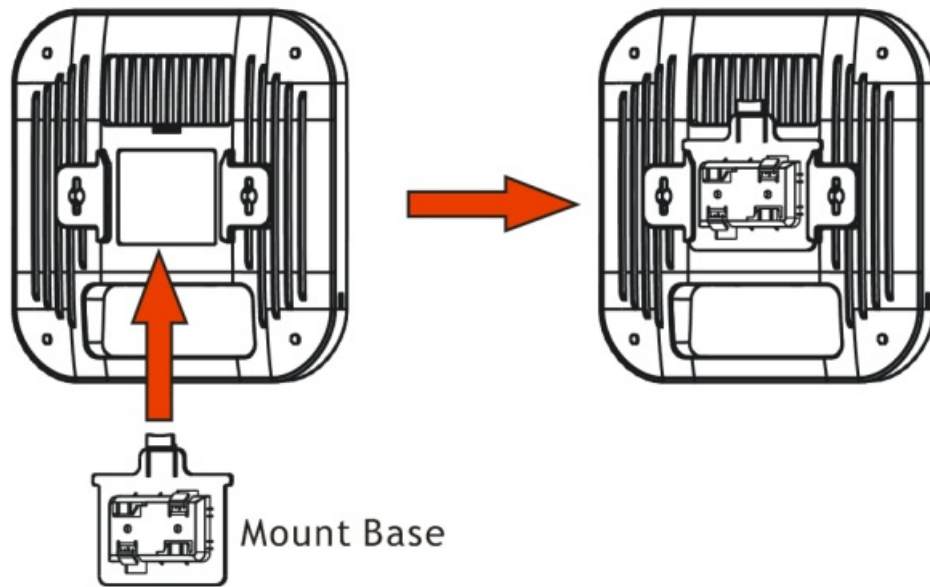

 2. Hold the Access Point with one hand to reach the other hand over the T-Rail sides of the bracket.

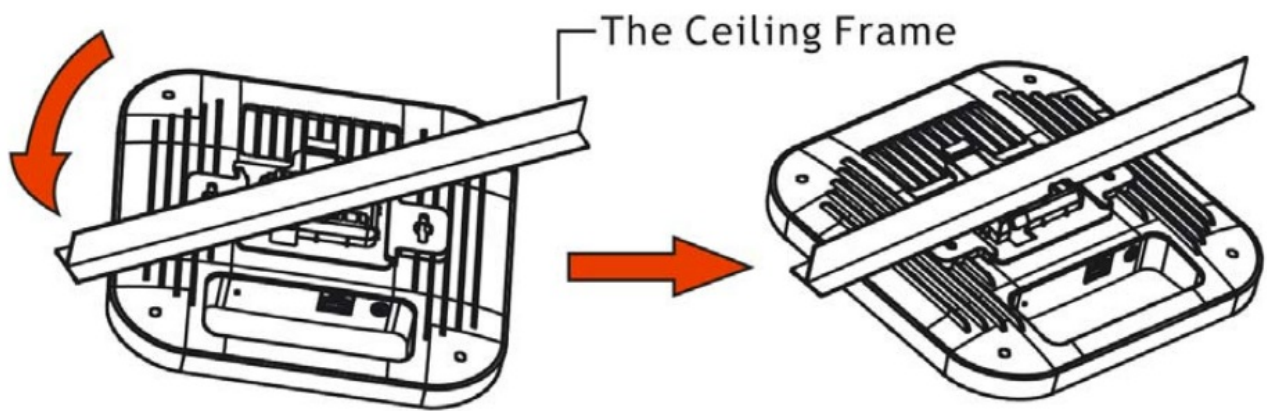

3. Rotate and hook the stationary end of the ceiling mount base onto the T-Rail ceiling frame.



 
Note Warning: The screw set shown below is for wall mounting only. Do not use such set for ceiling mounting due to the danger of falling.



3.4 Wall-Mounted Installation

For wall-mounting, the VigorAP has keyhole-type mounting slots on the underside.

1. Use the appropriate drill bit to drill two holes in the markings and hammer the bolts into the openings.
2. Screw the anchors into the holes until they are flush with the wall; screw the included screws into the anchors.
3. Place the Access Point against the wall with the mounting screw heads.

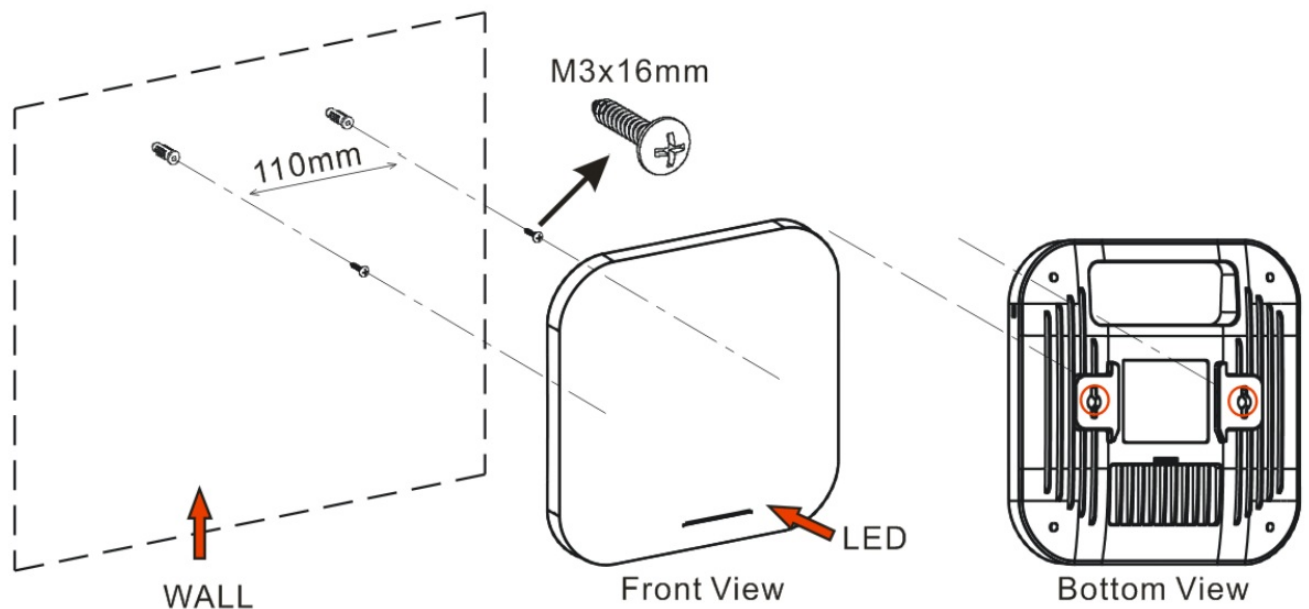


Note The recommended drill diameter is 6.5mm (1 / 4").

Connection and Configuration

4.1 Connect to a Vigor Router using AP Management

Your VigorAP can be used with Vigor routers that support AP management (such as the Vigor2865 or Vigor2927 series). AP Management enables you to monitor and manage multiple DrayTek APs from a single interface.

 1. Connect VigorAP to PoE switch (via LAN port) with Ethernet cable. VigorAP will get the power from the switch directly. Then, connect the Vigor5v4tch to a Vigor router.

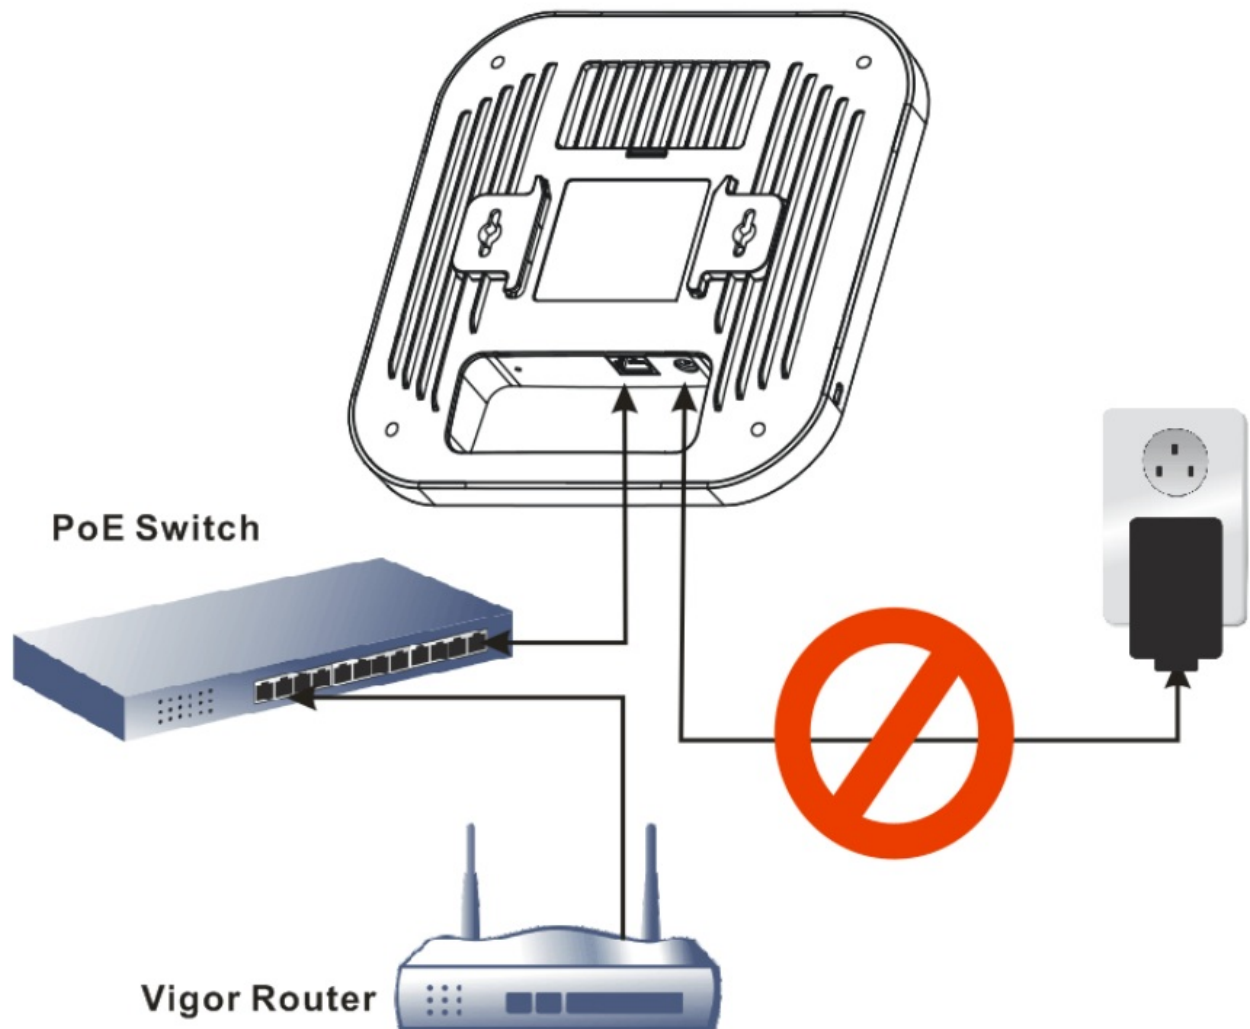

- Access to the web user interface of the Vigor router. Here we take Vigor2865 as an example. Open Central Management» AP» Status.

										Clear	Refresh
Index	Device Name	IP Address	SSID	Encryption	Ch.	WL Client	Version	Password			
1	AP810_007620482810	10.28.60.11						Password			
2	AP1060C_00507F22334	10.28.60.12						Password			

Note:



Green : Online



Red : Offline



Grey : Hidden SSID

Maximum support 20 APs.

When AP Devices connect via another intermediate router or switch, please check/unblock the following ports
UDP:67,68,4944 and **TCP:80** of the router/switch, thus AP status can be retrieved.

- Locate VigorAP 1060C. Click the IP address assigned by the Vigor router to access the web user interface of VigorAP 1060C.
- After entering the username and password (admin), the main screen will be displayed.

4.2 Web Configurations

This section will guide you to install the AP and make the configuration for VigorAP.

4.2.1 Connected As a Mesh Node (in Mesh Network)



1. Install VigorAP onto the ceiling.
2. As a mesh node, settings related to VigorAP 1060C must be configured by a remote Mesh Root (e.g., VigorAP 903) within the mesh network. The user must detect VigorAP 1060C via a Mesh Root to add it as a mesh node.

4.2.2 Connected As an Access

As an Access Point, VigorAP 1060C must be connected to a router and configured in AP (Access Point) / Range Extender mode.


1. Install VigorAP onto the ceiling.
2. Use a twisted-pair cable with RJ-45 plugs at both ends, and plug into the Ethernet device (e.g., Vigor router) and Ethernet port of VigorAP.



There are two methods to configure VigorAP.

Method 1:

 (a) First, open a web browser on your PC and type <https://192.168.1.2>. A pop-up window will open to ask for a username and password.

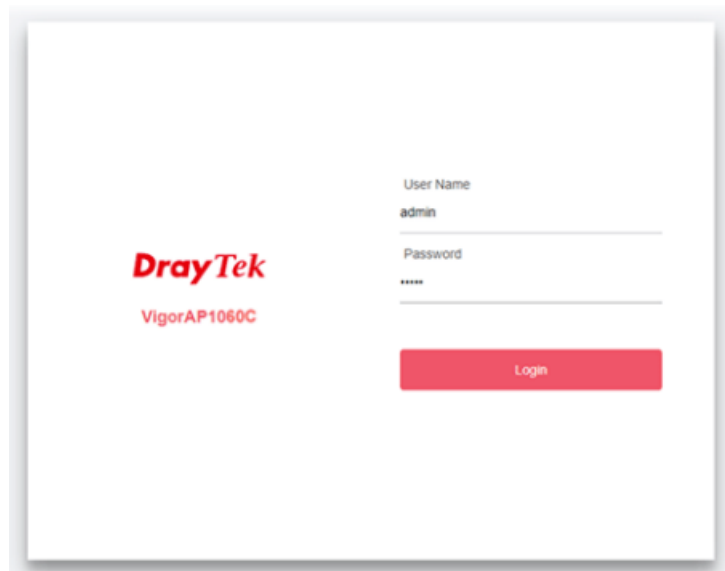


Note Note

You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be in the same subnet as the IP address of VigorAP 1060C.

- If there is no DHCP server on the network, then VigorAP 1060C will have an IP address of 192.168.1.2.
- If there is DHCP available on the network, then VigorAP 1060C will receive its IP address via the DHCP server.
- If you connect to VigorAP by wireless LAN, you could try to access the web user interface through <http://vigorap.com>.

 (b) After clicking Login, Quick Start Wizard for configuring wireless settings will appear as follows.

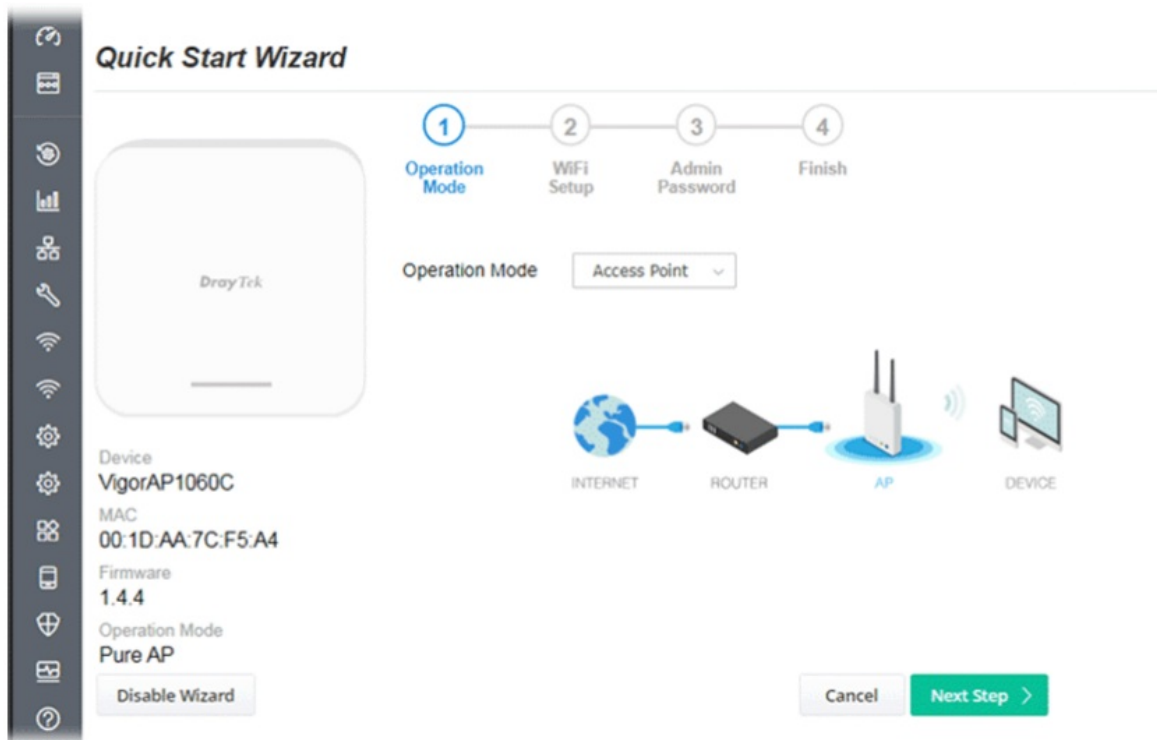

(c) Follow the on-screen steps to finish the network connection.

Method 2:


(a) Use a mobile phone to scan the QR code named with DrayTek Wireless App to download DrayTek Wireless APP.

	
WIFI:S:Draytek-F17F21;T:WPA;P:SE02UJRA7BGEN;;	https://www.dr...eless

(b) After downloading, run the APP.

(c) From the home page, click the Connect icon to access the Connect page. Next, press the QR code icon next to Scan QR Code on your phone screen to open the camera.

 Scan the QR code-named with Connect SSID to access the web user interface (configuration wizard) of VigorAP 1060C. (For iOS users, the SSID and the password will be shown first. Simply click the Connect button to access the web user interface of VigorAP.)

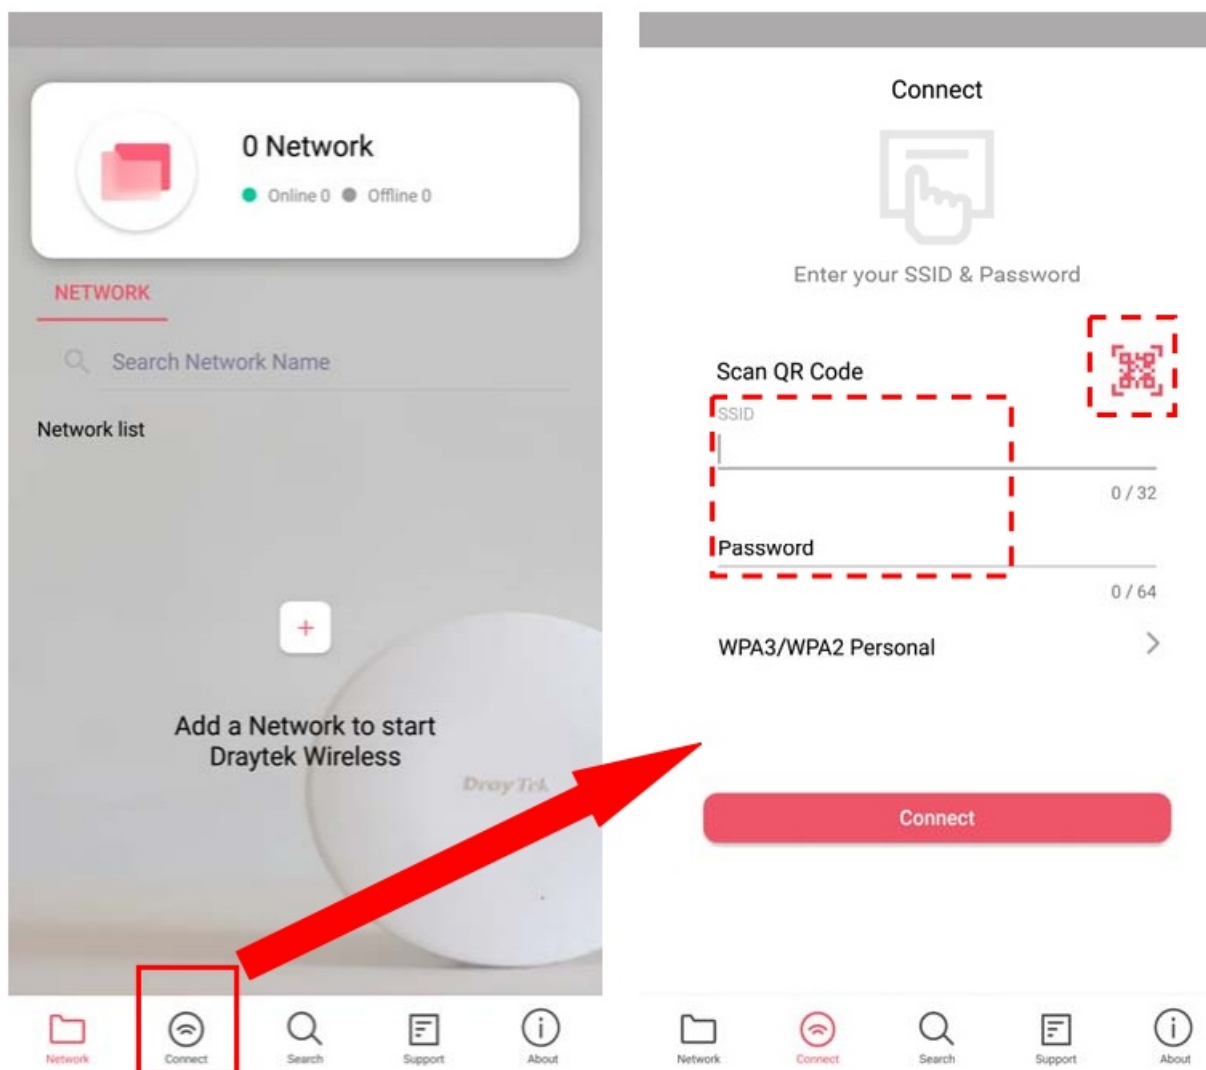

Customer Service

If the device cannot work correctly after trying many efforts, please contact your dealer/DrayTek for further help right away. For any questions, please feel free to send an e-mail to "support@draytek.com". Be a Registered Owner Web registration is preferred. You can register your Vigor device via <https://myvigor.draytek.com>. Firmware & Tools Updates Due to the continuous evolution of DrayTek technology, all devices will be regularly upgraded. Please consult the DrayTek website for more information on the newest firmware, tools, and documents. <https://www.draytek.com>

GPL Notice

This DrayTek product uses software partially or completely licensed under the terms of the GNU GENERAL PUBLIC LICENSE.

The author of the software does not provide any warranty. A Limited Warranty is offered on DrayTek products. This Limited Warranty does not cover any software applications or programs.

To download source codes please visit: <http://gplsource.draytek.com>

GNU GENERAL PUBLIC LICENSE: <https://gnu.org/licenses/gpl-2.0>

Version 2, June 1991 For any questions, please feel free to contact DrayTek technical support at support@draytek.com for further information..

Intellectual Property Rights (IPR) Information

Copyrights

© All rights reserved. This publication contains information that is protected by copyright. No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders.

Trademarks

The following trademarks are used in this document:

- Microsoft is a registered trademark of Microsoft Corp.
- Windows, Windows 8, 10, and Explorer are trademarks of Microsoft Corp.
- Apple and Mac OS have registered trademarks of Apple Inc.
- Other products may be trademarks or registered trademarks of their respective manufacturers.

Safety Instructions and Approval

Safety Instructions

- Read the installation guide thoroughly before you set up the device.
- The device is a complicated electronic unit that may be repaired only by authorized and qualified personnel. Do not try to open or repair the device yourself.
- Do not place the device in a damp or humid place, e.g. a bathroom.
- Do not stack the devices.
- The device should be used in a sheltered area, within a temperature range of 0 to +40 Celsius.
- Do not expose the device to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoor to prevent electronic shock hazards.
- Keep the package out of reach of children.
- When you want to dispose of the device, please follow local regulations on the conservation of the environment.

Warranty

We warrant to the original end-user (purchaser) that the device will be free from any defects in workmanship or materials for a period of two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary to restore the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects that do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.



Regulatory Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device may accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

USA Local Representative	Company name	ABP International Inc.
	Address	13988 Diplomat Drive Suite 180 Dallas TX 75234
	ZIP Code	75234
	Contact Person	Mr. Robert Messer
	E-mail	rmesser@abptech.com
	Tel.	1.97E+10

Declaration of Conformity

Hereby, DrayTek Corporation declares that the radio equipment type VigorAP 1060C is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.draytek.com.tw/ftp/VigorAP1060C/Document/CE/>

Manufacturer: DrayTek Corp.

Address: No. 26, Fishing Rd, Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan

Product: VigorAP 1060C

Frequency Information for Europe area:

2.4G WLAN	2412MHz – 2472 MHz, max. TX power: 19.86 dBm *1
5G WLAN	5150MHz – 5350 MHz, max. TX power: 22.85 dBm;



Requirements in AT/BE/BG/CZ/DZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/ CY/LV/LI/LT/ LU/HU/MT/ NL/NO/PL/PT/RO/SI/SK/TR/FI/SE/CH/HR. 5150MHz~5350MHz is for indoor use only. (*1: for 2.4G WLAN model; *2: for 5G WLAN model)

This product is designed for 2.4GHz and 5GHz WLAN networks throughout the EC region.



Declaration of Conformity

Hereby, DrayTek Corporation declares that the radio equipment type VigorAP 1060C is in compliance with Regulation SI 2017 No. 1206.

The full text of the UKCA Declaration of Conformity is available at the following internet address:

<https://www.draytek.com.tw/ftp/VigorAP1060C/Document/UKCA/>

Manufacturer: DrayTek Corp.

Address: No. 26, Fishing Rd, Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan

Product: VigorAP 1060C

Importer: SEG, 11 Capital Business Park, Borehamwood, Herts, WD6 1GW

Frequency Information for UK area: .

2.4G WLAN	2412MHz – 2472 MHz, max. TX power: 19.86dBm *1
5G WLAN	5150MHz – 5350 MHz, max. TX power: 22.85 dBm; 5470MHz – 5725 MHz, max. TX power: 28.84 dBm *2



Requirements in UK. 5150MHz – 5350MHz is for indoor use only.

(*1: for 2.4G WLAN model; *2: for 5G WLAN model)

This product is designed for 2.4GHz and 5GHz WLAN network use in the UK & Ireland.

Caution

- Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This equipment complies with CE RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.
- Operations in the 5.15-5.35GHz band are restricted to indoor usage only.

Documents / Resources

 <p>DrayTek VigorAP 1060C 802.11n Ceiling Mount AP</p> <p>QUICK START GUIDE</p> <p>VP 1.0</p>	<p>DrayTek VigorAP 1060C Wireless Access Point [pdf] User Guide</p> <p>VigorAP 1060C, Wireless Access Point, Access Point, VigorAP 1060C, Wireless AP</p>
---	---

References

- [🌐 DrayTek File Server](#)
- [🐧 GNU General Public License v2.0 - GNU Project - Free Software Foundation](#)
- [🌐 MyVigor - DrayTek](#)
- [🔴 Home | DrayTek](#)
- [🔴 Index of /](#)
- [🔴 Index of /](#)

Manuals+.